

User manual

Massage Chair : JP-4000

Category: machinery and appliances
general designation: household electric massage chair

Refer to 10-15 pages how to assemble each parts on the massage chair.



Before use

• IMPORTANT SAFETY INSTRUCTIONS	2
• Names and Functions	8
• Setup and assembling	10
• Before starting massage every time	16

How to use

• About the massage chair 2 Modes	18
• Adjust the reclining and footrest angle / Usage of the arm part	20
• Massage with course (Recommendation / Auto course)	22
• About the end of Massage	28
• Manual massage	30
• Air massage	35
• Fir technique massage and air massage together	37
• Fatigue Level	38
• Situation	39
• Course history	40
• Heater ON/OFF	41
• Foot roller massage	42
• Volume control of operation sound	43
• Settings (Language/Auto reclining/Screen brightness/Bluetooth reset)	44
• Usage of BLUETOOTH speaker	46
• About User Customized Mode	50
• To set the child lock	58

Maintenance/Q&A

• Maintenance and storage	59
• Q&A	61

Customer service

• Trouble shooting	63
• Product Specifications	66



Purpose of use, effect-efficacy

Substitution of massage for home-use



- Thank you very much for purchasing Fujiiryoki massage chair.
- Carefully read this operation manual before use and only use as directed.
- Please read the safety precautions on pages 2-7 before use.
- Keep this operation manual where it will be readily available for future referral.
- Please recycle the outer packaging material where possible.

IMPORTANT SAFETY INSTRUCTIONS



- Read these "Important Safety Instructions" before use and use this product properly
- These important safety instructions are prescribed to ensure correct usage of the product, and to prevent injury and damage to the user and other persons.
- Followings are the display and contents.
- Please keep to the regulations as these are important instructions for your safety.

 DANGER	Improper usage may result in serious injury or death.
 WARNING	Improper usage may result in injury or damage to property.*

*Property refers to houses, household belongings, domestic animals and pets.

	<p>⊘ Prohibited actions</p> <p>The prohibited action is illustrated inside the illustration (for example, the illustration on the left refers to "Prohibiting disassembling")</p>
	<p>● Directives, actions which are compulsory</p> <p>The prohibited action is illustrated inside the illustration (for example, the illustration on the left refers to "unplugging the power plug")</p>

- Always keep this operation manual where it will be readily available for referral.
- Attention: When disposing of this product and/or its accessories, do so in accordance with local laws and regulations. For details, please refer to your local authority.

 DANGER	
	<p>The Because this equipment has a built-in heater and the surface becomes hot, person who are not sensitive to heat should pay attention to use. Pay full attention when it falls under the following.</p> <ul style="list-style-type: none"> •elderly, ailing person, those who cannot operate by themselves •persons who took medicine that cause drowsiness(sleeping pills, cold medicine) •persons with heavy drinking, heavy tiredness •persons with hematogenous disorder (diabetes, etc.) •persons who recieve a note from the doctor •people with weak temperature sense. <p>There is a risk of low temperature burns, dehydration.</p>
	<p>The following persons must consult a medical physician before using this product.</p> <ul style="list-style-type: none"> •Persons using a medical electronic device embedded in the body such as a pacemaker susceptible to the electromagnetic disturbances. •persons with malignant tumors. •persons with heart diseases. •persons who are pregnancy or those immediately after childbirth. •persons who suffer from paresthesia related to peripheral circulatory disturbance due to diabetes etc. •persons with wounds on their skin. •persons in need of repose. •persons with Temperature sensory loss. •persons with body temperatures exceeding 38°C. (when strong acute inflammation symptoms, malaise, hills, blood pressure fluctuations are observed, when debilitated) •persons with herniated discs. •a person with tendovaginitis. •persons who suffer from osteoporosis, spinal column fractures, or acute pains. •persons with abnormalities in the spine, or those whose spines are bent. •persons who feel an abnormality on the body not prescribed above, persons in treatment by a doctor.



DANGER

	<p>If the chair stops moving or any abnormalities occur, unplug the power plug and contact the point of purchase for an inspection/repairs. Electrification, short circuits and fire may occur.</p>
	<p>Take care of the movements of the knead balls when massaging around neck. Avoid excessive massaging or massaging the front of the neck. Accidents or injuries may occur.</p>
	<p>When reclining or lowering the footrest, always check underneath and surroundings the footrest for people, pets, and other items. Accidents or injuries may occur.</p>
	<p>When reclining or lowering the footrest, be careful not to get hands, fingers, feet, head caught underneath the footrest or backrest. ●underneath the chair itself ●backrest, seat, clearance of armrest ●clearance of footrest, seat, armrest ●underneath the footrest, the back of footrest ●clearance between arm and armrest ●behind the backrest Accidents or injuries may occur.</p>
	<p>Before use, check underneath the back pad to make sure that there are no rips or tears in the cover cloth of the seat back. (should there be any rips or tears, no matter how small, immediately discontinue use, disconnect the power cord, and ask for repairs to be conducted). Continued use with rips or tears in the cloth of the seat back may cause electric shocks or injuries.</p>
	<p>Always unplug this appliance from the electrical outlet immediately after using and before cleaning.</p>
	<p>Not long term use of heater and same spot on the body If heat is used on the same spot for a long time, low temperature burns may occur even if the temperature is comparatively low in 40-60°C.</p> <div><p>About low temperature burn</p><ul style="list-style-type: none">●low temperature burn effect the deep part of the skin and show red specks or blisters.●In case red specks or blisters are found, consult a medical physician immediately.</div>
	<p>The following persons are strongly recommended not to use this product. Certain prohibited from receiving a massage by a medical physician. (for example those suffering from thrombosis, severe aneurysm, acute varicose veins, various kinds of dermatitis and skin infections (including inflammations of subcutaneous tissue), etc.)</p>
	<p>Do not remove, rip or cut the cover of the chair(backrest, footrest, armrest) on purpose. Never use the chair with the cover removed or torn as clothes and hair may get caught in the knead balls.</p>
	<p>Do not use the chair other than on the designated voltage. Fire or electrification may occur.</p>
	<p>Do not use the chair when the power cord or its plug is damaged, or when the receptacle is loose. Contact your point of purchase for repairs if the power cord or power plug are damaged in anyway. Continued usage may result in electric shocks, shortage, or even fire.</p>
	<p>Surely plug the power plug to the root and keep away from the dust. Doing so may cause damage, fire and electrification.</p>
	<p>Do not allow unattended children or persons unable to declare their own intentions to use this chair. Do not allow infants near the chair. Electrification or injuries may occur.</p>
	<p>Do not allow children to play or get on the chair. Accidents or injuries may occur.</p>
	<p>Do not connect or disconnect the power plug with wet hands. Electrification may occur.</p>

IMPORTANT SAFETY INSTRUCTIONS



DANGER

	Never use pins or other metallic fasteners with this appliance.
	Carefully examine the covering before each use. Discard the appliance if the covering shows any sign of deterioration, such as checking, blistering, or cracking.
	Do not use or store in the bathrooms or places of high humidity or moisture. Electrification, fire, accidents, and moulding may occur.
	Never remodel or decompose/repair by yourself. Fire or injury due to abnormal action may occur.



WARNING

	Usage of this product should be limited to 30 minutes for each use. Continual use on the same part of the body should be limited to 5 minutes. Prolonged use may damage muscles and nerves.(Only use for 30 minutes per day.)
	The following persons should consult a medical physician before using this product. ●persons whose muscles have become weak due to increasing age, and those who are of slim build. ●persons suffering from lower back pain caused by bones or internal organs. ●persons easily bruised, susceptible to sprains. ●persons who suffer from intense motion sickness. ●persons who have undergone internal organ or heart operations.
	If any rashes, reddening of the skin, itches or similar symptoms appear after using this product, immediately stop using and consult a physician. Accident and ill health may occur.
	An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts. To disconnect, turn all controls to the off position, then remove plug from outlet. This may result in accidents due to children's mischief.
	Use the chair on a level surface. Do not use outdoors. Damage or accidents may occur.
	Make sure operation buttons and timers are operating normally before use. Accidents or injury may occur.
	Read the operation manual once again and confirm the product is operating normally before using the chair after a prolonged period of non-use. Accidents or injury may occur.
	Confirm no items get caught in the chair (backrest, footrest, armrest) before use. Never drop or insert any object into any opening. Accidents or injury may occur.
	Do not place feet or hands on the footrest when the footrest is retracting. Accidents or injury may occur.
	When any physical abnormalities appear or are felt during operation, stop using the product immediately and consult a physician.
	Sit down slowly after confirming the knead balls are located at the storage position. Accidents or injury may occur.
	Use weak stimulation massage when you start to use. Injury may occur.



WARNING



Make sure the ground terminal is installed. Damages or electrification may occur when ground terminal is not installed.



Turn the power switch OFF and unplug the power cord immediately in times of power shortages. When power is restored accidents may occur.

Unplug the power plug by holding the actual power plug and not the cord. This may cause electrification, short circuits, or fire.

Unplug the power plug when not using the chair.
This may cause a fire due to insulation degradation by dust or humidity.

When maintaining the chair always unplug the power cord. This may cause electrification or injury.



Never operate the appliance with the air openings blocked.
Keep the air openings free of lint, hair, and the like.

Never drop or insert any object into any opening.

To disconnect, turn all controls to the off position, then remove plug from outlet.

The appliance is intended for household use.

Temperatures sufficiently high to cause burns may occur regardless of the control setting. Do not use on an infant or invalid or on a sleeping or unconscious person. Do not use on insensitive skin or on a person with poor blood circulation. Check the skin in contact with the heated area of the appliance frequently to reduce the risk of blistering.

Do Not Crush - Avoid sharp folds.

Do not damage the power cord or power plug.

- Do not hurt •Do not damage •Do not process •unreasonably bend or pull.
- Do not twist •Do not tie •Do not place heavy items on the power cord. •Do not get the power cord caught, especially when moving the chair.

Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.

Continued usage may result in electric shocks, shortage, or even fire.

Do not use immediately after eating or consuming alcohol. Nausea, illness, accidents or injury may occur.

Do not close to stoves or other sources of fire, nor smoke whilst using the chair. Do not use on heated carpets or other heating equipment. Do not operate under blanket or pillow. Excessive heating can occur and cause fire, Electric shock, or injury to persons. Keep the cord away from heated surfaces. This may cause fire.

Do not stand on the seat, or get on the seat back, footrest, arm or shoulder portion of the chair. The user or chair may rollover and injury or accidents may result.

Do not stand or sit down on upper part of the backrest, the front of the seat or on the footrest when the chair is reclining. The user or chair may rollover and injury or accidents may result.

Do not try to sit or get up from the chair when the chair is reclining or the footrest is elevated. The user or chair may rollover and injury or accidents may result.

IMPORTANT SAFETY INSTRUCTIONS



WARNING



Do not use accessories other than those which accompany the chair. Doing so may cause product malfunction.

Do not use the hand/arm massage whilst wearing watches, rings, fake fingernail or bracelets. This may cause injury.

Do not use the chair whilst wearing earrings, necklaces, scarves, or other ornaments. This may cause injury.

Do not use the chair whilst wearing hard objects on the head, such as hair ornaments. This may cause injury.

Do not use the thigh or hip massage with hard objects in pockets. This may cause accidents or injury.

Do not use while naked. Direct massages on the naked body may damage the skin.

Do not use on the elbow, knee, head, abdomen areas. Do not get hands or feet caught in the knead balls. Injuries may occur.

Do not pull out the power cord, or turn off the power switch whilst using the chair. This may cause accidents or injury.

Do not sleep whilst using the chair. This may cause ill health or injury.

Do not move the chair while people or items are on the chair. Damage or injuries may occur.

Make sure no more than 1 person is on the chair at any one time. Doing so may result in damage to the chair or injury.

Do not wipe with benzine, paint thinner or alcohol, nor spray with any pharmaceutical sprays. This may cause fire or electrification.

Not to be used for purposes other than massage purposes. This may cause damage or accidents.

Do not use other therapeutic equipments whilst using this product. This may cause ill health or accidents.

Do not haul the chair itself or move with the casters on the floor where it easily gets scratches.

Do not overturn the chair or subject the chair to any strong shocks. Damage or injury may occur.

Do not hit toes to the foot rollers. Injury may occur.

Do not operate where aerosol (spray) products are being used or where oxygen is being administered.

Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

Do not carry this appliance by supply cord or use cord as a handle.

Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.

Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.



WARNING



Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.

Keep the cord away from heated surfaces.

Use heated surfaces carefully. May cause serious burns. Do not use over insensitive skin areas or in the presence of poor circulation. The unattended use of heat by children or incapacitated persons may be dangerous.

Keep children away from extended foot support, back support (or other similar parts).

Connect this appliance to a properly grounded outlet only. See Grounding Instructions.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision

Please do not listen at high volume.

Listening at a high volume for a long time may damage your hearing.


Do not use outdoors.

Keep long hair away from massager while in use.


Names and Functions

Chair


Front side

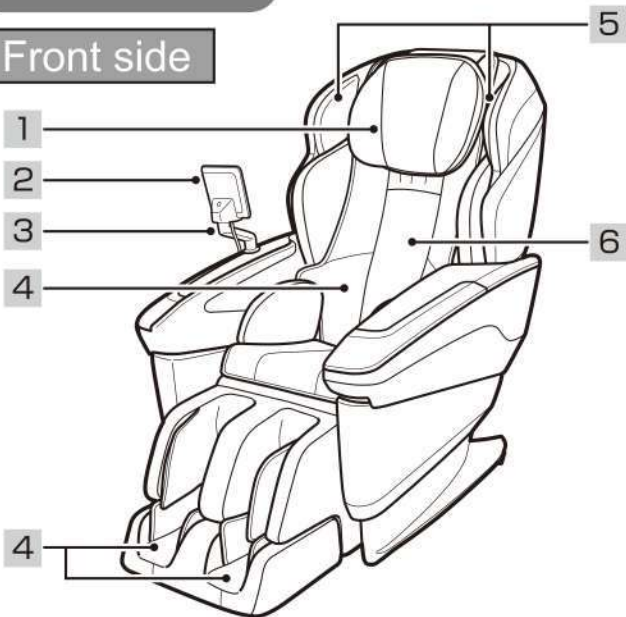

Rear side

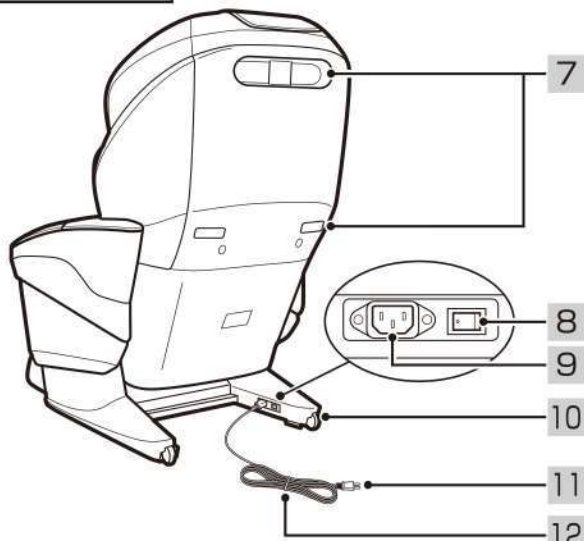

Massage position

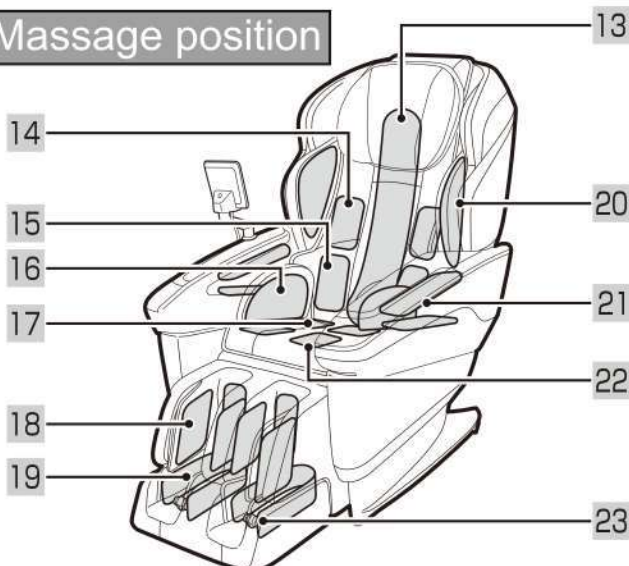

Front side

- 1 Pillow
Turn back the pillow pad during massage
- 2 Remote control
- 3 Remote control stand
- 4 Heat
Built-in the back, sole of the feet
- 5 BLUETOOTH speaker
Enjoy music through BLUETOOTH.
- 6 Back pad
Slowly lean against the back pad

Rear side


- 7 Handle
- 8 Power switch
Turn the power switch OFF after use
- 9 Inlet (power cord plug-in port)
- 10 Caster
- 11 Power plug
- 12 Power cord









Massage position

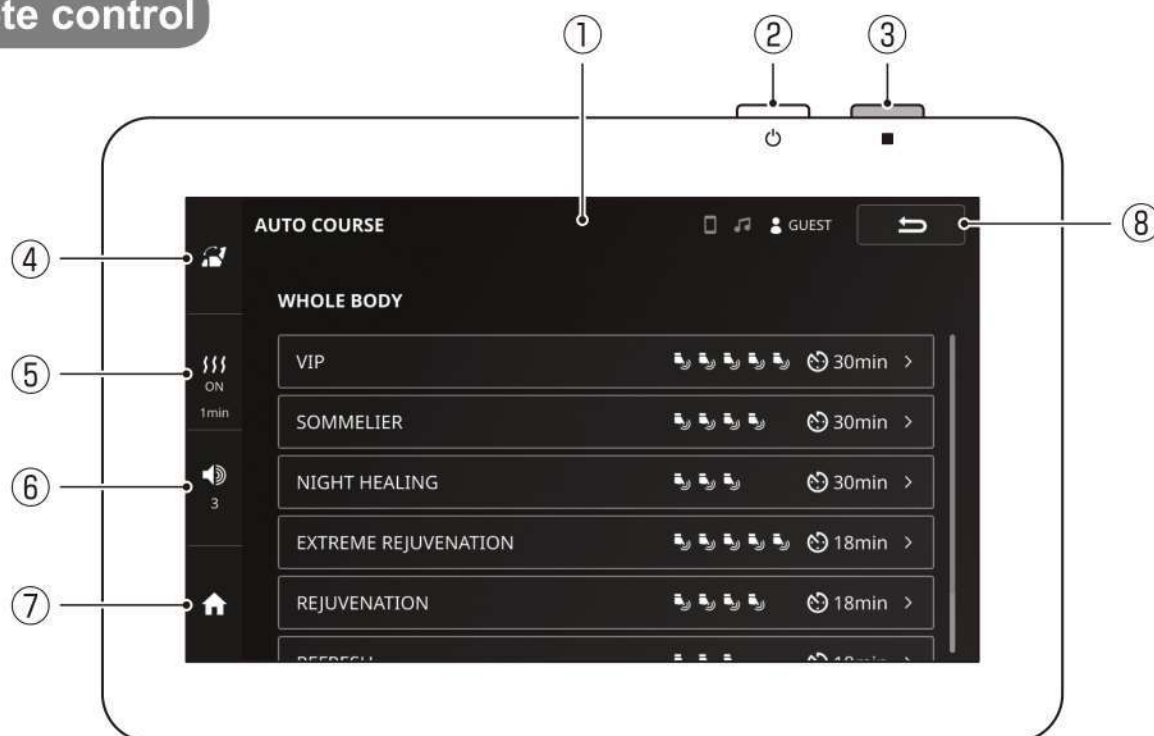- 13 Backrest
Massage whole the back area of the body
- 14 ~ 22 Air massage for each body part.

14 back	15 waist	16 pelvis
17 hip	18 calf	19 ankle
20 shoulder	21 arm	22 thigh
- 23 Foot roller
Roller massage for sole of the feet.

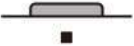Remote control



①		LCD screen (touch panel)	Operate by touching or scrolling with your finger. When the above figure is shown, scrolling will display the menu hidden at the bottom. (Example: Automatic course selection screen)
②		Power button	Turns the remote control power on and off. Taping this button during a massage will end the massage unit and return the rice balls to the stowed position.
③		Emergency stop button	Stops all operations and exhausts the air in the air bag. (Tap to stop massage immediately.)
④		Reclining adjustment button	Adjusts the angle of the backrest/leg section and the length of the legs.
⑤		Heater button	Turns the heater on/off.
⑥		Volume control button	Adjusts the volume of operation sounds.
⑦		Home button	Massage stops and returns to the menu screen.
⑧		Back button	Returns to the menu screen.

Setup and assembling

Check the Main unit and accessories




WARNING

Do not use accessories other than those which accompany the chair. Doing so may cause product malfunction.


User manual documents

- User manual
- Assembling leaflets


● Whole

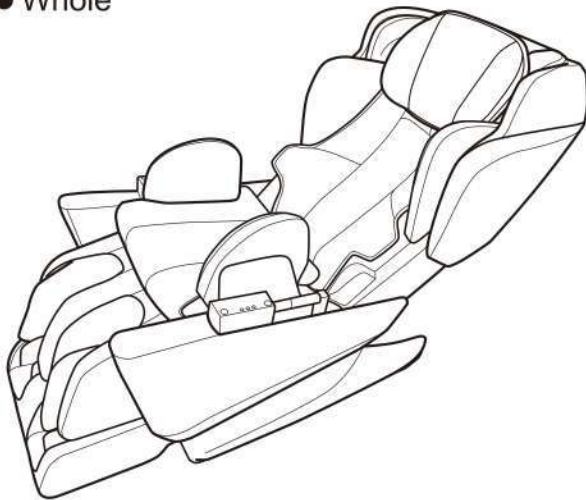

● Arm unit (left)(right)

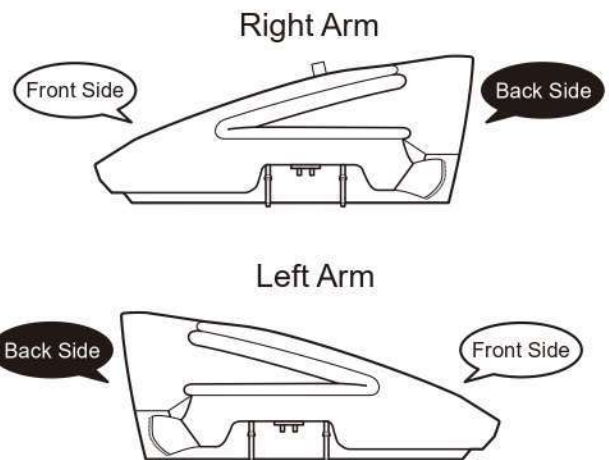

● Remote control stand ● Power cord

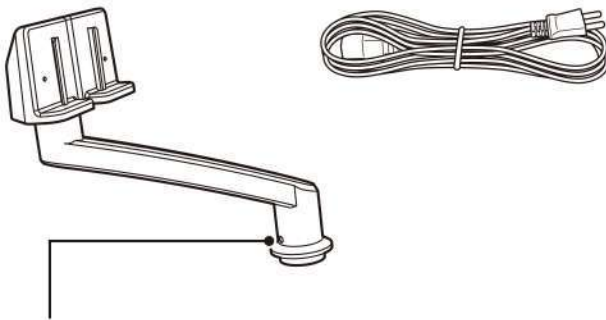

● Screw: 1

It is mounted on a remote control stand.


● Hex wrench



● Caution Tag



For a correct installation, make sure to check the front/back and left/right directions of the arm unit.

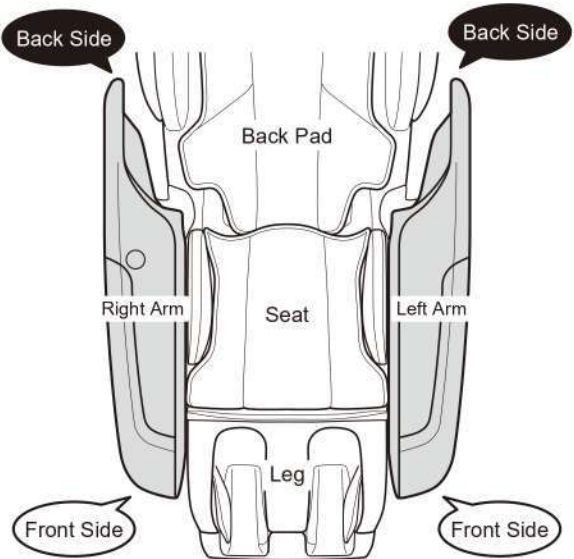

Massage chair view from above

Deciding the setup place of whole unit

DANGER

Do not use or store in the bathrooms or places of high humidity or moisture. Electrification, fire, accidents, and moulding may occur.


WARNING

Use the chair on a level surface. Do not use outdoors. Damage or accidents may occur.

Do not close to stoves or other sources of fire, nor smoke whilst using the chair. Do not use on heated carpets or other heating equipment. Do not operate under blanket or pillow. Excessive heating can occur and cause fire, Electric shock, or injury to persons. Keep the cord away from heated surfaces. This may cause fire.

It should be installed in a flat surface where there is 50cm space from behind for reclining.

- If power supply is switched ON, then body automatically moves backwards and foot rest rises till it reaches the standby position. It is good to have the main unit surrounding with more than 30cm space from front and 50cm space from behind.
- During reclining, even the foot rest raises.
- Do not setup the whole unit in places where there is direct sunlight every day, or near heat appliances or near high temperature. Failure to do so may lead to color change or quality degrading in main unit.

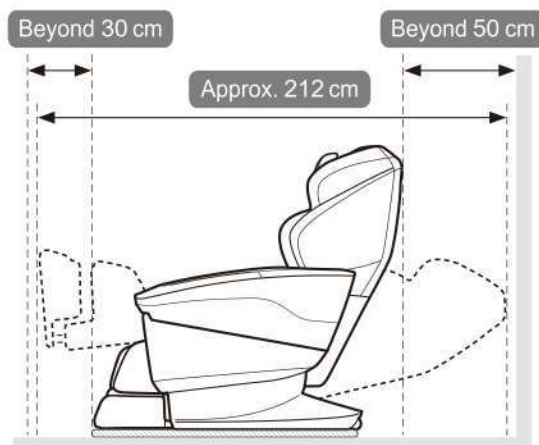

Whole Setup

WARNING


Do not move the chair while people or items are on the chair. Damage or injuries may occur.
Do not haul the chair itself or move with the casters on the floor where it easily gets scratches.
Do not pull the power chord or remote control chord with leg or wrap with caster.
Failure to do so may cause injury.

Hold the footrest and backrest handles and lift up to carry (refer to the figure below)

- Since it is a heavyweight unit, it should be carried by 2 or more persons.
- Watch your steps carefully and lower it slowly.



Frontage should be **72cm** or more (70cm width to carry the whole + 2cm width for protection)

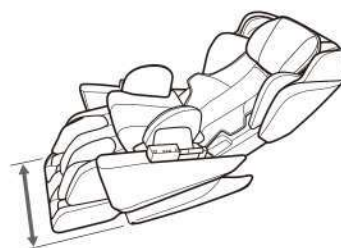


Setup and assembling

Installation of arm unit ※Please install on both sides in the same way.


1. Move the mounting position of the arm unit to the front of the main body (①) and insert the convex part of the arm unit into the hole (②) of the mounting position.

- Install the arm unit while the back rest is in a reclined position
- Please insert firmly. Otherwise, there is risk of air leakage or falling.
- Please install on both sides in the same way.

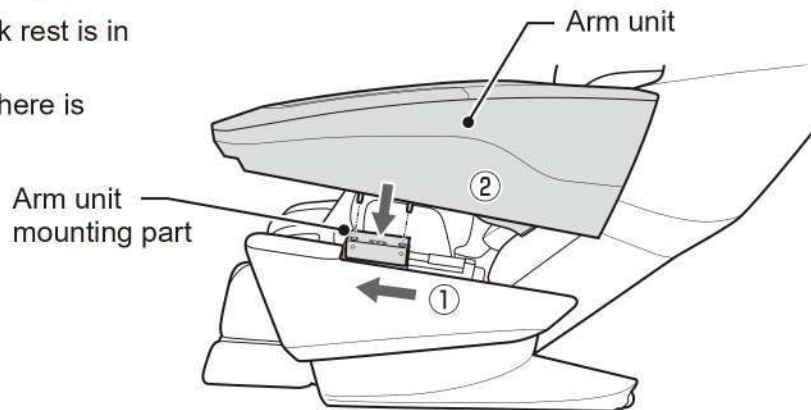


2. Align and close the fastener on the main body backrest and the arm unit one.

- Please install on both sides in the same way.

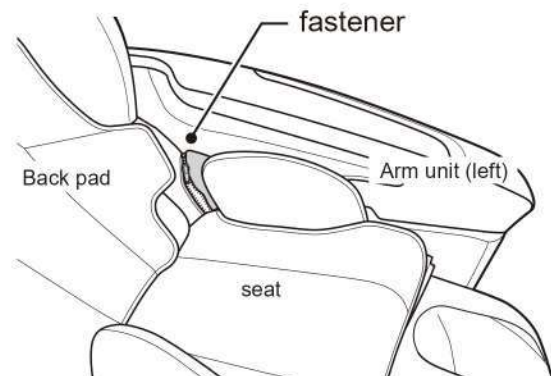

To remove the arm unit

1. Recline the backrest and open the fastener (①) holding arm unit and backrest.
2. Slide the arm unit towards the backrest, push downwards the stopper that is in between the arm unit and seat (②) and release the lock.
3. Move the arm unit towards the legs part, push the stopper (③) downwards and release the lock.
4. Lift and remove the arm unit.

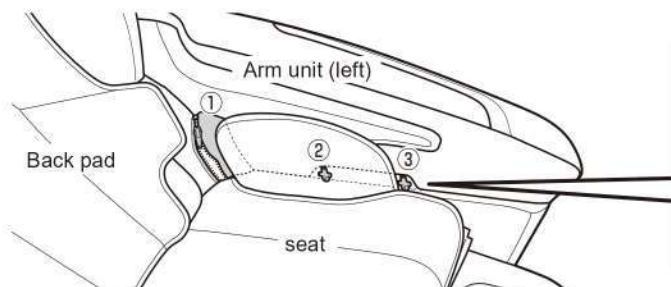

Stopper (②,③)




Press this area with your fingers and unlock it.

Remote stand set up

1. Insert the remote control stand into the remote control stand attachment on the arm unit (for right side) , and secure it in place using the hexagonal wrench.

- Fix the stand firmly.
Failure to do so may cause the remote control stand to come off, resulting in malfunction or injury.
If not firmly attached, the remote control stand may come off, resulting in malfunction or injury.

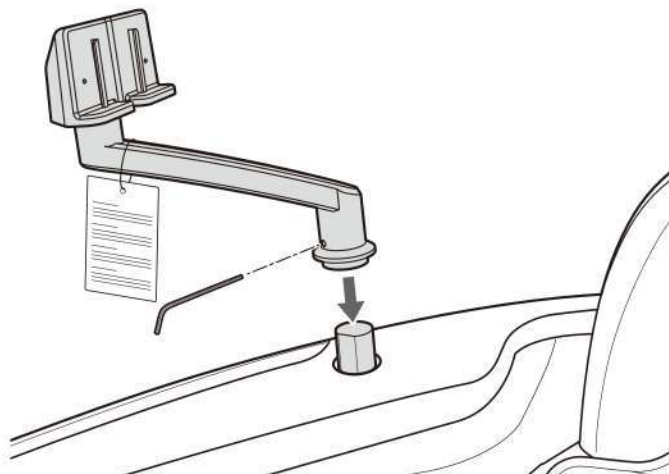


Fixing the Remote control

●Fixing method

Align the concave part on the back of the remote control with the convex part of the remote control stand, and install it by inserting it from above.


●Removing method

Remote control should be pulled out from the top.

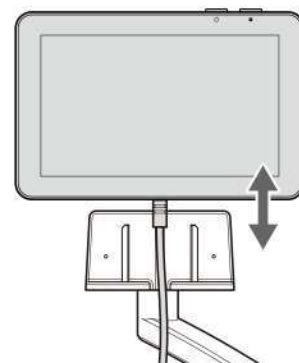

●Angle adjustment of remote control stand


The remote control stand is angle-adjustable.

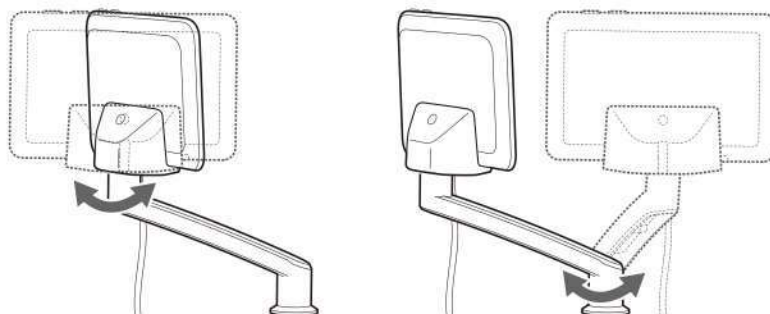

Setup and assembling

Method to remove the pillow and adjustment of back pad

1. The pillow is fixed to the backrest with velcro tape.

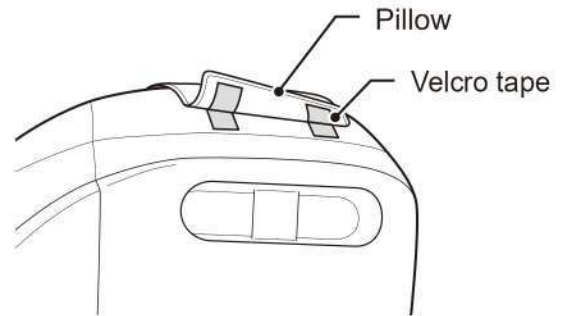


【Rear view】

2. Adjust the back pad for your preference.


- Cap Back pad can be used as heater.
Refer to "Position the back pad (heater part)" for more details. (P.41)

If you want to attach the back pad firmly, fix the packrest and back pad with fastener.

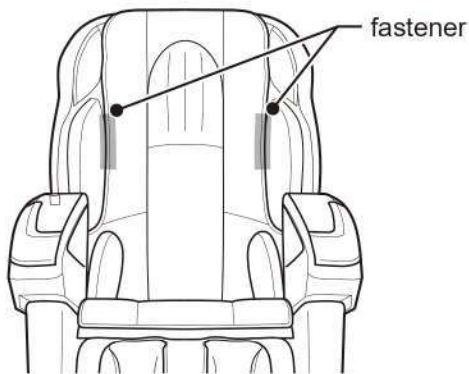

Center of back pad is removable. You can feel stronger massage when you remove it.

- ① Raise the fastener on the back of the back pad.
- ② Remove the velcro on the back of the back pad.

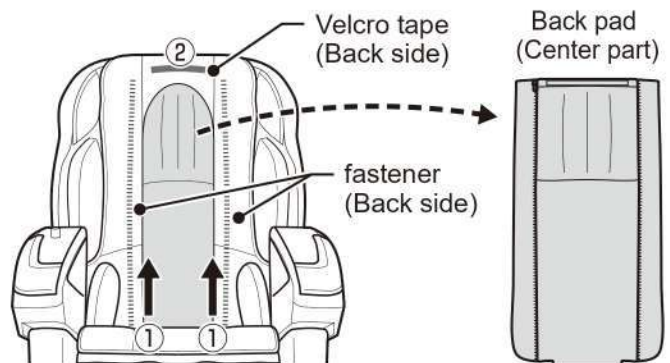


Mount the power cord

DANGER

Do not use the chair other than on the designated voltage. Fire or electrification may occur. Insert the power plug and connector to the root without fail and do not allow dust to adhere. Failed to do so may cause electric shock, short circuit, or ignition. Do not use damaged power plug or power cord. It may cause electric shock, short circuit, or fire. If it is damaged, contact your retailer or our customer care for repair.

1. Insert the connector of the power cord into the inlet (power cord insertion port) at the lower right of the rear side of the main body.

- Insert it firmly.
- Do not use any electrical cables other than the supplied cord.
- Check that the power cord, remote control cord, or power plug is not damaged or that there is no dust on the power plug.

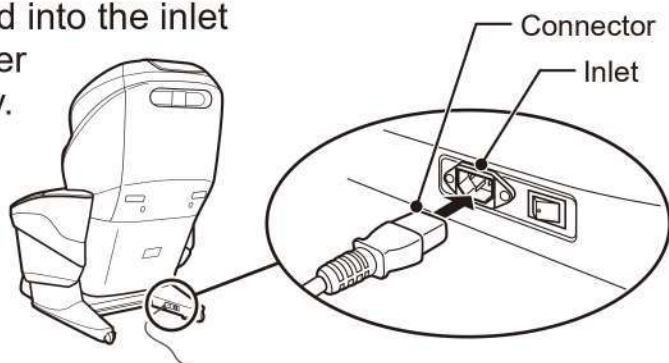

Grounding instructions

DANGER


Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

WARNING

Ground should be installed firmly. When the ground is not installed, it may cause electric shock at the time of trouble and short circuit.

※ This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is quipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Grounding methods

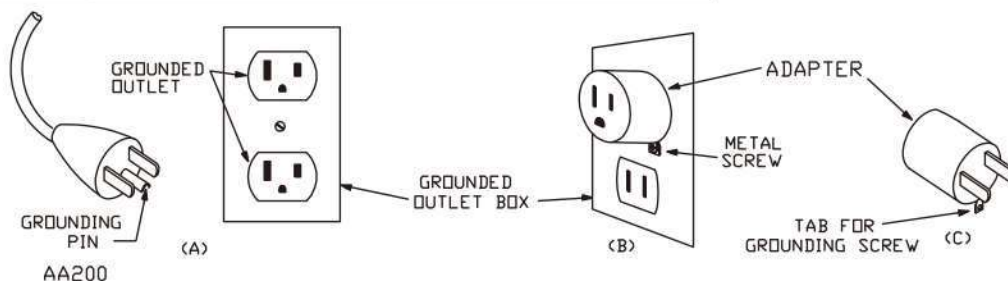

※ This product is for use on a nominal 120-V circuit, and has a grounding plug that looks like the plug illustrated in sketch A in Figure 86.1. A temporary adapter that looks like the adapter illustrated in sketches B and C may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (sketch A) can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.

When there is no ground terminal in the power outlet


Before purchase, discuss with electric shop, dealer and do the grounding (D-Class<Class-D> installation work/cost).

Before starting massage every time

Check around the chair

Check the surroundings without fail

- Check to make sure that there is nobody, no pet and nothing ahead behind the chair and under the footrest.

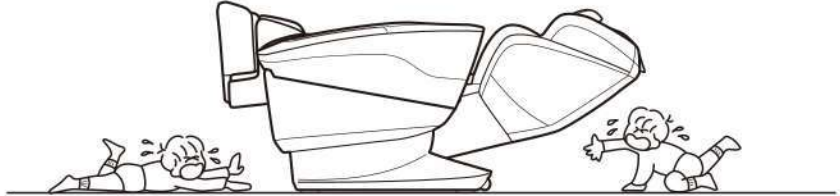


Switch on the power

DANGER

Do not use the chair other than on the designated voltage. Fire or electrification may occur.
Insert the power plug firmly so that no dust is accumulated. Failed to do so may cause electric shock, short circuit, or ignition.
Do not use damaged power plug or power cord. It may cause electric shock, short circuit, or fire.
If it is damaged, contact your retailer or our customer care for repair.


1. Insert the power cord plug in the receptacle.

- Check that there is no damage in the power cord, remote controller cord, and the power cord plug. And there is no dust accumulated in the power cord plug.

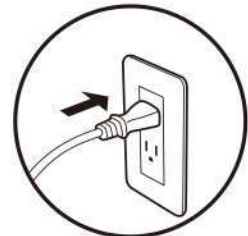

2. Switch "ON" power of main body.


- The power switch is behind the main body on the right bottom.

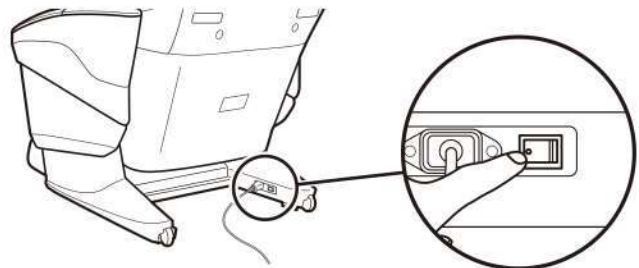

3. Tap the "power button" on the remote control to turn on the power.

- Regular screen is displayed.
- The seat back is reclined and footrest is raised till standby position automatically.

- Cannot operate the device unless the menu screen appears after Taping the "Power button".

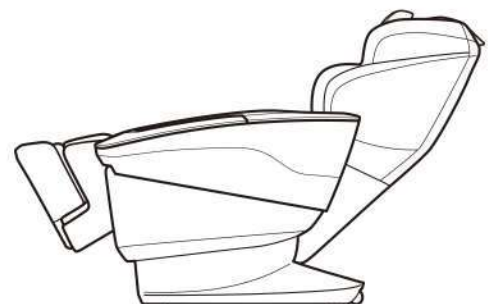

Standby position

Check the main body

1. Check for torn on the cover cloth.



DANGER

Before use, hold the back pad and make sure that there is no tear on the cover cloth of the backrest and on the other parts. (Should there be any tear, no matter how small it is, discontinue using the chair immediately. Disconnect the power cord plug, and ask for repair.) Continued use with the torn cloth may cause electric shock or any hazard on the body.

2. Check for trapping of foreign substance to the main body.



WARNING

Before use, check that there is no foreign substance trapped on to the main body (Backrest, footrest, armrest).
Failed to do so may cause accident or injury.

3. Check whether the knead ball is in the retracted position.

- If the massage unit is not in the stowed position, Tap the "power button" to return it to the stowed position.



WARNING

Before seated on the chair, check whether the knead balls are in the retracting position. Failed to do so may cause accident and injury.

4. Check whether the footrest is in completely lowered



WARNING

Do not get on and off the chair at the time of reclining or when the footrest is raised. The chair may overturn and the user may fall down and hurt himself/herself.

About the massage chair 2 Modes

This product has 2 modes available for use: Guest Mode, User Customized Mode.

For the functions available in each mode, please refer to the table on the specification page. (P67)

Guest Mode (P20~49)

- After the power is turned on, the menu screen will be displayed and it will automatically enter Guest Mode.
- In Guest Mode, massage can be performed directly without registering the customized information in advance. Every time it is used, the machine will perform reclining adjustment and body shape detection.

In User Customized Mode, as long as you have registered the customized information, you can omit reclining adjustment and body shape detection.

User Customized Mode (P50~57)

- User information registration/customize can be done for up to 2 users.
- The user can register customized information when uses the device for the first time. After the registration is complete, the machine will start the automatic course according to the registered customized information. Body shape detection and adjustment can be skipped.

If you want to switch from User Customized Mode to other modes, please restart the power before operation.

Registrable customized information (User Customized Mode)

Customize back line

Shoulder / waist position information

Shoulder / waist position information
Select the massage point of the automatic course.

S-curve detection information

In order to make the massage chair massage evenly along the back, this function will collect back line information. The detected back line data can also be further edited according to preferences.

Customize reclining

Reclining information

It is possible to register information of the preferred backrest angle, leg angle / leg length.

Customize airbags pressure

Air pressure information

After the pre-setting, it is possible to register information of the preferred air massage intensity.

Customized information first registration example




Example of each massage operation (Auto Mode course)

Guest Mode



User Customized Mode

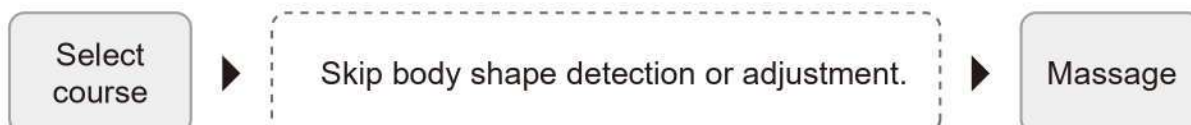

Adjust the reclining and footrest angle / Usage of the arm part

! DANGER


Check to make sure that there is nobody, no pet and nothing ahead around the chair (back, front, side, and bottom part of main body) when reclined or footrest is moved. Failed to do so may cause accident or injury or damage of house holding.

! WARNING

Do not place your leg or hand in the footrest adjustable place, when footrest is adjusted.
Do not attempt to ride on the front portion of footrest or seat pad at the time of reclination.
Do not get on and off the chair at the time of reclining or when the footrest is raised.

Adjust the footrest angle and length

Tap the "Reclining Button" to display the "Reclining Adjustment Screen".

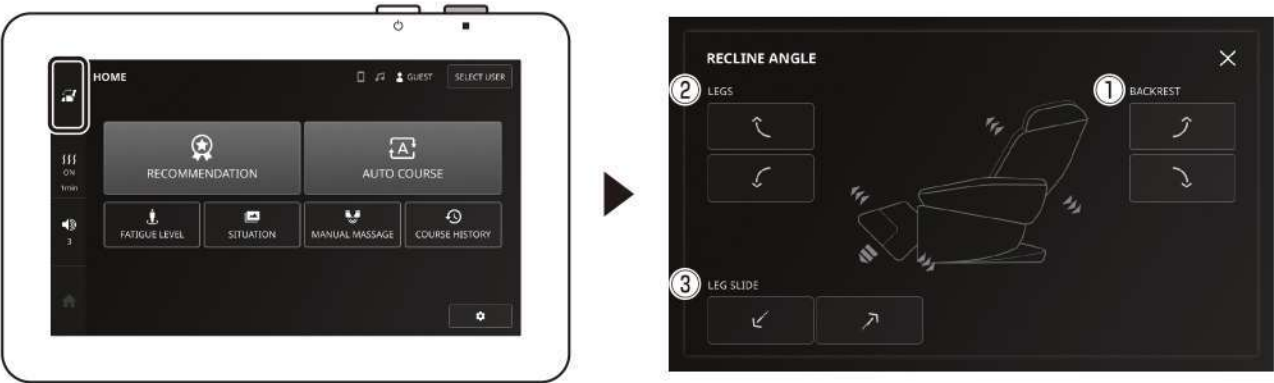


①	Adjust the reclining angleAdjust the angle of the legs.	
②	Adjusts the angle of the legs.	
③	Adjust the length of the legs.	

Length adjustment of foot section

Stretch the sole and adjust the footrest length.

- Sole can be stretched or contracted by the spring.
Press it with the leg.
- When returning the footrest to its original position, avoid applying force to the soles of the feet. If the footrest is moved back to position when the springs are extended, the sole part might hit the floor and then it won't be possible to smoothly put the footrest back into position.

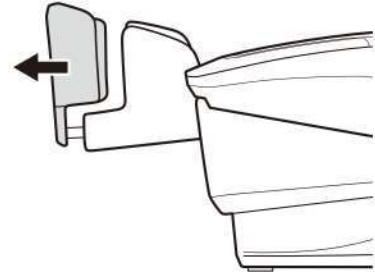


Usage of the arm part

WARNING

Do not use the hand/arm massage whilst wearing watches, rings, fake fingernail or bracelets.
This may cause injury.


Insert hand with fingers extended and palm facing down.

- Do not insert your hand vertically or with bent fingers.

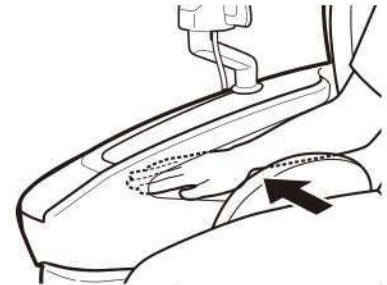

If you want to adjust the position of the arm (arm unit)


- You can adjust the position by sliding the arm part when the backrest is tilted. After the backrest is tilted, slide the arm part towards the backrest (manual).
- The larger the tilt angle of the backrest, the further the arm can be slid to the side of the back cushion. When the backrest is in the stowed position (completely upright), the arm cannot be slid.

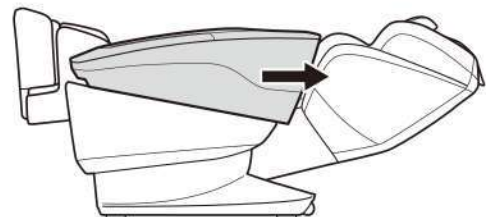

Massage with course (RECOMMENDATION / AUTO COURSE)

Introduction

- Please set the power switch of the main body to "ON".
- Put the pillow back, sit on the chair and slowly lean your head against the backrest. If you want to soften the massage feeling, add and use the pillow according to your preferences.

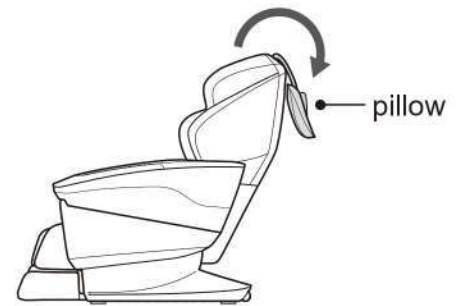


Start the recommended course or auto course.

1. Press the power button to turn on the power.


- The home screen appears.

2. Tap "RECOMMENDATION" or "AUTO COURSE".

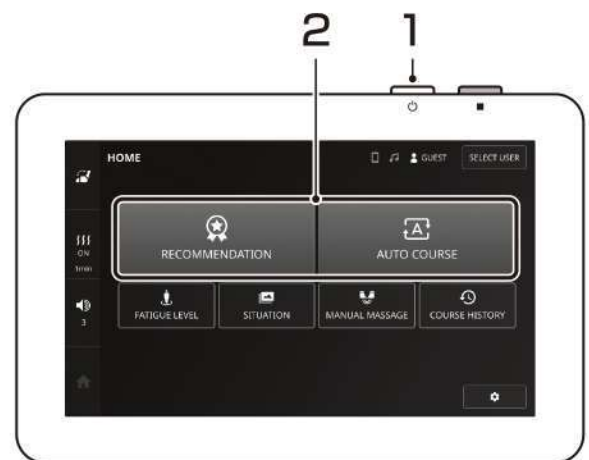



3. Tap the name of the course of your choice.

Example: If you choose "RECOMMENDATION"

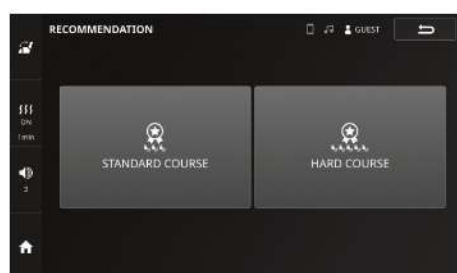

Body shape detection



Example: If you choose "AUTO COURSE" → "WHOLE BODY"

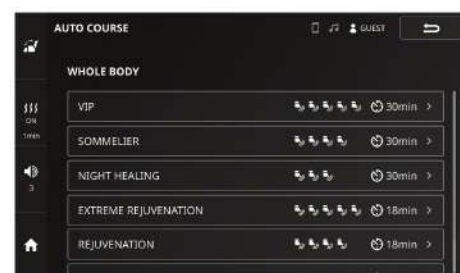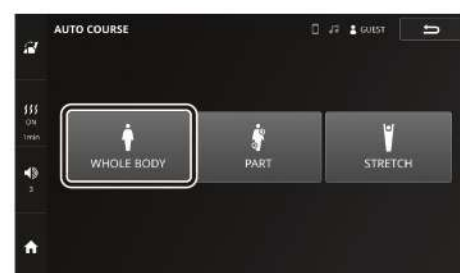

Body shape detection



4. The shoulder position will be detected automatically. After detection is complete, tap "OK".

- If the shoulder position is not correct, adjust it using "re-detection" or "Adjustment".

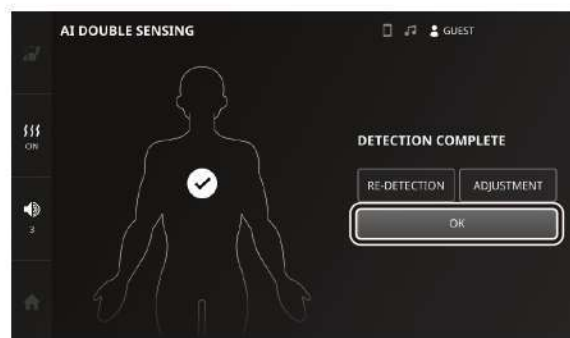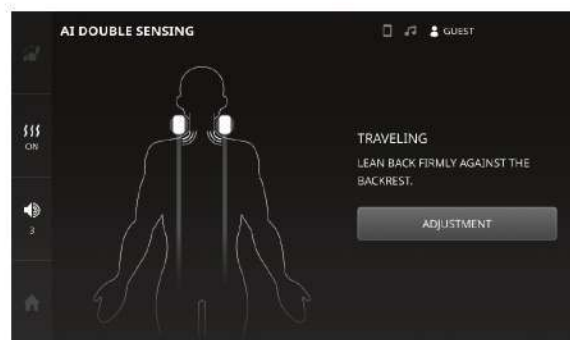


5. Once the shoulder position detection is complete, the back line detection will begin. After detection is complete, press "Start" to begin the course.

- Do not remove your head from the backrest during detection.
- Tap "Re-detect" to start detection again.
- If a detection error occurs, Tap "Re-detect" to perform the detection again.

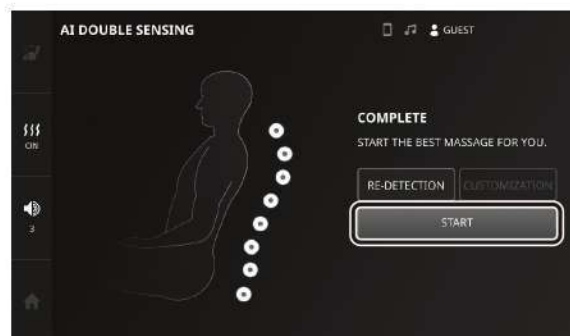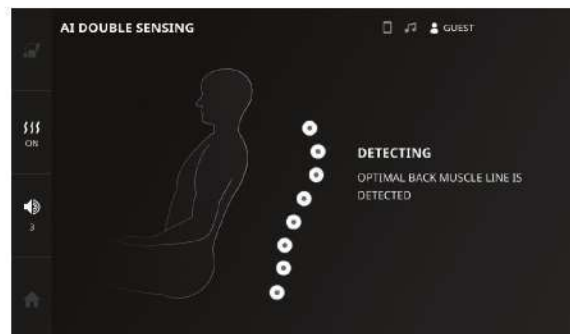

Massage with course (RECOMMENDATION / AUTO COURSE)

6. The selected automatic course and massage action are displayed.

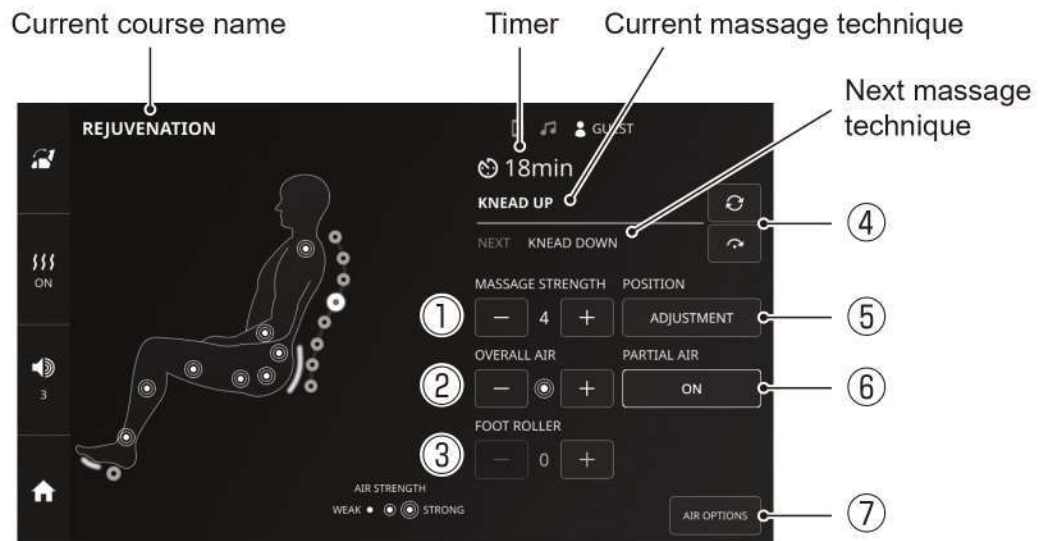

①		Massage ball strength adjustment	Adjusts the strength of the massage ball. (7 or 12 steps. Depending on the course.)
②		Air massage overall strength adjustment	Batch adjustment of overall air massage intensity. (7 steps)
③		Foot roller strength adjustment	Adjust the strength of the foot roller massage. (3 levels)
④		repeat	Repeat the current massage technique.
		skip	Proceed to the next massage technique.
⑤		Shoulder / waist position setting	Adjust shoulder position and waist position (vertical position). (P.25)
⑥		Air massage adjustment by area	Adjust the intensity of the air massage for each parts of the body. (P.25)
⑦		Air Options	Select the air massage option. (P.25)


Some items cannot be adjusted or set depending on the selected course.

7. The massage will end when the timer runs out.


Adjustment during auto course method

●Shoulder / waist position setting

- (1) When the massage balls are near the shoulder, Tap "Adjust" to display the shoulder position adjustment screen.
- (2) Adjust to the desired position.
- (3) Tap "OK" to return to the course screen.

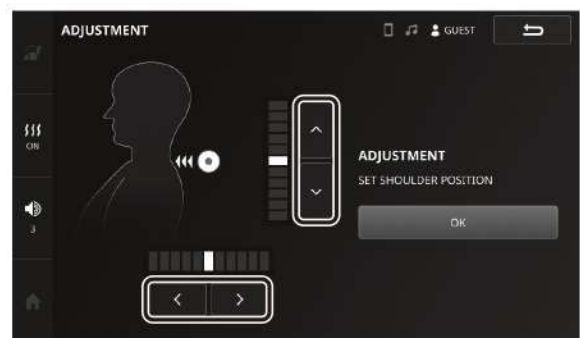


- (4) When the massage balls are in the lower back area, tap "adjust" will display the lower back position adjustment screen.
- (5) Adjust to your preferred position.
- (6) Tap "OK" to return to the course screen.

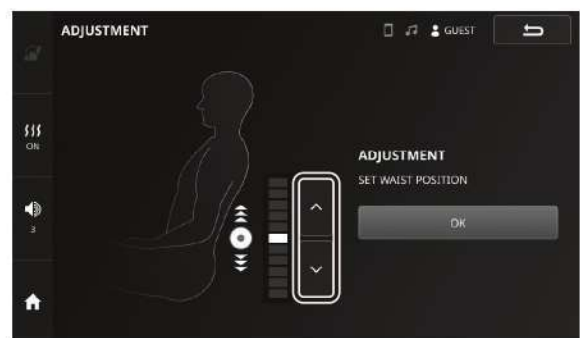


●Air massage adjustment by area

- (1) Tap the "PARTIAL AIR".
- (2) Tap the strength button for each part of the body, and adjust the strength to your preference by Taping "+" or "-".
- (3) Tap the "PARTIAL AIR" again to turn off the strength display for each area.

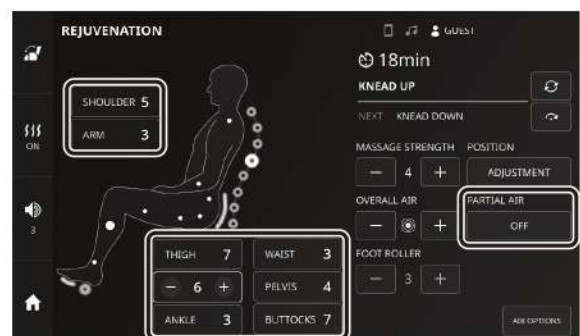

●Air Options

- (1) Tap "Air Options".
- (2) Set your preferred options.
- (3) Tap "OK" to return to the course screen.

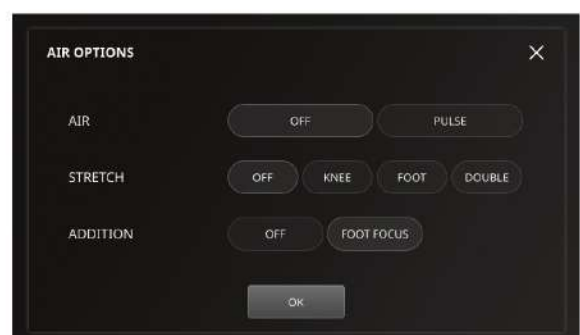

Massage with course (RECOMMENDATION / AUTO COURSE)

About the operation of auto course

The list of details that can be adjusted during the description of each auto course and during the start or in the middle of the course.

	Course	Timer	Shoulder auto detect	Back shape auto detect	Massage strength	Air massage strength	Skip / Repeat	Waist position adjustment	Foot roller	Option
WHOLE BODY	VIP	30min	●	●	7 Steps	●	-	●	●	-
	SOMMELIER	30min	●	●	7 Steps	●	-	●	●	-
	NIGHT HEALING	30min	●	●	7 Steps	●	-	●	●	-
	EXTREME REJUVENATION	18min	●	●	7 Steps	●	●	●	●	●
	REJUVENATION	18min	●	●	7 Steps	●	●	●	●	●
	REFRESH	18min	●	●	7 Steps	●	●	●	●	●
	RELAX	18min	●	●	7 Steps	●	●	●	●	●
	SOFT	18min	●	●	7 Steps	●	●	●	●	●
	QUICK MASSAGE	7min	●	●	7 Steps	●	-	●	●	●
PART	NECK / SHOULDER / BACK	EXTREME REJUVENATION	18min	●	●	7 Steps	●	●	●	●
		REJUVENATION	18min	●	●	7 Steps	●	●	●	●
		REFRESH	18min	●	●	7 Steps	●	●	●	●
		RELAX	18min	●	●	7 Steps	●	●	●	●
		NECK FOCUS SHORT	7min	●	-	12 Steps	●	-	●	●
		SHOULDER FOCUS SHORT	7min	●	-	12 Steps	●	-	●	●
		SHOULDER BLADE FOCUS SHORT	7min	●	-	12 Steps	●	-	●	●
		BACK BODY TRUNK	7min	●	-	12 Steps	●	-	-	-
	WAIST / SCIATIC / LEG	EXTREME REJUVENATION	18min	●	●	7 Steps	●	●	●	●
		REJUVENATION	18min	●	●	7 Steps	●	●	●	●
		REFRESH	18min	●	●	7 Steps	●	●	●	●
		RELAX	18min	●	●	7 Steps	●	●	●	●
		WAIST FOCUS SHORT	7min	-	-	12 Steps	●	-	●	●
		WAIST BODY TRUNK	7min	●	-	12 Steps	●	-	-	-

※Spinal column line cannot be adjusted


		Course	Timer	Shoulder auto detect	Back shape auto detect	Massage strength	Air massage strength	Skip / Repeat	Waist position adjustment	Foot roller	Option
PART	SCIATIC / LEG	SCIATIC FOCUS SHORT	7min	-	-	-	●	-	-	●	●
		FOOT FOCUS SHORT	7min	-	-	-	●	-	-	● (It can not be turned off)	-
STRETCH	WHOLE BODY	CONDITIONING	30min	●	-	7 Steps	●	-	-	-	-
		MINDFULNESS	30min	-	-	-	●	-	-	-	-
		EXTREME WHOLE BODY STRETCH	18min	●	-	7 Steps	●	-	-	-	-
		WHOLE BODY STRETCH	18min	●	-	7 Steps	●	-	-	-	-
		WHOLE BODY AIR	18min	-	-	-	●	-	-	-	●
		TECHNICAL STRETCH	18min	●	-	7 Steps	●	-	-	-	-
	PART	NECK STRETCH	7min	●	-	-	●	-	-	-	-
		SHOULDER STRETCH	7min	●	-	12 Steps	●	-	-	-	-
		BACK STRETCH	7min	●	-	-	●	-	-	-	-
		WAIST STRETCH	7min	-	-	-	●	-	●	-	-
		PELVIS CORE STRETCH	7min	-	-	-	●	-	-	-	-
		LEG / KNEE STRETCH	7min	-	-	-	●	-	-	-	-
		ARCH STRETCH	7min	-	-	-	●	-	-	-	-
RECOMMEN- DATION		STANDARD COURSE	18min	●	●	7 Steps	●	●	-	●	●
		HARD COURSE	18min	●	●	7 Steps	●	●	-	●	●

※ Spinal column line cannot be adjusted


About the end of Massage

Massage time is different from each course. (7, 18, 30 min)

- When the massage is finished, the massage ball return to the storage position.
- When automatic reclining is "ON", the backrest will automatically rise and the legs will automatically lower. When automatic reclining is "OFF", Taping "START STORING" will raise the backrest and lower the legs. (P.44)
- If there is no operation for a while after the massage is finished, the power will turn off.

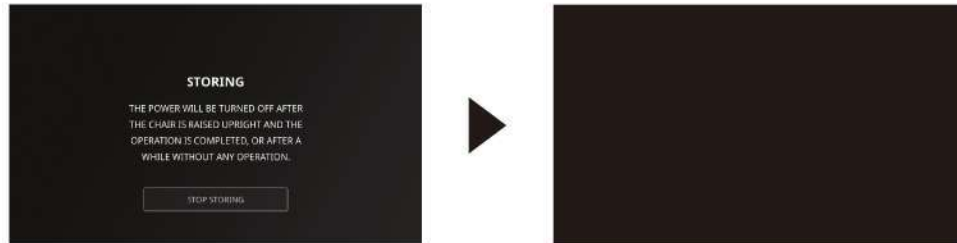

When returning the footrest to its original position, avoid applying force to the soles of the feet. If the footrest is moved back to position when the springs are extended, the sole part might hit the floor and then it won't be possible to smoothly put the footrest back into position.

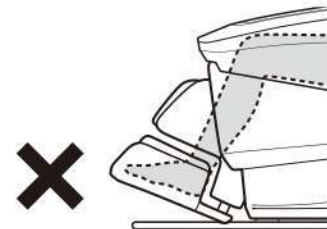

When massage is stopped as such

Tap the "Sudden Stop" button or the "Home" button.

- The massage ball stops while maintaining the current position.
- The timer will continue and you will return to the home screen.



When massage is to be stopped suddenly

Tap the "power button".


- The massage ball return to the storage position.
- When automatic reclining is "ON", the backrest automatically rises and the legs automatically lower. When automatic reclining is "OFF", Taping "START STORING" will raise the backrest and lower the legs.(P. 44)




Disconnect the power of Main Body

1. Switch OFF the power of the main body

- The power switch is in the lower right part behind the main body.

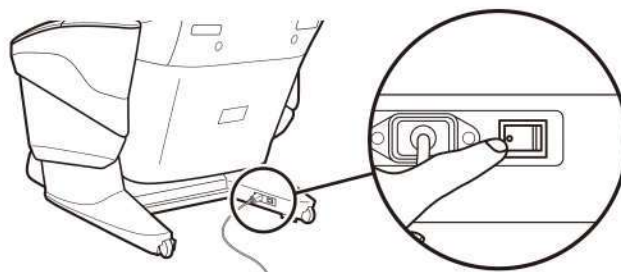

2. Remove the Power cord plug from receptacle

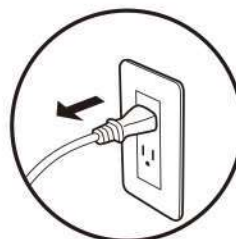


Manual massage

Start the desired rubbing massage

1. Press the power button to turn on the power.

- The home screen appears.

2. Tap "Manual massage".

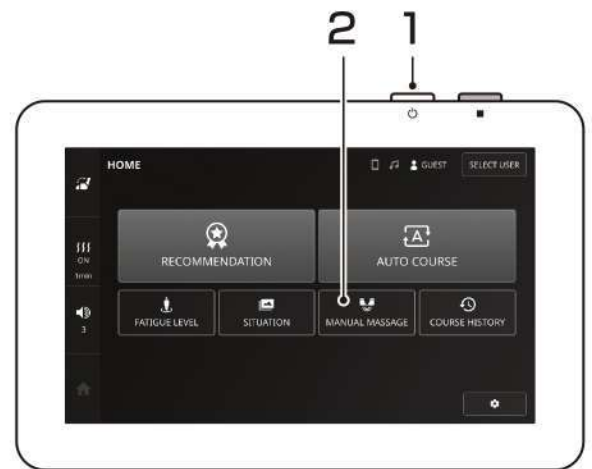


3. Tap your preferred menu.




4. Tap the name of your preferred massage technique.

- Start the massage

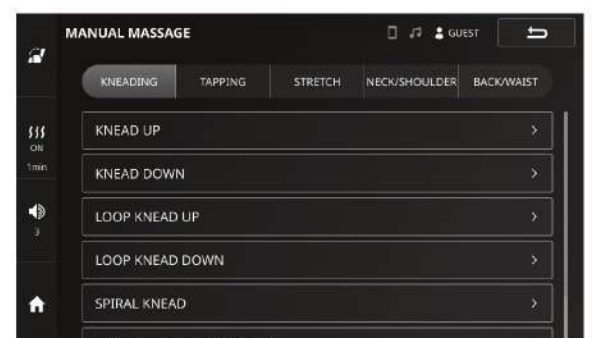

5. The selected massage technique and massage action are displayed.

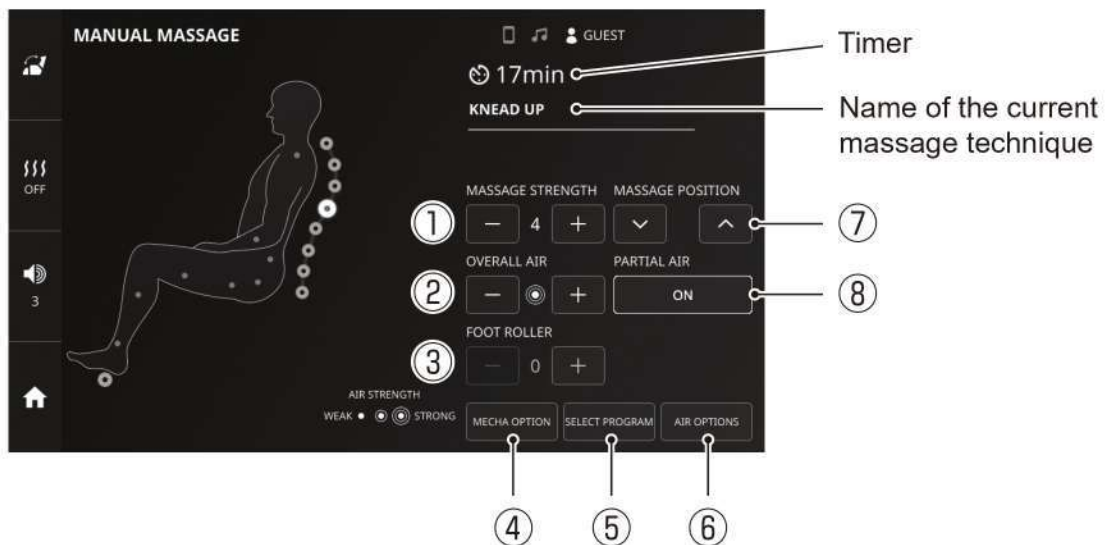

①		Massage ball strength adjustment	Adjusts the strength of the massage ball. (12 steps)
②		Air massage overall strength adjustment	Batch adjustment of overall air massage intensity. (7 steps)
③		Foot roller strength adjustment	Adjust the strength of the foot roller massage. (3 levels)
④		Mecha Option	Select the option of the massage technique. (P.32)
⑤		Select program	A list of massage techniques will be displayed and you can change to another massage technique.
⑥		Air Options	Select the air massage option. (P.32)
⑦	 <small>*Depends on massage technique</small>	Massage position setting	Adjust the massage position.
		Shoulder / waist position setting	Adjust shoulder position and waist position (vertical position). (P.33)
⑧		Air massage adjustment by area	Adjust the intensity of the air massage for each parts of the body. (P.33)

Some items cannot be adjusted or set depending on the selected program.

Manual massage

6. The massage will end when the timer runs out.

How to adjust during massaging


●Mecha Option

- (1) Tap "Mecha Option".
- (2) Set the options to your liking.
- (3) Tap "OK" to return to the massage screen.



●Air Options

- (1) Tap "Air Options".
- (2) Set your preferred options.
- (3) Tap "OK" to return to the massage screen.

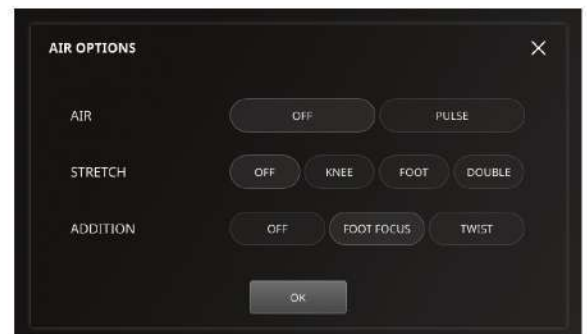

AIR MESSAGE OPTION

[PULSE]

Massage is carried out bit by bit many times by air.

[KNEE]

Leg is gripped by air and stretched in forward direction.

[FOOT FOCUS]

Calf massage can be done simultaneously with other air massage.

[FOOT]

Leg is gripped by air and stretched in downward direction.

[TWIST]

Twist operation massage is carried out around the waist center

[DOUBLE]

Leg is gripped by air and stretched in downward direction while stretching in forward direction.


●Air massage adjustment by area

- (1) Tap the "PARTIAL AIR".
- (2) Tap the strength button for each part of the body, and adjust the strength to your preference by Taping "+" or "-".
- (3) Tap the "PARTIAL AIR" again to turn off the strength display for each area.




●Shoulder / waist position setting

- (1) When the massage balls are near the shoulder, Tap "Adjust" to display the shoulder position adjustment screen.
- (2) Adjust to the desired position.
- (3) Tap "OK" to return to the massage screen.

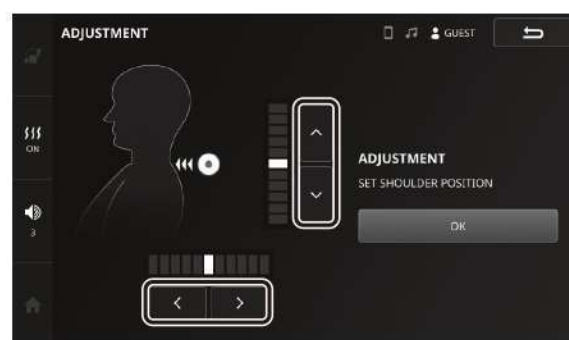

- (4) When the massage balls are in the lower back area, tap 'adjust' will display the lower back position adjustment screen.
- (5) Adjust to your preferred position.
- (6) Tap "OK" to return to the massage screen.

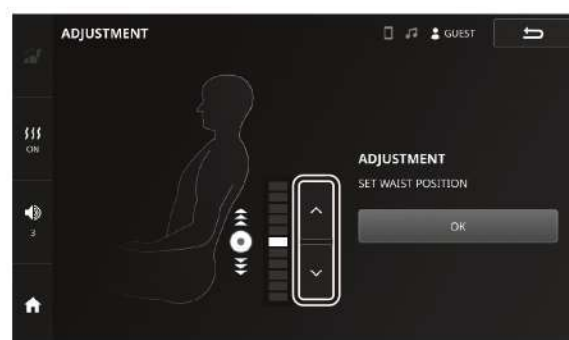

Manual massage

Mecha massage function list table

The list of adjustments that can be performed during each knead technique.

PROGRAM		knead technique adjustment	Knead technique front and back adjustment	Mecha Strength	Massage speed	Mecha width	Combination of foot roller	Massage position
KNEADING	KNEAD UP / DOWN	-	-	●	●	-	●	WHOLE / PART / POINT
	LOOP KNEAD UP / DOWN	-	-	●	●	-	●	WHOLE / PART / POINT
	SPIRAL KNEAD	-	-	●	-	2 levels	●	-
	PRECISION SPIRAL KNEAD	-	-	●	-	-	●	-
	RELAX KNEAD UP / DOWN	-	-	●	●	-	●	-
	PALMAR KNEAD UP / DOWN	-	-	●	-	-	●	WHOLE / PART / POINT
	3D KNEAD UP / DOWN	-	-	-	-	-	●	WHOLE / PART / POINT
	PUSH & KNEAD	-	-	●	●	-	●	WHOLE / PART / POINT
	RUBBING MASSAGE	-	-	●	●	-	●	-
TAPPING	TAPPING	-	-	●	●	●	●	WHOLE / PART / POINT
	WAVELET	-	-	●	●	-	●	WHOLE / PART / POINT
	IRREGULAR WAVES WAVELET	-	-	●	-	-	●	WHOLE / PART / POINT
	TAPPING SPIRAL KNEAD	-	-	●	-	-	●	-
	TAPPING PRECISION SPIRAL KNEAD	-	-	●	-	-	●	-
	3D TAPPING	-	-	-	-	●	●	WHOLE / PART / POINT
	3D WAVELET	-	-	-	-	-	●	WHOLE / PART / POINT
STRETCH	ROLLING	shoulder position	●	●	-	●	●	PART / POINT
	WAVE ROLLING	shoulder position	●	●	●	-	●	PART / POINT
	SHIATSU	-	-	●	-	●	●	WHOLE / PART / POINT
	SHIATSU STRETCH	-	-	●	-	●	●	WHOLE / PART / POINT
	STRETCH	-	-	●	-	●	●	WHOLE / PART / POINT
	STRETCH KNEAD UP	-	-	●	●	-	●	WHOLE / PART / POINT
	STRETCH TAPPING	-	-	●	●	●	●	WHOLE / PART / POINT
	STRETCH WAVELET	-	-	●	●	-	●	WHOLE / PART / POINT
	STRETCH SHIATSU	-	-	●	2 levels	●	●	PART / POINT
	LIFT UP / PUSH DOWN	-	-	●	-	-	●	-
NECK / SHOULDER	NECK SHIATSU	shoulder position	●	-	-	-	●	-
	NECK RELAX	shoulder position	●	-	-	-	●	-
	NECK UPWARD LIFTING	shoulder position	-	-	-	-	●	-
	NECK PALMAR KNEAD	shoulder position	●	-	-	-	●	-
	NECK / SHOULDER EXTREME KNEAD	shoulder position	●	-	-	-	●	-
	NECK / SHOULDER EXTREME TAPPING	shoulder position	●	-	-	-	●	-
	SHOULDER TAPPING	shoulder position	●	-	-	-	●	-
	UPPER SHOULDER PRESS	-	-	-	-	-	●	-
	COLLAR DOWNWARD PRESSING	shoulder position	-	-	-	-	●	-
BACK / WAIST	TOP SHOULDER LINE SHIATSU	shoulder position	-	-	-	-	●	-
	SHOULDER BLADE LINE	-	-	●	-	-	●	-
	RHOMBOID	shoulder position	●	●	-	-	●	-
	SHOULDER BLADE OPEN	shoulder position	●	●	-	-	●	-
	UPPER BACK DEEP SHIATSU	shoulder position	-	-	-	-	●	-
	WAIST EXTREME KNEAD	waist position	-	-	-	-	●	-
	WAIST EXTREME TAPPING	waist position	-	-	-	-	●	-
	PARASPINAL	shoulder position	●	●	●	-	●	-
	LUMBAR DEEP SHIATSU	waist position	-	-	-	-	●	-
	WAIST SHIATSU	waist position	-	-	-	-	●	-
	WAIST PALMAR	waist position	-	●	-	-	●	-
	BUTTOCK	-	-	-	-	-	●	-


Air massage

Start air massage


1. Press the power button to turn on the power.

- The home screen appears.

2. Tap "Manual massage".

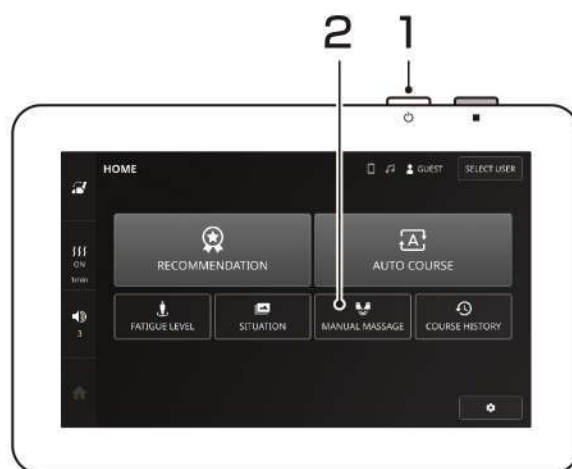

3. Tap "Air Massage".

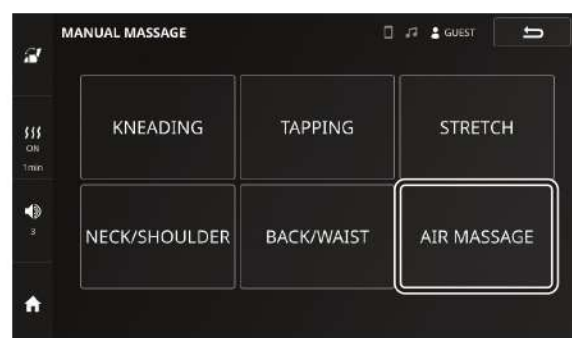


4. Set the desired intensity and Tap "OK".

- The air strength of "Shoulder", "Arm", "Waist", "Pelvis", "Buttocks", "Thigh", "Calf", "Ankle" can be selected individually.
- Can be reduced with "-" and increased with "+"
- The Footrest does not go down to standby position while using foot air or foot roller.
- Turn the foot air and foot roller 「off」 and lower the footrest when you want to lower the footrest to the standby position.



Air massage

5. Air massage operation is displayed.

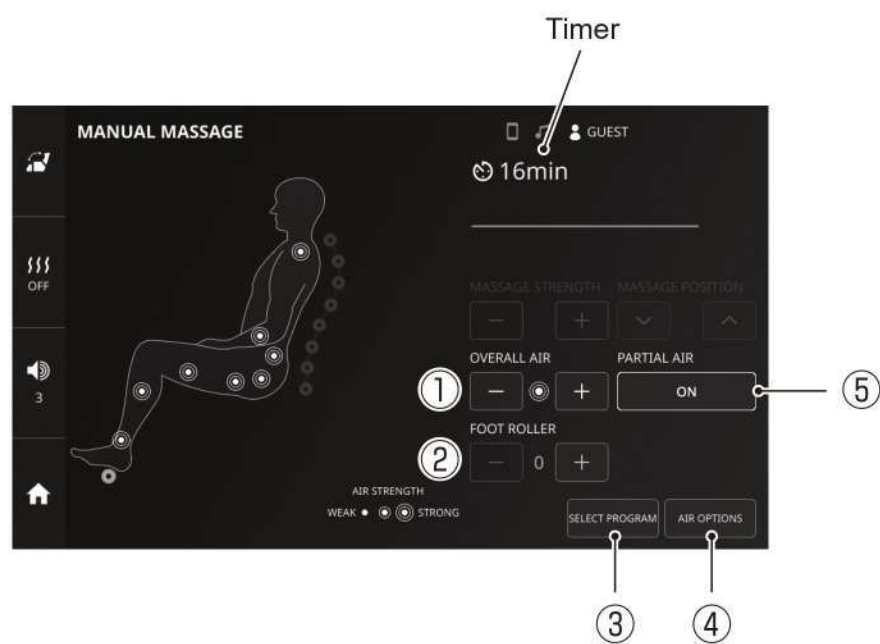

①		Air massage overall strength adjustment	Batch adjustment of overall air massage intensity. (7 steps)
②		Foot roller strength adjustment	Adjust the strength of the foot roller massage. (3 levels)
③		Select program	A list of massage techniques will be displayed and you can change to another massage technique.
④		Air Options	Select the air massage option. (P.32)
⑤		Air massage adjustment by area	Adjust the intensity of the air massage for each parts of the body. (P.33)

Some items cannot be adjusted or set depending on the selected program.


6. The massage will end when the timer runs out.

Fir technique massage and air massage together


Combined air massage during massage technique massage

1. Tap "PARTIAL AIR".

- The strength of each area is displayed and air massage begins.

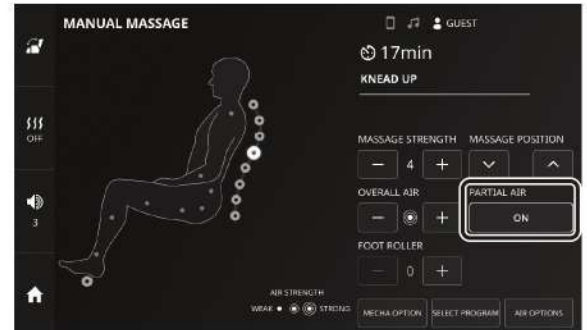


2. Tap the strength indicator for each area and adjust to the desired strength.

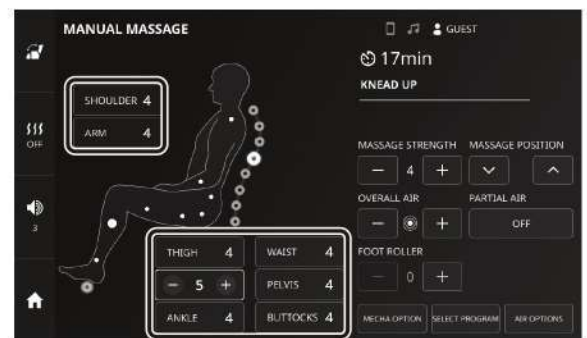


Combined massage technique massage during air massage

1. Tap "SELECT PROGRAM".

A list of firmer techniques is displayed.

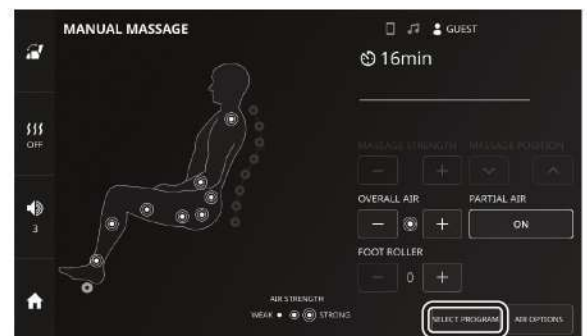

2. Tap the name of the massage technique of your choice to start the massage massage.

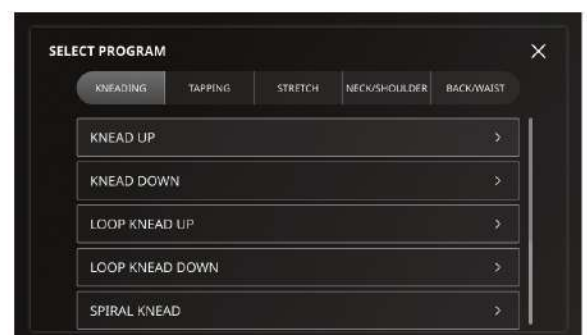


Fatigue Level

Analyze your body's fatigue level by tapping the tired areas of your body.
Based on the analysis results, the massage chair will guide you through the best course.

Start a massage tailored to the level of physical fatigue.

1. Press the power button to turn on the power.


- The home screen appears.

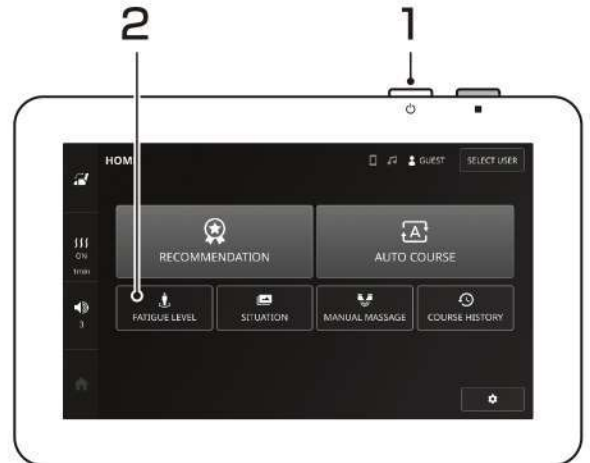

2. Tap "FATIGUE LEVEL".


3. Fill in the tired area with your finger.

- Tap the tired part of the body with your finger to fill in the area.
- Repeated tapping will make the color darker. If the area is particularly tired, fill it in with a darker color. (3 levels)

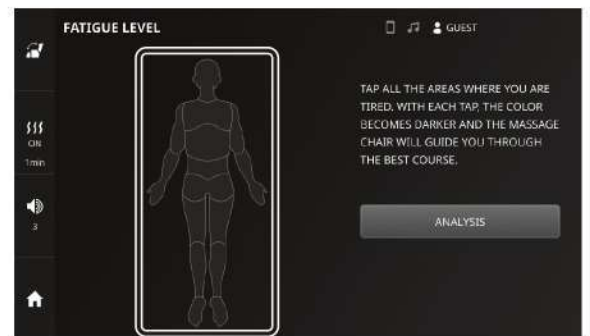


4. Tap "ANALYSIS".

- Fatigue levels are analyzed and recommended massage courses are displayed.

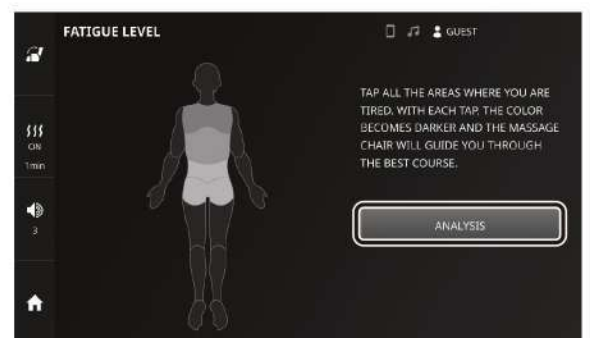

5. Tap "START MESSAGE".

- Massage will start.
- Tap "RESTART" to return to the state before filling.

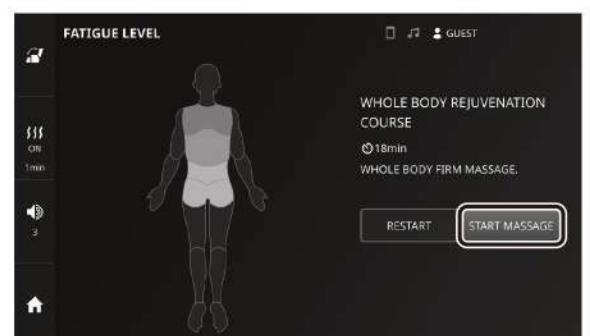

Situation

We will guide you to the best massage course for your purpose.

Beginning Purposeful Massage




1. Press the power button to turn on the power.

- The home screen appears.

2. Tap "SITUATION".

3. Select the item that best suits your purpose.

- Massage will start.

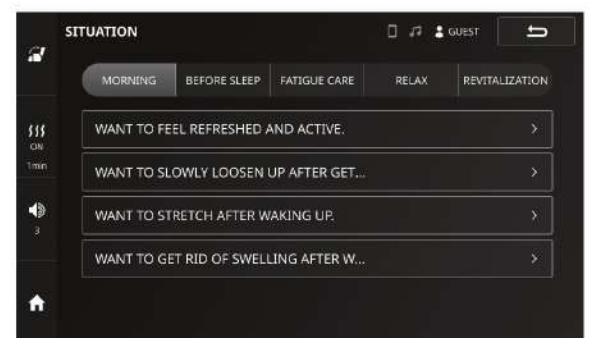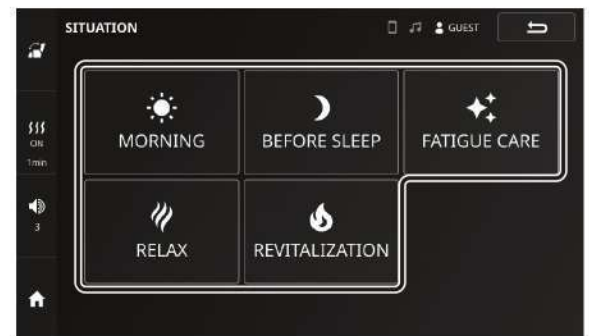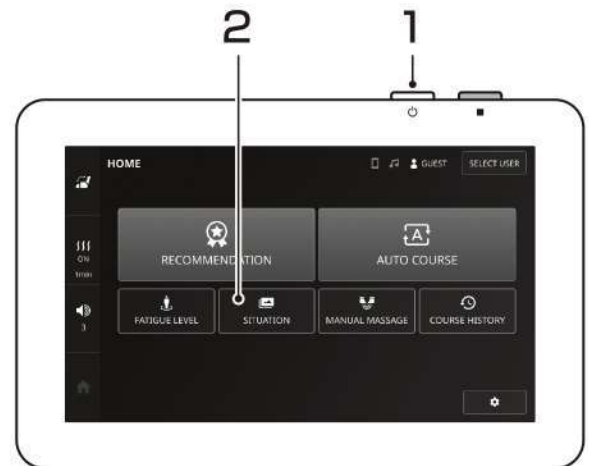

Course history


Display up to 10 most recent massage courses performed.

View Course History

1. Press the power button to turn on the power.

- The home screen appears.

2. Tap "Course History."

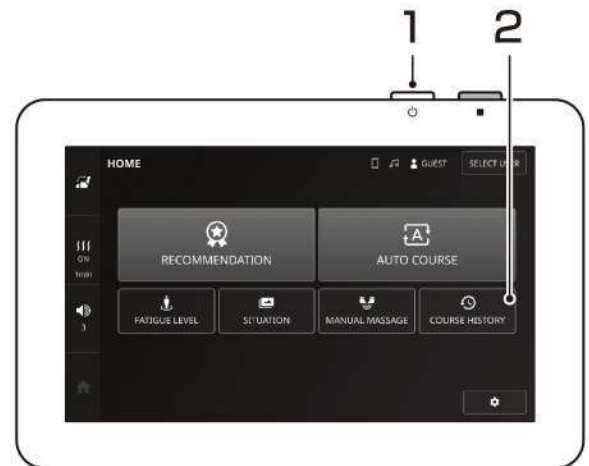

3. "Course History" will be displayed.
(maximum 10 courses)

- Tap the course name to start the massage.





Heater ON/OFF

! DANGER

Do not use the heater for long time, and do not use the heater in same place for long time.
It may cause low temperature or injury
Even at comparatively low temperature (40~60C), and do not use the heater in same place of the skin for long time.
It may cause low temperature or injury


1. Tap the "heater button".

- The back and foot heaters turn "ON".
- Tap again to turn "OFF".
- When using with massage, the heater also turns off when the massage is finished.
- Taping the "Heater button" on the Home Screen allows you to use the heater independently. When using the heater alone, it will automatically end after about 60 minutes.

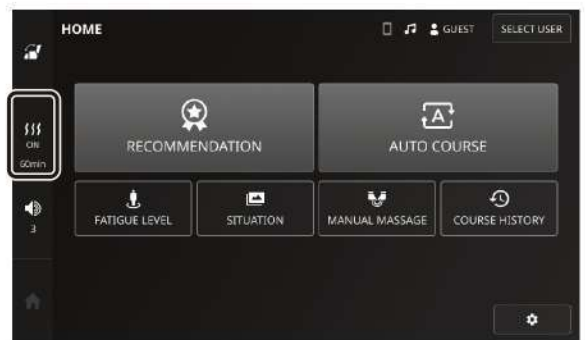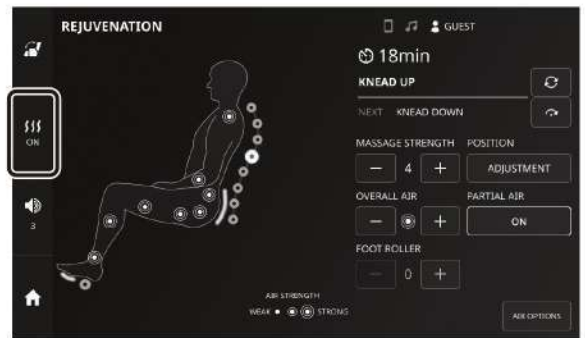

Back heater
(Built in back
pad)

Foot heater
(Equipped in
the part of toes)

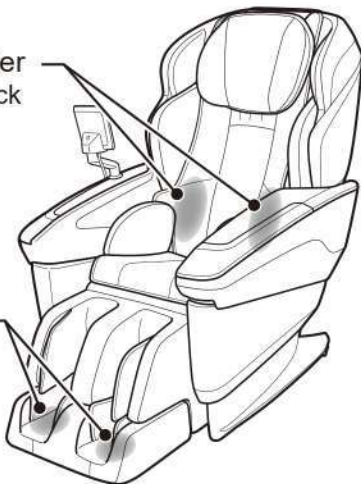

Position the back pad (heater part)


When warming around
the waist

Place the back pad on the your
back.



When warming around
the stomach

Remove the zippers (1) securing the back pad and backrest,
raise the zippers (2) on the back of the back pad and put the
heater part in front of your body.

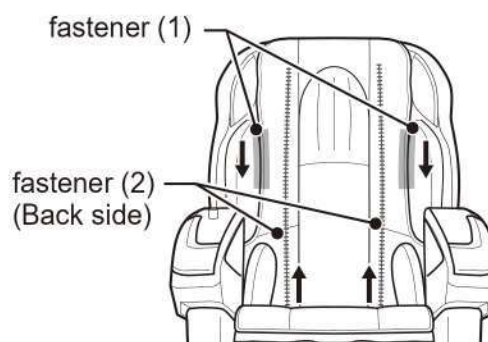

Foot roller massage

! WARNING

Do not hit toes to the foot rollers. Injury may occur.



「Foot roller massage」 can be used with the combination of auto course or manual massage.
※It can not be used alone.

1. Tap "-" or "+" on the "foot roller" during the automatic course or the massage technique massage operation.

- Tap "-" to make it weaker and "+" to make it stronger.
- You can choose from three strength levels. When the strength is "1", tapping "-" will turn it "OFF".
- When the Foot Roller is turned "ON", the Calf and Ankle Air will automatically turn "ON". When the Foot Roller is "ON", the Calf and Ankle Air cannot be turned "OFF".
- Depending on the course or massage technique selected, it may not be possible to combine the Sole Roller or turn it "OFF".




[When it cannot combine]

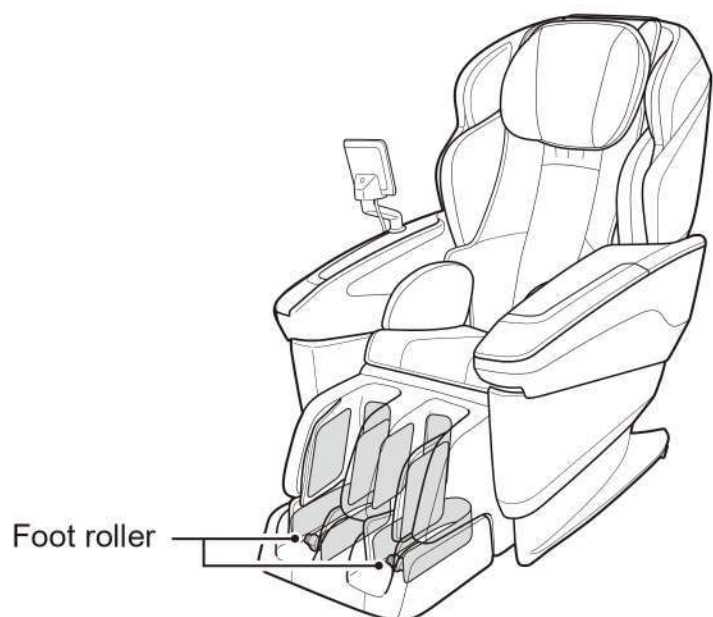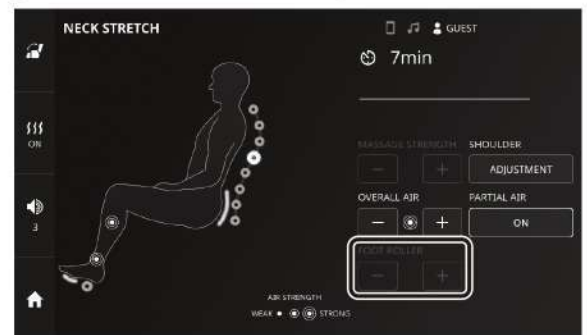





Volume control of operation sound

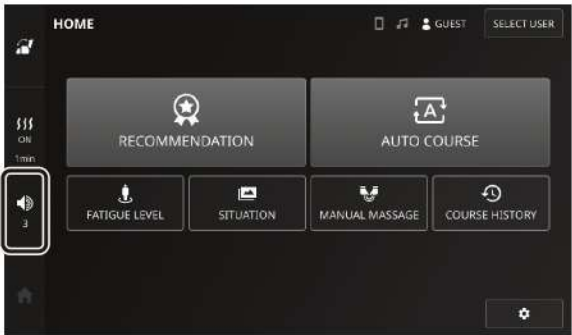The volume of the "operation sound" on the remote control can be adjusted.


1. Tap the "volume control button" shown on the left side of the screen.
- Each time the button is Taped, the volume will change from "1" to "2" to "3" to "OFF".
 - The volume of the BLUETOOTH speaker cannot be adjusted with the volume control buttons.



Indication of volume control buttons


	Operation sound: OFF Some operation sounds, such as "beep, beep" sound during reclining, are not turned off.
	Operation sound: Low
	Operation sound: Medium
	Operation sound: loud

Back of remote control

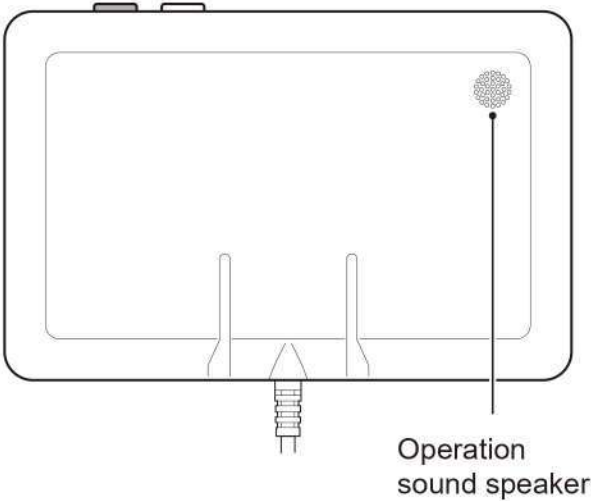

Settings (Language/Auto reclining/Screen brightness/Bluetooth reset)

Open the settings screen from the "gear mark" on the Home Screen to configure various settings.

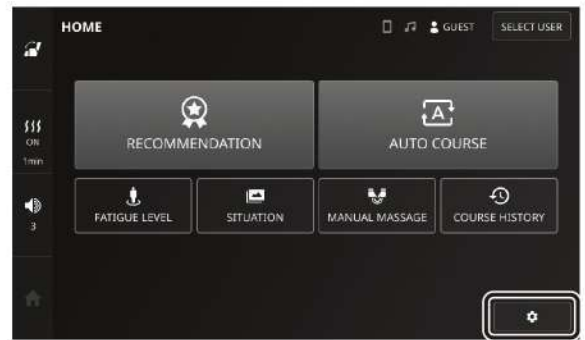

Language


The display language of the remote control can be switched to another language.




Auto reclining

Automatic reclining" is a function that automatically retracts the legs, raises the backrest, and turns off the power at the end of a massage or when the power is turned off.

- When stowed, the legs are first stowed and then the backrest is raised.
- When the power switch of the main unit is turned on again, the "ON/OFF" setting of automatic reclining will be continued.

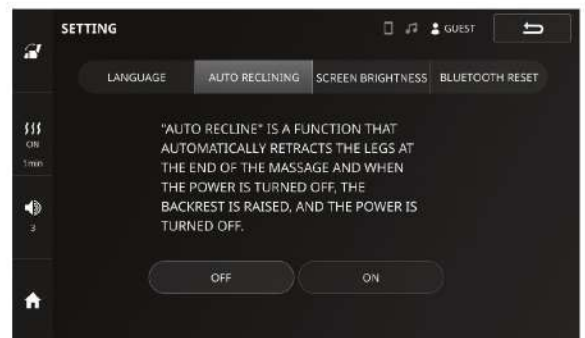


- At the end of the massage

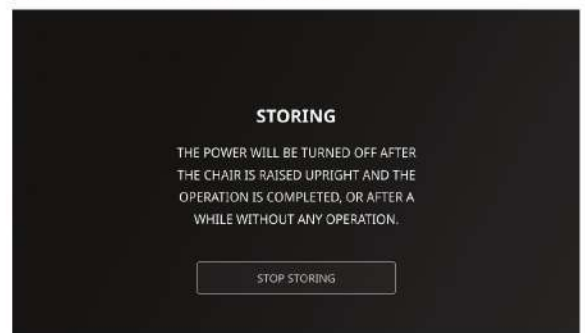

Screen brightness


Screen brightness can be adjusted. (11 levels)

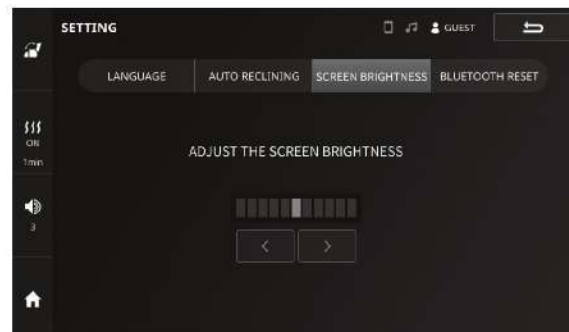

Bluetooth reset

Bluetooth pairing information can be reset.

- For details, please refer to "About resetting pairing information". (P.49)

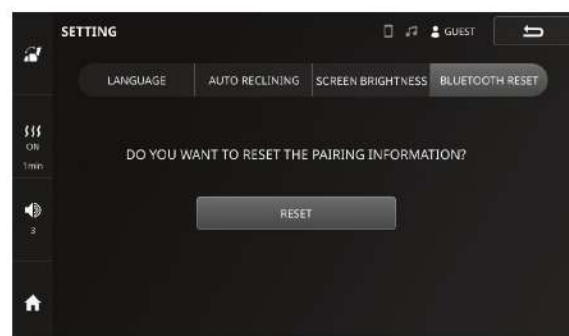

Usage of BLUETOOTH® speaker

When the BLUETOOTH is connected, you can listen to music through the BLUETOOTH speakers.



WARNING

Please do not listen at high volume.
Listening at a high volume for a long time may damage your hearing.

Precautions for using speakers

- Be sure to read the instructions of the BLUETOOTH device when using it.
- The Company will not be responsible if the stored contents of the connected device disappear.
- When connecting, be sure to reduce the volume of the device in advance.
- If there are electronic devices or transmitters (mobile phones, etc.) around the product, they may interfere with the it. Please keep away from them when using the massage chair.
- If the product is used near the antenna of the TV or radio, the TV or radio may produce noise. Please keep away from them when using the massage chair.

When connecting for the first time

Pairing must be performed. After pairing is successfully completed, the main body will keep the connection information, and it will connect automatically from the following time. It can store connection information on up to 5 devices.

※ Unable to connect with more than one device at the same time.

Connect with a smartphone

1. Press the power button to turn on the power.

- The home screen appears.



2. Open the BLUETOOTH setting screen by operating the smartphone's setting App, etc.

- For iOS, settings → BLUETOOTH, and for Android settings → Connected device → New pairing device (the name may vary depending on the version).
- After searching, "Message Chair H22" will be shown in the BLUETOOTH device.
- Push the "search" button when you are near the message chair.
- Please read the instructions of the smartphone for its operation.

3. When "Message Chair H22" is shown, click it.

- In iOS, it will be shown at the bottom of the screen, and in Android, it will be shown in the "Available Devices" field. (The name may vary depending on the version.)
- After selecting "Message Chair H22", a message such as "Pairing" or "In pairing" is displayed on the screen, and then the device connects (allow pairing in case permission is requested).
For iOS, the display position of "Message Chair H22" is moved to the "My Devices" field and for Android the display position of "Message Chair H22" is moved to the "Connected devices" field.
- When pairing is complete, the "🎵" icon will appear in white on the remote control screen.
- After pairing is complete, the device will connect automatically from the following time. (up to 5)
- If pairing fails, restart the power of the message chair main body and try again.
- Since the voice may be output at high volume, please turn down the volume of the speaker device before usage.
- The volume of the BLUETOOTH speaker cannot be adjusted with the "Volume control button" on the remote control screen. Please adjust it with the device.
- In case massage, please complete the connection first and then perform the massage operations as usual.
- If used together with massage, the music will also stop playing when the massage is over.
- If used together with the heater, the heater will stop after about 60 minutes, but the music will continue playing.
- If there is no music playing or no operation for 3 minutes during the BLUETOOTH connection, the power will be turned off automatically.

Usage of BLUETOOTH® speaker

Connect from other devices (TV, transmitter, etc.)

Explanation of the common connection steps for devices without an operation screen.

1. Press the power button to turn on the power.

- The home screen appears.





2. Operate the device to be connected (transmitter, etc.) and enter the pairing mode.

- The name of pairing mode and operations of switching to pairing mode vary according to the device. Please refer to the instructions of the device for details.
- When the display status of the LED of the device changes, it means that it has entered pairing mode.

3. Wait briefly until the connection is successful.

- When the display status of the LED of the device changes, it means that the connection has been completed.
- When pairing is complete, the "♪" icon will appear in white on the remote control screen.
- After pairing is complete, the device will connect automatically from the following time. (up to 5)
- If pairing fails, restart the power of the massage chair main body and try again.
- Since the voice may be output at high volume, please turn down the volume of the speaker device before usage.
- The volume of the BLUETOOTH speaker cannot be adjusted with the "Volume control button" on the remote control screen. Please adjust it with the device.
- In case massage, please complete the connection first and then perform the massage operations as usual.
- If used together with massage, the music will also stop playing when the massage is over.
- If used together with the heater, the heater will stop after about 60 minutes, but the music will continue playing.
- If there is no music playing or no operation for 3 minutes during the BLUETOOTH connection, the power will be turned off automatically.

The "♪" icon will appear in white on the remote control screen.

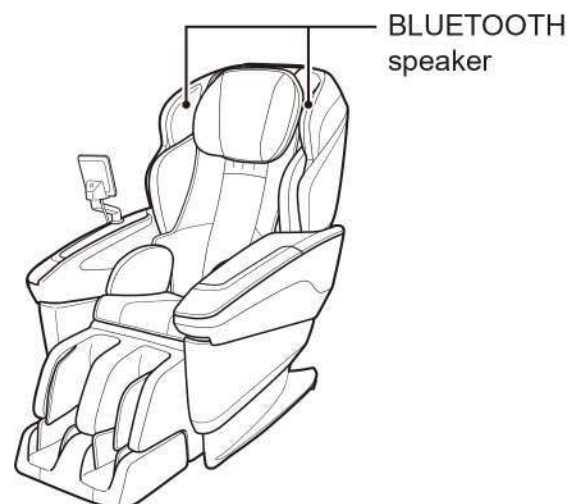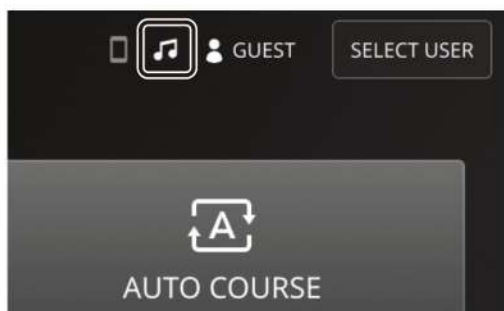

When connecting from the second time

1. After turning on the power of a smartphone or device, Tap the "power button" to turn on the power, and the connection will be automatically established.
- The massage chair can keep connection information for up to 5 devices.
 - After turning on the power, the massage chair will try to connect according to the order of stored connection information. The connection may take some time (about 30 seconds).




About resetting pairing information

In the following cases, pairing information must be reset.

- When you do not want the massage chair to automatically connect to the device.
- When you want it to automatically connect with a device after 5 have been already registered.
- When you want to restore the connection to its initial status.


Please note that after resetting pairing information, all previous connection information will be deleted.

1. In "Guest Mode", open the settings screen from the "Gear mark" on the Home Screen.
2. Tap "Bluetooth Reset" and Tap "Reset" to reset the pairing information.

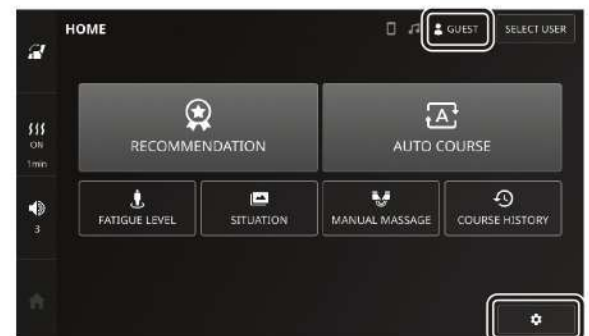

[Note] After resetting the pairing information, the connection information must be deleted also on the connection device. For a smartphone, please find the item of "Massage Chair H22" through the BLUETOOTH setting of the setting App and cancel the pairing or cancel the pairing setting.

[Explanation] Information about the connection between the massage chair and the device will be stored in both the massage chair and the connecting device. Since this information is bound through pairing or pairing setting, when the connection information of one side is lost, that of the other side will also become invalid.

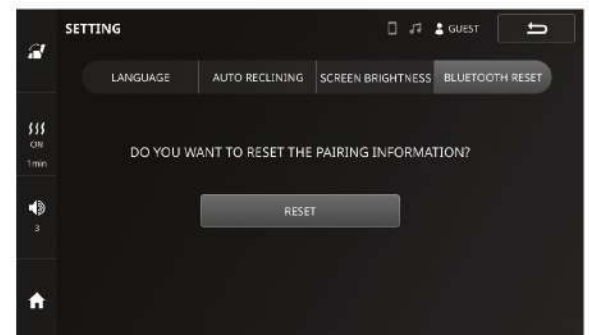

About User Customized Mode

Functions of User Customized Mode

- It can register / customize information for 2 users.
Select User 1 or 2 and register customized information. Registering customized information allows you to skip the body shape detection at the start of the course and start massage immediately.
- The usage of massage and various settings is the same as that in Guest Mode.
Except for the registration of customized information, other operations are the same as those in Guest Mode. Please refer to the usage of Guest Mode. (P.20~49)
* "Child Lock" and "Reset BLUETOOTH Pairing Information" cannot be performed in the user customized mode. Please do so in Guest mode.
- For the function limitations of each mode, please refer to the table on the specification page. (P.67)

Registrable customized information (User Customized Mode)

BACK SHAPE CUSTOMIZATION

Shoulder / waist position information

Shoulder / waist position information
Select the massage point of the automatic course.

S-curve detection information

In order to make the massage chair massage evenly along the back, this function will collect back line information. The detected back line data can also be further edited according to preferences.

RECLINE ANGLE CUSTOMIZATION

Reclining information

It is possible to register information of the preferred backrest angle, leg angle / leg length.

AIR CUSTOMIZATION


Air pressure information

After the pre-setting, it is possible to register information of the preferred air massage intensity.

Customized information first registration example



When you register reclining information and select User 1 or 2, the backrest and legs will automatically move to the registered angle. Please be aware of your surroundings.

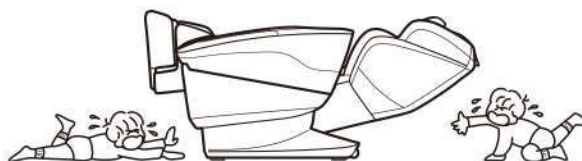


When using the User Customized Mode for the first time


1. Press the power button to turn on the power.

- The home screen appears.

2. Tap "Select User".

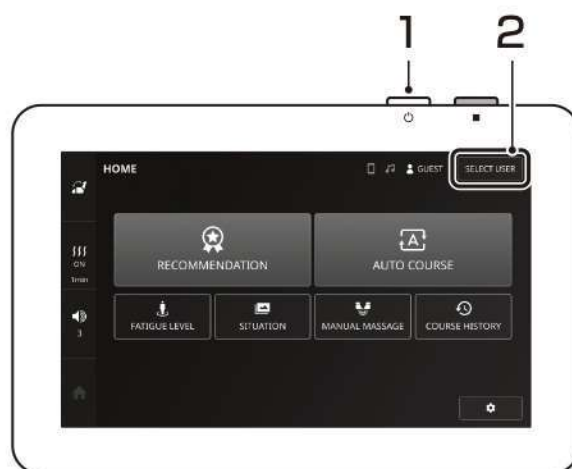


3. Tap "User 1" or "User 2".

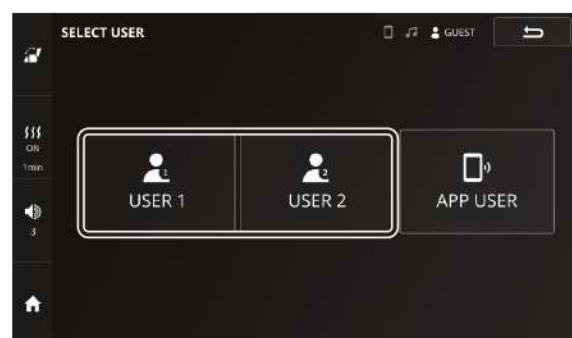


4. Tap "Start" to start customization settings in the order of back shape, recline, and air.

- Please refer to P.52 to P.56 for details on various customization methods.
- If the registration of customized back line is not complete, User Customized Mode cannot be used.
- When customizing air pressure, press "Skip" to skip the setting.
- Do not turn off the power during registration, otherwise the registration of customized information cannot be completed.

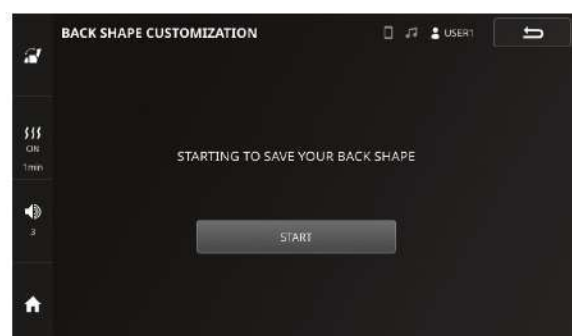

5. When the registration of customization information is completed, the Home Screen will appear.


- After registration of customized information is completed, massage can be performed in the user customized mode. Operation is the same as when using in guest mode.

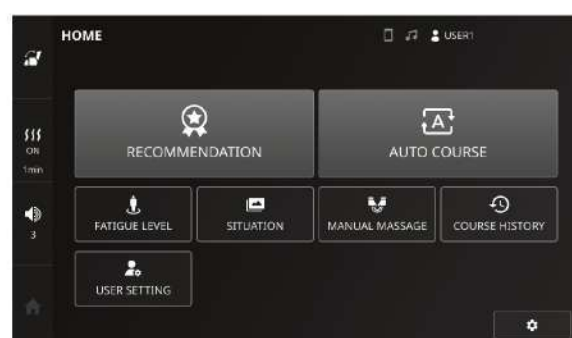

About User Customized Mode


To reset the user information (re-register)

1. Log in to "User 1" or "User 2" and Tap the "gear mark".

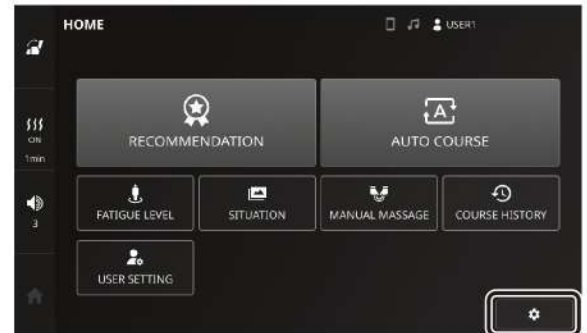


2. Tap Reset to start customization settings in the order of back line, recline, and air.

- In order to maintain immediate massage availability, the dorsal line information is not erased. If the user cancels before overwriting the information in the backstroke line customization after resetting the user information, the backstroke line information will maintain the previous value.

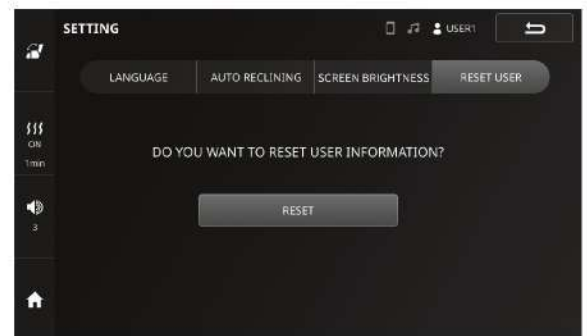


Customize back shape

1. Log in to "User 1" or "User 2" and Tap "User Settings".

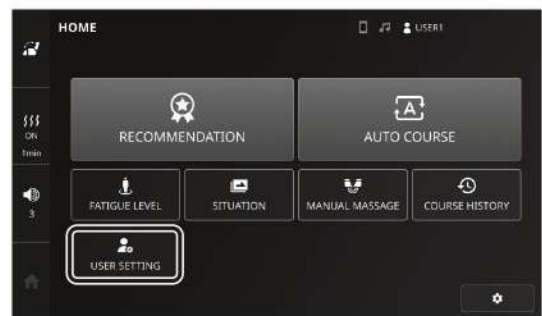


2. Tap the "BACK SHAPE".

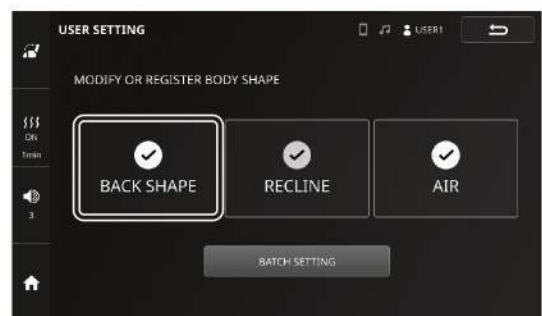


3. Tap "REGISTER" to start shoulder position detection.

- Do not move your head away from the backrest during detection.
- Tap "MODIFY" to adjust the already registered back line.

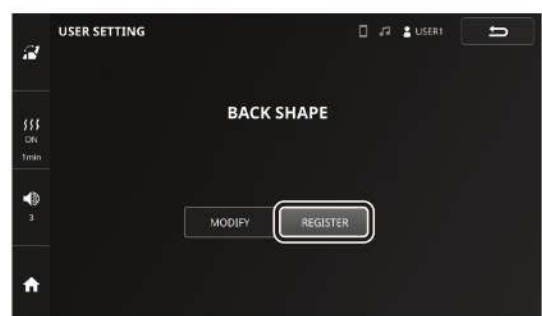


4. After detection is complete, Tap "OK" to register the shoulder position. If the shoulder position does not match, use "Re-detection" or "Adjustment" to adjust.

- Tap "Re-detection" to start detection again.
- If a detection error occurs, Tap "Re-detection" to start detection again.

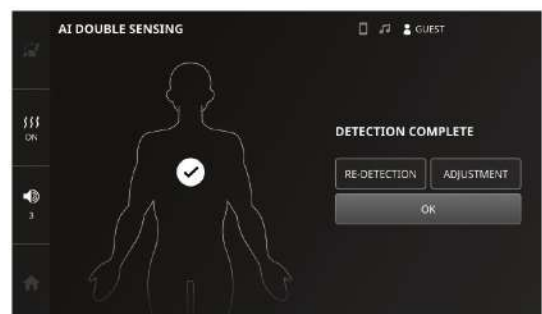


• Manual adjustment

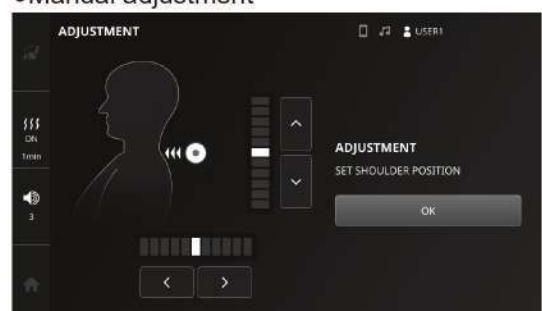

About User Customized Mode

5. When the shoulder position registration is completed, the dorsal line detection starts. After the detection is complete, Tap "OK" to register the dorsal line. If further adjustment is desired, use "CUSTOMIZATION" to adjust.

- Do not move your head away from the backrest during detection.
- After pressing "CUSTOMIZATION", the back line can be adjusted manually. Please refer to the "About customizing back line" below.
- Tap "Re-detection" to start detection again.
- If a detection error occurs, Tap "Re-detection" to start detection again.

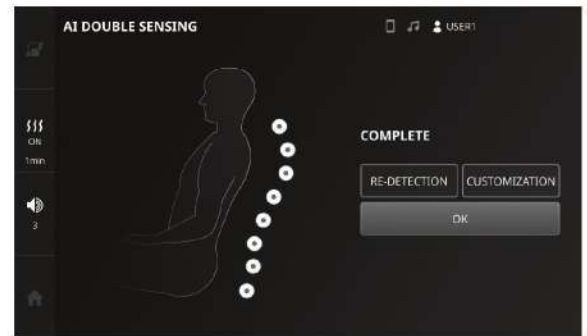

About back shape customization

Generally, massage will be performed with a uniform force along the back line, but the massage standard force of each part can be changed by customizing according to user's preferences.

(For example)


To increase intensity for head and shoulder parts

1. After the dorsal line is detected, Tap "Customize".
2. Select the area to be adjusted with the "Up/Down button ①" to move the massage ball and massage with the standard Tapure.
3. Adjust to the desired reference Tapure with "Left/Right button ②". (± 7 steps can be set)
4. Adjust the neck and shoulder area to the reinforced back line information and register with "OK ③".




6. When the dorsal line is registered, the waist position adjustment begins. Adjust the position of the massage ball and Tap "OK" to start registration. When "Registration Completed" is displayed, the registration is complete.

- Do not turn off the power during registration. Information will not be registered.

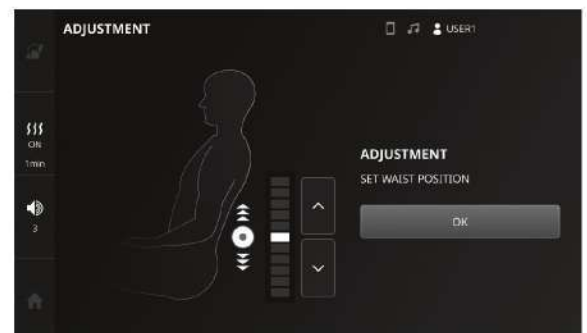


Customize recline


1. Log in to "User 1" or "User 2" and Tap "User Settings".

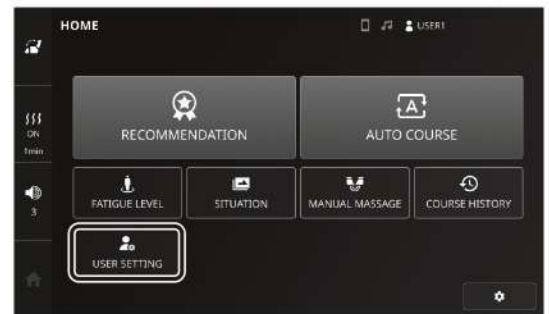

2. Tap the "RECLINE".

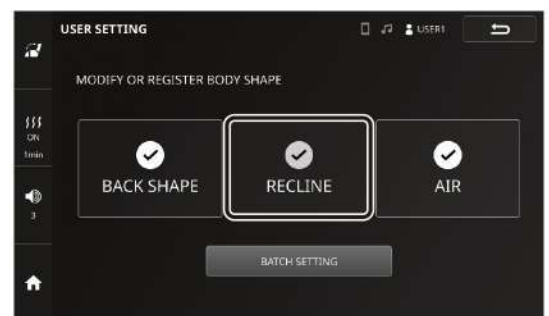

3. Tap "REGISTER" to display the customization screen.

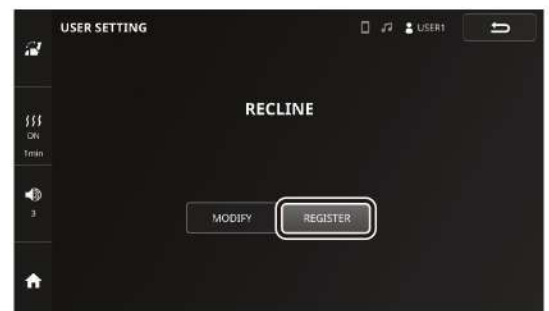


- Adjust the backrest angle, leg angle, and leg length.
- The leg angle cannot be lower than the standby position.
- Tap "MODIFY" to adjust the already registered reclining angle.

4. Tap "OK" to start registration. When "Registration Complete" is displayed, the registration is complete.

- Do not turn off the power during registration. The information will not be registered.
- When reclining customization is registered, the backrest and legs will automatically move to the registered position the next time the user logs in.




- Standby position

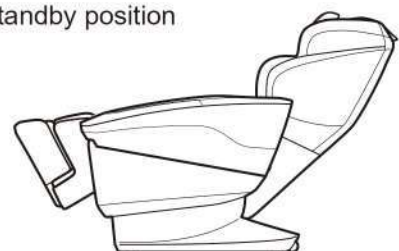


About User Customized Mode

Customize air massage


1. Log in to "User 1" or "User 2" and Tap "User Settings".

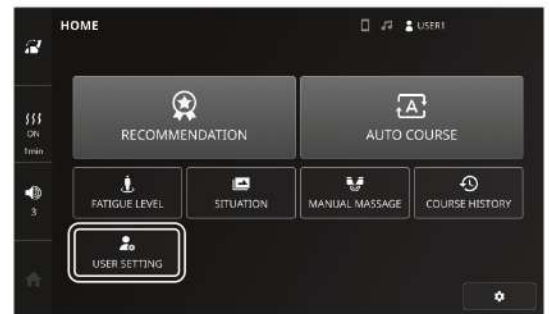

2. Tap the "AIR".

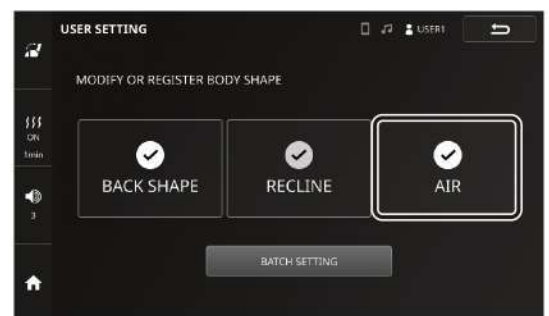


3. Tap "REGISTER" to display the customization screen and start the strength setting operation for each part." to display the customization screen.

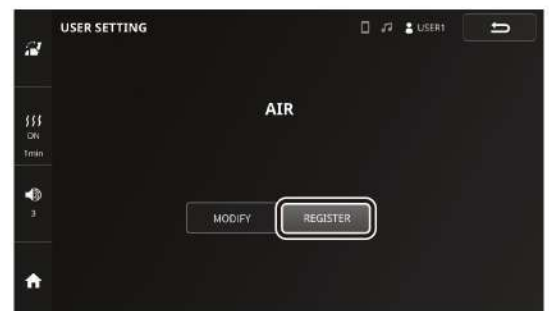

- Air massage is performed on each part of the body in turn. Tap "OK" when the desired intensity is reached.
- The operation is repeated twice for each area. If "OK" is not Taped, the intensity is set at "7".
- Tap "MODIFY" to adjust the already registered strength.





4. Confirm the strength display on the confirmation screen and Tap "OK" to start registration. When "Registration Complete" is displayed, the registration is complete.

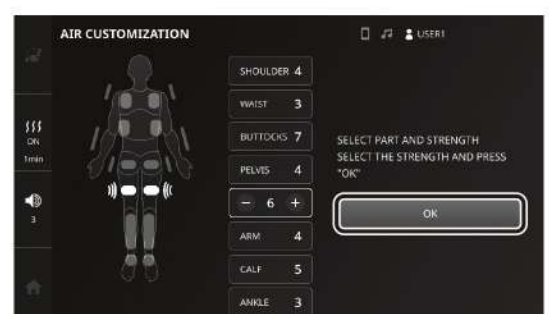

- The intensity can also be adjusted on the confirmation screen.
- Do not turn off the power during registration. The information will not be registered.

Batch setting (to reset the batch)

1. Log in to "User 1" or "User 2" and Tap "User Settings".
2. Tap "Batch Settings" to start customization settings in the order of back shape, recline, and air.

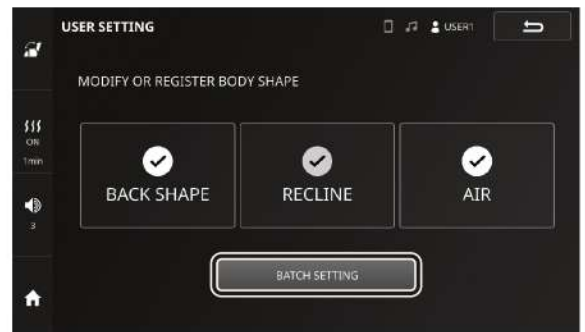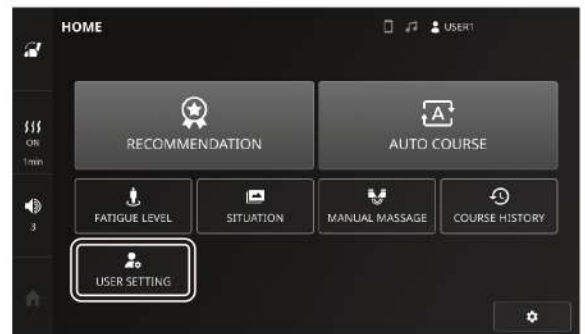

To switch to other modes

1. When you want to switch to another user or switch to "guest mode," turn the power back on.
- When switching to other modes, please restart the power before operation.




To set the child lock

The "Child Lock" function disables button reception to prevent children from operating the device accidentally.

1. Make sure that the backrest and legs are stowed.

- All functions cannot be operated during child lock. Please raise the backrest first and store the legs.

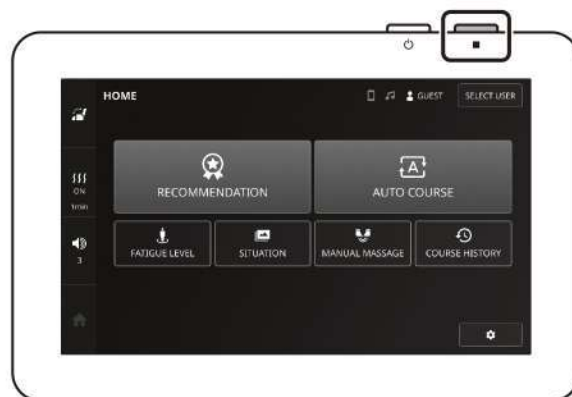

Press and hold
for 3 seconds

2. Tap and hold the "Emergency stop button" on the Home Screen for about 3 seconds, and a "beep" buzzer will sound and the child lock screen will appear.

- After setting the child lock, the screen will disappear if no operation is performed for 30 seconds. Tap the "power button" to display the child lock screen.
- To release the child lock, perform the same operation or turn the power switch of the main unit back on.



Maintenance and storage

How to maintain the chair



DANGER

Do not connect or disconnect the power plug by wet hands. Electrification may occur.



WARNING

Make sure to unplug the power plug.
Electrification may occur.
Do not wipe with benzene, paint thinner or alcohol.
This may cause fire or electrification.

Cloth/Back pad/Pillow

1. Instill water containing neutral detergent and squeeze firmly.
 2. Wipe the dirty part with the cloth.
 3. Wipe it out with a tight squeezed cloth which is water contained.
 4. Dry it naturally after wiping out with a dry cloth.
- Do not iron. It may damage the fabric.
 - Attention to use the machine with wearing colored clothes as color may adhere to fabrics or cloth.
 - After using the machine with hairdressing on, put something like towel on where your head touches as it may cause the change of color or cracking.

Resin part

1. Instill water containing neutral detergent and squeeze firmly.
 2. Wipe the dirty part with the cloth.
 3. Wipe it out with a dry cloth not to leave detergent.
- Do not use scouring powder. It causes scratches, discoloration, cracks.

Remote control, lower back(Control box)

Wipe out with a dry cloth.

- Do not wipe out with a wet towel. It may cause malfunction.

How to storage



DANGER

Do not use or store in the bathrooms or places of high humidity or moisture. Electrification, fire, accidents, and moulding may occur.

Store the chair in the places which is less adverse effect by temperature, humidity, dusts after wiping out the dirt and dusts on the chair.

When the chair won't be used for a long time, put a cover on the chair and avoid the chair from dust.

- Do not store the chair near a stove or the places which chair is exposed to direct sunlight for a long time. It may cause discoloration, deterioration.

Maintenance and storage

How to move the main unit


WARNING

Do not move the chair while people or items are on the chair. Damage or injuries may occur.
Do not haul the chair itself or move with the casters on the floor where it easily gets scratches.
Do not pull the power chord or remote control chord with leg or wrap with caster.
Failure to do so may cause injury.

When moving with Caster

Float the front side of the main unit, push it and move.


- While lowering the main unit, lower slowly so that the leg part does not get hit.

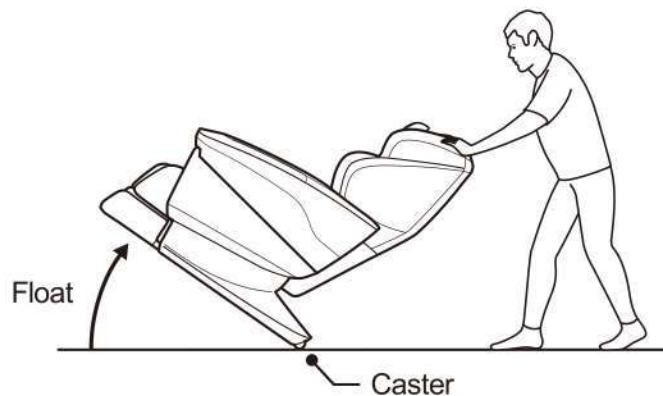

When more than 2 persons are lifting

Dismantle the arm unit and the arm rest, and after lowering the back rest part, hold the lower part of the front side and back rest with hands (Refer the below diagram) and then lift and move.


- About the method to remove the arm unit, please refer to "To remove the arm unit". (P.12)
- As it is very heavy, select more than 2 persons surely.
- Please watch your steps carefully and lower it slowly.

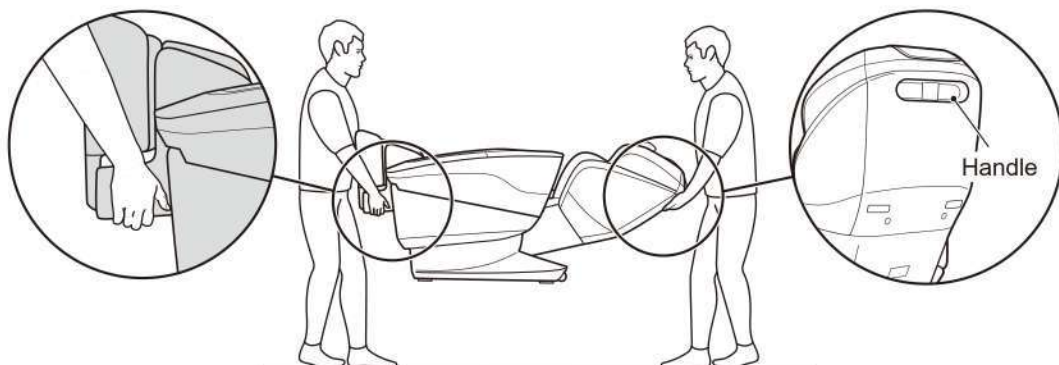

Q&A

Q1 Left and right strength is different. And, I feel the difference is remarkable.

A To massage for a better feeling, in connection with adopting a mechanism in which the rubbing will mutually hit, unavoidably, the operation might take place in the knead ball slipped position. Thereby, you feel that there is a difference among the left and right strength. But it is not a failure.

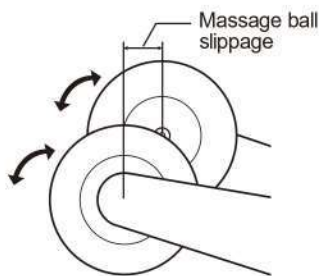

Q2 Why does the remote control stand wobble?

A Check the mounting screws of the stand and re-tighten them if they are loose.

Q3 Leg is not fitting properly in the leg part...

A Adjust by expanding and narrowing the leg part.
• For short people: Raise the back rest part and elevate the leg part.

Q4 I am commuting to hospital, is it ok to use?

A Consult with the doctor in the hospital and then use. "Touch pressure stimulation" refers to the action that promotes the blood circulation for massage by relieving the stress in the muscles. According to the illness, there are risks of getting worse. Hence you should consult with the doctor.

Q5 Is it possible to use by removing the arm?

A No, it is not possible. Air supply and exhaust vent will be exposed, trash and dust will be accumulated and this will be the cause for failure.

Q6 Is it ok to spread the hot carpet under the chair?

A As there is a danger of flame, please stop. Heat generation of hot carpet pains the body and thereby it might generate flame.

Q7 Can the leg be lowered up to the storing position?

A When using foot air or foot roller massage, footrest does not lower to standby position. Turn 「OFF」 foot air or foot roller.

Q8 During massage, some creaky noises are made. Is it ok?

A There is nothing abnormal in the structure. Refer to "Trouble shooting".

Q9 Can this be used by people of height below 150 cm or above 185 cm?

A Yes, you can use. During sensing, the shoulder position might not match even if you adjust the shoulder position and so proceed using the following methods.
• Short person: Raise the backrest and leg part.
• Tall person: Lower the backrest and leg part.

Q10 Arm is not reaching the arm unit. What to do?

A Raise the backrest and adjust the arm position

Q11 Will the shoulder and arm become red after shoulder/arm air massage?

A After usage, there might be traces of the massage. That's due to the massage. It will disappear in due course of time. And, while doing shoulder air massage, avoid clothes that will expose the shoulders.

Q12 Even if sensing is done, shoulder position is not matching.

A Sit comfortably, lean the face so that it rests in the backrest and after that do the sensing. This can be adjusted manually.

Q&A

Q13 It is difficult to feel the differences when change the intensity of foot roller.

A It sometimes is difficult to feel the differences of intensity as the intensity of foot roller is adjusted by the strength of pressing by the air of flaps of foot part.

Q15 If you do a foot stretch, sometimes there is a squeaky noise.

A Noise might be generated, but it is not a failure. In the structure, when the electric actuator is isolated from the leg, noise might be generated.

Q14 "Child lock" screen is displayed and remote control is not operable.

A Child lock is set. Press and hold "Emergency stop button" for approximately 3 seconds to unlock the child lock. Refer to "Setting up child lock" for more details.






Q16 The automatic course massage action is different from usual.

A Even on the same course, the timing of operation, the number of times of the air bulges the timing of knead ball movement may change depending on strength adjustment, the reclining motion, the pressure to the knead ball.

Q17 Explain the dimensions of the main unit.

A Please refer to the following diagram.

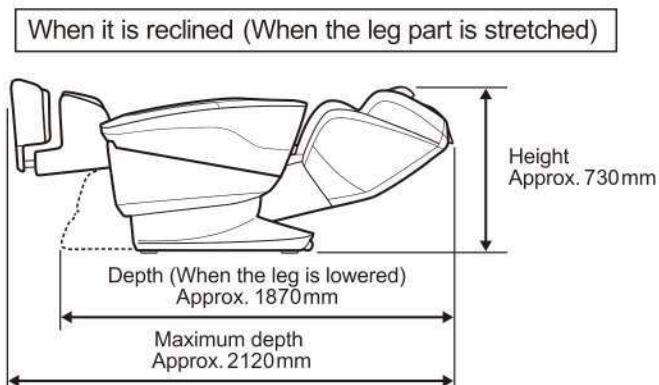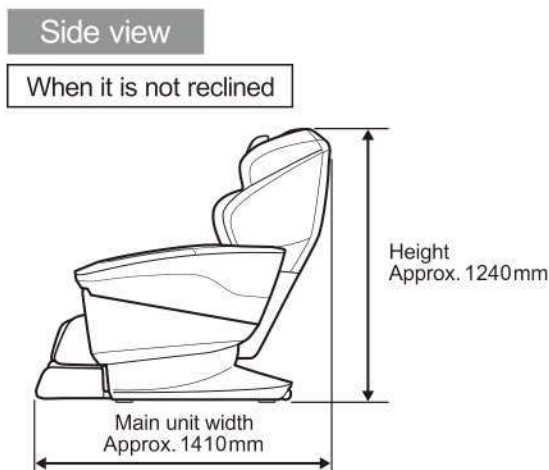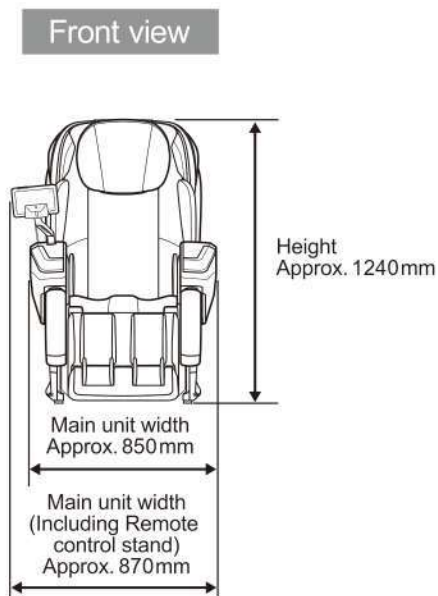

Trouble shooting

DANGER


Do not remodel and also do not analysis or repair by yourself, there are chances of injury due to fire (or) abnormal operation

You may encounter the following phenomena while in massage. As being due to the mechanical design, they have nothing to do with the product life

- A "clatter" noise occurs when the knead balls go up and down
- A "creak" noise of the gear and the motor occurs while in massage
- A friction noise occurs when the knead balls rub the cover cloth (Particularly while in the process of knead)
- A rattling noise occurs while in the "TAPPING" or "WAVELET" massage.
(Particularly when the massage moves from the shoulders to the back)
- In the "KNEAD", "TAPPING" or "WAVELET" massage, massaging speed may vary with the knead balls strength changed
- A noise becomes different when the massaging speed is changed
- A roaring noise of the motor occurs when load is given to the chair
- A "cuckoo" noise occurs while, in the Auto mode course, the knead balls are automatically adjusted to the back-and-forth position to have the chair fitting in with the user's body shape
- The compressor's noise and the air exhausting noise occur while in air-massage
- A noise occurs when the air bag is inflated
- A screaming noise occurs while in massage of the shoulder
- A grinding noise occurs when the backrest or seat are reclined (Squeak sound)
(The height of the knead balls between the left and right are different.
A mechanism is used to allow the two knead balls tapping alternatively. It occurs unavoidably and this is not the trouble)

Symptoms	Check points	Trouble shooting
The chair does not start-up	Is the power plug or the connector on the main unit side missing?	Plug the power plug into the outlet and insert the connector to the inlet.
	Is the power switch of the lower part behind the main body turned off	Turn the power switch "ON"
The chair stops halfway. (The remote controller does not work)	Is the backrest in touch with the main body or the like?	Move the chair away from the main body or the like. Turn the power switch of the lower part behind the main body OFF and ON.
	Is there any load given to the knead balls?(Should there be any load given to the knead balls, a safety mechanism works to stop all the functions)	Detach the body from the backrest for a moment, turn OFF and ON the power switch of the lower part behind the main body and once again operate from the beginning.
The backrest cannot be reclined	Is the power plug or the connector on the main unit side missing?	Plug the power plug into the outlet and insert the connector to the inlet.
	Is the backrest in touch with the wall or the like?	Move the chair away from the main body or the like
The leg part is not lowered to the retracting position?	Is the foot air or foot roller turned 「ON」 ?	Turn 「OFF」 the foot air or foot roller.

Trouble shooting

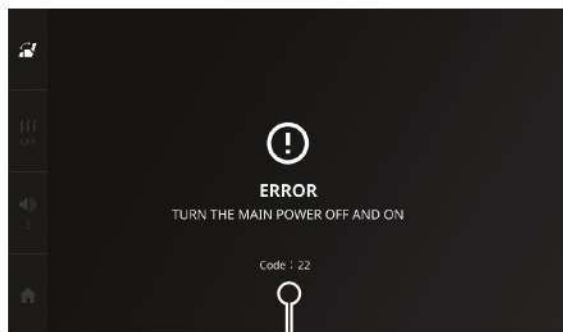

error code

The screen may display "ERROR: Turn the main power off and on". In this case, following the instruction, turn the power switch OFF and ON.

If the product does not operate normally even after taking the above measures, or if the same problem occurs frequently, turn the power switch of the main unit to "OFF", unplug the power plug from the outlet, and then contact the place of purchase or our customer support center. When doing so, please inform us of the error number displayed.

About BLUETOOTH connection

■ Unable to pair

- The distance between the massage chair and the BLUETOOTH device should be not more than 1 m.
- Restart the power of the massage chair and try again.
- After resetting pairing information, perform pairing again.
- Set the specifications of the BLUETOOTH device.
Please read the instructions of the BLUETOOTH device for the setting method.
- Please confirm the specifications of the BLUETOOTH device. The device must support the BLUETOOTH specification, A2DP and GATT, otherwise cannot be used.

■ Unable to connect

- Cannot connect through BLUETOOTH with more than one device at the same time.
 - When the massage chair is already connecting with a device through the BLUETOOTH, it cannot connect with other new devices. Check whether there are other connected devices.
 - The operation of BLUETOOTH devices (smartphone, etc.) varies depending on the device, so please read the instructions of your BLUETOOTH device.
- ※When the "🎵" icon of the remote control is white, it means that the chair is connecting with a BLUETOOTH of another device. After disconnecting the unused device, please whether the BLUETOOTH icon of the remote control is gray.

■ Connection taking a long time / Not automatically connected

- Please connect manually
- ※Smartphones will store connection information of the BLUETOOTH: for iOS go to settings → "My devices" of BLUETOOTH, and for Android go to settings → connected devices → previously connected devices, confirm whether "Massage Chair H22" is displayed and connect (the name may vary depending on the version).
- Please reset pairing information and perform pairing again.
- ※The chair can keep connection information of the BLUETOOTH of up to 5 connected devices.
It can pair more than 5 devices, but the memory can keep connection information on up to 5 devices only.
When information on 5 devices has been kept, if you want to keep the information of a new device and allow it to be connected automatically, you must use the pairing information reset function to discard the information that has been kept.

The operation of the BLUETOOTH (smartphone, etc.) varies depending on the device, so please read the instructions of your BLUETOOTH device.

About BLUETOOTH connection

■ No sound / The sound is too low

- Turn on the power of the massage chair and the remote control. After the course menu selection screen is displayed, turn on the power of the BLUETOOTH device.
- Turn up the volume of the BLUETOOTH device.
- Remove all obstacles between the massage chair and the BLUETOOTH device and shorten the distance between them.
- Switch the voice output of the BLUETOOTH device to the BLUETOOTH connection.

■ Sound break / Noise / Sound interruption

- Turn down the volume of the BLUETOOTH device.
- When playing music, if other BLUETOOTH devices are trying to connect or searching, there may be noise and sound interruption.
- Keep microwave oven, wireless LAN and other devices away from the massage chair.
- Keep the TV, radio and devices with built-in tuners away from the massage chair. These devices may affect it.
- Turn off the equalizer setting of the BLUETOOTH device.
- Remove all obstacles between the massage chair and the BLUETOOTH device, and shorten the distance between them.

The operation of the BLUETOOTH (smartphone, etc.) varies depending on the device, so please read the instructions of your BLUETOOTH device.

Checkpoints

WARNING

When using the chair after a while, read the user manual once again, check to make sure that it operates normally to use again. Failing which may cause injury or accident.


Inspection Important!
Be sure to make inspection for longer use,

Are there these symptoms?

- Chair emits scorching smell
- The power cord or the plug is overheated
- Electricity runs on or off with the power cord moved
- There are some other abnormalities

Discontinue use


For prevention of accident or trouble, turn "OFF" the power switch of main body, disconnect the power cord plug from power receptacle, and contact your retailer or our customer care.

Product Specifications

Product name			massage chair
Model number			JP-4000
Rating	Power supply (50-60Hz)		AC100-240V
	Rated time		30 min
	Power consumption(50-60Hz)		125W (Standby power : 0.3W)
	Motor power consumption		100W
	Electric heater power consumption		25W
Mecha(Knead balls) massage speed adjustment range	Knead		4-step adjustment (approx. 8-30 cycles/min)
	Tapping		4-step adjustment (approx. 250-650 cycles/min)
	Up and down		Approx. 1.0-5.4cm/second
Air pressure for air-massage			Approx. 45kPa
Safety structure			Class I
Auto-timer			Approx. 7, 18, 30 min
Reclining angle	Seat back		Approx. 117°-164° min
	Footrest	When air massage is on	Approx. 56°-84° min
		When air massage is off	Approx. 0°-84° min
Dimensions	Upright position		Approx. W850 x D1410 x H1240 (mm)
	Reclining position (Including remote control stand)		Approx. W870 x D2120 x H730 (mm)
Weight			Approx. 96kg
Upholstery			PVC leather, Polyester
Country of origin	Made in Japan		

Communication specification

Communication mode	comformity with BLUETOOTH standard specification Ver.4.1
Output	BLUETOOTH standard specification Power Class1.5
Maximum communication distance	within 10 m when in good sight
Frequency band used	2.4GHz frequency band (2.402GHz~2.480GHz)
Modulation method	GFSK $\pi/4$ DQPSK 8DPSK
Support BLUETOOTH specification	A2DP 1.3, GATT
Support code	SBC (44.1kHz)
Support content protection	SCMS-T

 **Bluetooth®** The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by FUJIIRYOKI is under license. Other trademarks and trade names are those of their respective owners.

Functions available in each mode

Function	Guest Mode	User Customized Mode
Customized function	—	○
Reset customized information	—	○
Reset pairing information	○	—
Release course function	—	△ (Execute course only)
Child safety lock function	○	—
Quick mode function	○	—

MEMO

FUJIIRYōKI

JP-4000