

# FUJIIRYŌKI

home use

# CYBER-RELAX

## P R O


### Massage Chair : MR8000

#### User manual

Category: machinery and appliances  
general designation: household electric massage chair



Intertek  
5023405

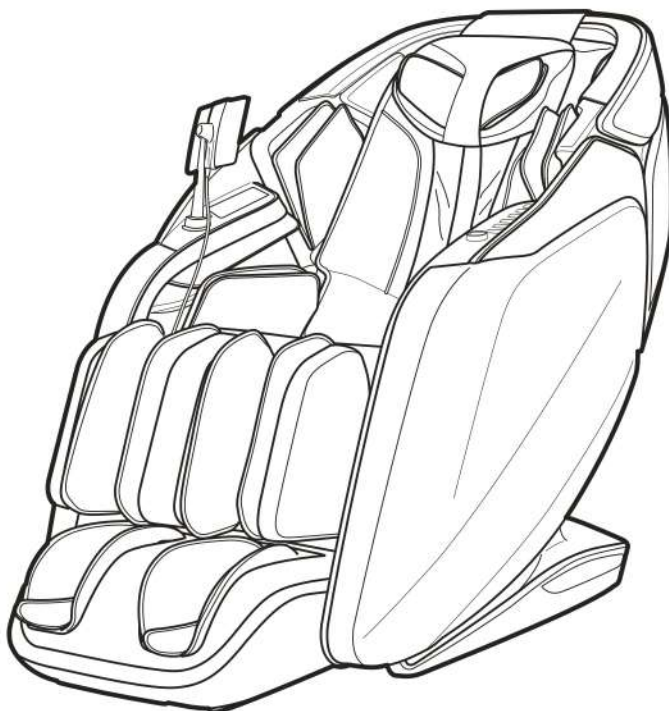

#### Purpose of use, effect-efficacy

Substitution of massage for home-use

- Thank you very much for purchasing Fujiiryoki massage chair.
- Carefully read this operation manual before use and only use as directed.
- Please read the safety precautions on pages 4-11 before use.
- Keep this operation manual where it will be readily available for future referral.
- Please recycle the outer packaging material where possible.

# Contents

---

## Before use

- IMPORTANTSAFETY INSTRUCTIONS .. 4
- Place massage chair ..... 12
- Assembly instruction ..... 14
- Before use ..... 17
- Names and functions of each part .. 20

## How to use

- Main menu ..... 24
- Various settings ..... 26
- Auto course ..... 27
- Manual course ..... 32
- Health check ..... 36
- Favorite ..... 37
- DIY course ..... 38
- Heater ..... 40
- Other functions ..... 41
- Ending the Massage ..... 42



## Maintenance

- Cleaning and Maintenance ..... 43
- Troubleshooting ..... 44
- Product Specification ..... 45





# IMPORTANT SAFETY INSTRUCTIONS



- Read these "Important Safety Instructions" before use and use this product properly
- These important safety instructions are prescribed to ensure correct usage of the product, and to prevent injury and damage to the user and other persons.
- Following are the display and contents.
- Please keep to the regulations as these are important instructions for your safety.

 <b>DANGER</b>	Improper usage may result in serious injury or death.
 <b>WARNING</b>	Improper usage may result in injury or damage to property.*

\*Property refers to houses, household belongings, domestic animals and pets.

	<p>⊘ Prohibited actions The prohibited action is illustrated inside the illustration (for example, the illustration on the left refers to "Prohibiting disassembling")</p>
	<p>● Directives, actions which are compulsory The prohibited action is illustrated inside the illustration (for example, the illustration on the left refers to "unplugging the power plug")</p>

- Always keep this operation manual where it will be readily available for referral.
- Attention: When disposing of this product and/or its accessories, do so in accordance with local laws and regulations. For details, please refer to your local authority.

 <b>DANGER</b>	
	<p>Because this equipment has a built-in heater and the surface becomes hot, person who are not sensitive to heat should pay attention to use. Pay full attention when it falls under the following.</p> <ul style="list-style-type: none"> <li>•elderly, ailing person, those who cannot operate by themselves</li> <li>•persons who took medicine that cause drowsiness (sleeping pills, cold medicine)</li> <li>•persons with heavy drinking, heavy tiredness •persons with hematogenous disorder (diabetes, etc.) •persons who receive a note from the doctor</li> <li>•people with weak temperature sense.</li> </ul> <p>There is a risk of low temperature burns, dehydration.</p>
	<p>The following persons must consult a medical physician before using this product.</p> <ul style="list-style-type: none"> <li>•Persons using a medical electronic device embedded in the body such as a pacemaker susceptible to the electromagnetic disturbances.</li> <li>•persons with malignant tumors. •persons with heart diseases. •persons who are pregnant or those immediately after childbirth. •persons who suffer from paresthesia related to peripheral circulatory disturbance due to diabetes etc.</li> <li>•persons with wounds on their skin. •persons in need of repose. •persons with Temperature sensory loss. •persons with body temperatures exceeding 38°C. (when strong acute inflammation symptoms, malaise, hills, blood pressure fluctuations are observed, when debilitated) •persons with herniated discs. •a person with tendovaginitis.</li> <li>•persons who suffer from osteoporosis, spinal column fractures, or acute pains.</li> <li>•persons with abnormalities in the spine, or those whose spines are bent.</li> <li>•persons who feel an abnormality on the body not prescribed above, persons in treatment by a doctor.</li> </ul>

# IMPORTANT SAFETY INSTRUCTIONS



## DANGER



If the chair stops moving or any abnormalities occur, unplug the power plug and contact the point of purchase for an  
Electrification, short circuits and fire may occur.

Take care of the movements of the knead balls when massaging around neck. Avoid excessive massaging or massaging the front of the neck.  
Accidents or injuries may occur.

When reclining or lowering the footrest, always check underneath and surroundings the footrest for people, pets, and other items.  
Accidents or injuries may occur.

When reclining or lowering the footrest, be careful not to get hands, fingers, feet, head caught underneath the footrest or backrest.  
●underneath the chair itself ●backrest, seat, clearance of armrest ●clearance of footrest, seat, armrest ●underneath the footrest, the back of footrest ●clearance between arm and armrest ●behind the backrest  
Accidents or injuries may occur.

Before use, check underneath the back pad to make sure that there are no rips or tears in the cover cloth of the seat back. (Should there be any rips or tears, no matter how small, immediately discontinue use, disconnect the power cord, and ask for repairs to be conducted).  
Continued use with rips or tears in the cloth of the seat back may cause electric shocks or injuries.

Always unplug this appliance from the electrical outlet immediately after using and before cleaning.



Not long term use of heater and same spot on the body  
If heat is used on the same spot for a long time, low temperature burns may occur even if the temperature is comparatively low in 40-60°C.

About low temperature burn

- Low temperature burn effect the deep part of the skin and shows red specks or blisters.
- In case red specks or blisters are found, consult a medical physician immediately.

The following people are strongly recommended not to use this product. Certain prohibited from receiving a massage by a medical physician.  
(for example, those suffering from thrombosis, severe aneurysm, acute varicose veins, various kinds of dermatitis and skin infections (including inflammations of subcutaneous tissue), etc.)

Do not remove, rip or cut the cover of the chair (backrest, footrest) on purpose.  
Never use the chair with the cover removed or torn as clothes and hair may get caught in the knead balls.

Do not use the chair other than on the designated voltage. Fire or electrification may occur.

Do not use the chair when the power cord or its plug is damaged, or when the receptacle is loose. Contact your point of purchase for repairs if the power cord or power plug are damaged in any way. Continued usage may result in electric shocks, shortage, or even fire.

Surely plug the power plug to the root and keep away from the dust. Doing so may cause damage, fire and electrification.

Do not allow unattended children or people unable to declare their own intentions to use this chair. Do not allow infants near the chair. Electrification or injuries may occur.

Do not allow children to play or get on the chair. Accidents or injuries may occur.

Do not connect or disconnect the power plug with wet hands. Electrification may occur.



# IMPORTANT SAFETY INSTRUCTIONS



## DANGER

	Never use pins or other metallic fasteners with this appliance.
	Carefully examine the covering before each use. Discard the appliance if the covering shows any sign of deterioration, such as checking, blistering, or cracking.
	Do not use or store in the bathrooms or places of high humidity or moisture. Electrification, fire, accidents, and moulding may occur.
	Never remodel or decompose/repair by yourself. Fire or injury due to abnormal action may occur.






## WARNING

	Usage of this product should be limited to 30 minutes for each use. Continual use on the same part of the body should be limited to 5 minutes. Prolonged use may damage muscles and nerves. (Only use for 30 minutes per day.)
	The following persons should consult a medical physician before using this product. ●persons whose muscles have become weak due to increasing age, and those who are of slim build. ●persons suffering from lower back pain caused by bones or internal organs. ●persons easily bruised, susceptible to sprains. ●persons who suffer from intense motion sickness. ●persons who have undergone internal organ or heart operations.
	If any rashes, reddening of the skin, itches or similar symptoms appear after using this product, immediately stop using and consult a physician. Accident and ill health may occur.
	An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts. To disconnect, turn all controls to the off position, then remove plug from outlet. This may result in accidents due to children's mischief.
	Use the chair on a level surface. Do not use outdoors. Damage or accidents may occur.
	Make sure operation buttons and timers are operating normally before use. Accidents or injury may occur.
	Read the operation manual once again and confirm the product is operating normally before using the chair after a prolonged period of non-use. Accidents or injury may occur.
	Confirm no items get caught in the chair (backrest, footrest, armrest) before use. Never drop or insert any object into any opening. Accidents or injury may occur.
	Do not place feet or hands on the footrest when the footrest is retracting. Accidents or injury may occur.
	When any physical abnormalities appear or are felt during operation, stop using the product immediately and consult a physician.
Sit down slowly after confirming the knead balls are located at the storage position. Accidents or injury may occur.	
Use weak stimulation massage when you start to use. Injury may occur.	

# IMPORTANT SAFETY INSTRUCTIONS

## **WARNING**

	Make sure the ground terminal is installed. Damages or electrification may occur when ground terminal is not installed.
	Turn the power switch OFF and unplug the power cord immediately in times of power shortages. When power is restored accidents may occur.
	Unplug the power plug by holding the actual power plug and not the cord. This may cause electrification, short circuits, or fire.
	Unplug the power plug when not using the chair. This may cause a fire due to insulation degradation by dust or humidity.
	When maintaining the chair always unplug the power cord. This may cause electrification or injury.
	Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
	Never drop or insert any object into any opening.
	To disconnect, turn all controls to the off position, than remove plug from outlet.
	The appliance is intended for household use.
	Temperatures sufficiently high to cause burns may occur regardless of the control setting. Do not use on an infant or invalid or on a sleeping or unconscious person. Do not use on sensitive skin or on a person with poor blood circulation. Check the skin in contact with the heated area of the appliance frequently to reduce the risk of blistering.
	Do Not Crush - Avoid sharp folds.
	Do not damage the power cord or power plug. ●Do not hurt ●Do not damage ●Do not process ●unreasonably bend or pull. ●Do not twist ●Do not tie ●Do not place heavy items on the power cord. ●Do not get the power cord caught, especially when moving the chair. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair. Continued usage may result in electric shocks, shortage, or even fire.
	Do not use immediately after eating or consuming alcohol. Nausea, illness, accidents or injury may occur.
	Do not close to stoves or other sources of fire, nor smoke whilst using the chair. Do not use on heated carpets or other heating equipment. Do not operate under blanket or pillow. Excessive heating can occur and cause fire, Electric shock, or injury to persons. Keep the cord away from heated surfaces. This may cause fire.
	Do not stand on the seat, or get on the seat back, footrest, arm or shoulder portion of the chair. The user or chair may rollover and injury or accidents may result.
	Do not stand or sit down on upper part of the backrest, the front of the seat or on the footrest when the chair is reclining. The user or chair may rollover and injury or accidents may result.
	Do not try to sit or get up from the chair when the chair is reclining or the footrest is elevated. The user or chair may rollover and injury or accidents may result.

# IMPORTANT SAFETY INSTRUCTIONS



## WARNING



Do not use accessories other than those which accompany the chair. Doing so may cause product malfunction.

Do not use the chair whilst wearing earrings, necklaces, scarves, or other ornaments. This may cause injury.

Do not use the chair whilst wearing hard objects on the head, such as hair ornaments. This may cause injury.

Do not use thigh or hip massage with hard objects in pockets. This may cause accidents or injury.

Do not use while naked. Direct massages on the naked body may damage the skin.

Do not use on the elbow, knee, head, abdomen areas. Do not get hands or feet caught in the knead balls. Injuries may occur.

Do not pull out the power cord, or turn off the power switch whilst using the chair. This may cause accidents or injury.

Do not sleep whilst using the chair. This may cause ill health or injury.

Do not move the chair while people or items are on the chair. Damage or injuries may occur.

Make sure no more than 1 person is on the chair at any one time. Doing so may result in damage to the chair or injury.

Do not wipe with benzine, paint thinner or alcohol, nor spray with any pharmaceutical sprays. This may cause fire or electrification.

Not to be used for purposes other than massage purposes. This may cause damage or accidents.

Do not use other therapeutic equipment whilst using this product. This may cause ill health or accidents.

Do not haul the chair itself or move with the casters on the floor where it easily gets scratches.

Do not overturn the chair or subject the chair to any strong shocks. Damage or injury may occur.

Do not operate where aerosol (spray) products are being used or where oxygen is being administered.

Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

Do not carry this appliance by supply cord or use cord as a handle.

Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.

Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.



# IMPORTANT SAFETY INSTRUCTIONS

## **WARNING**

Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.

Keep the cord away from heated surfaces.

Use heated surfaces carefully. May cause serious burns. Do not use over insensitive skin areas or in the presence of poor circulation. The unattended use of heat by children or incapacitated persons may be dangerous.

Keep children away from extended foot support, back support (or other similar parts).

Connect this appliance to a properly grounded outlet only. See Grounding Instructions.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.


This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Cleaning and user maintenance shall not be made by children without supervision

Please do not listen at high volume.

Listening at a high volume for a long time may damage your hearing.

When using the massage chair, the arm should not be placed on the wireless charger. The minimum distance between the arm and the wireless charger is 80mm.

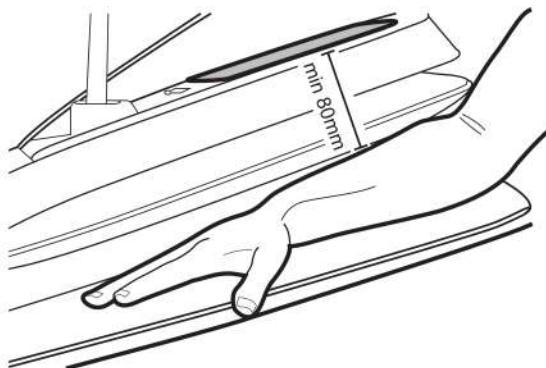

# IMPORTANT SAFETY INSTRUCTIONS

---

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using this appliance.

**DANGER** – To reduce the risk of electric shock:

- 1) Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- 2) Never use pins or other metallic fasteners with this appliance.
- 3) Carefully examine the covering before each use. Discard the appliance if the covering shows any sign of deterioration, such as checking, blistering, or cracking.
- 4) Keep Dry – Do not operate in a wet or moist condition.

**WARNING** – To reduce the risk of burns, fire, electric shock, or injury to persons:

- 1) An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- 2) Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- 3) Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.
- 4) Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 5) Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- 6) Do not carry this appliance by supply cord or use cord as a handle.
- 7) Keep the cord away from heated surfaces.
- 8) Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- 9) Never drop or insert any object into any opening.
- 10) Do not use outdoors.
- 11) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 12) To disconnect, turn all controls to the off position, then remove plug from outlet.
- 13) Temperatures sufficiently high to cause burns may occur regardless of the control setting. Do not use on an infant or invalid or on a sleeping or unconscious person. Do not use on insensitive skin or on a person with poor blood circulation. Check the skin in contact with the heated area of the appliance frequently to reduce the risk of blistering.

# IMPORTANT SAFETY INSTRUCTIONS

---

- 14) Do Not Crush – Avoid sharp folds.
- 15) Do not stand on or in appliance. Use only while seated.
- 16) Keep children away from extended foot support (or other similar parts).
- 17) Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
- 18) Do not use massager in close proximity to loose clothing or jewelry.
- 19) Keep long hair away from massager while in use.
- 20) This appliance is intended for household indoor use.


## GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**DANGER** – Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product

– if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-V circuit and has a grounding plug that looks like the plug illustrated in sketch A in below Figure. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

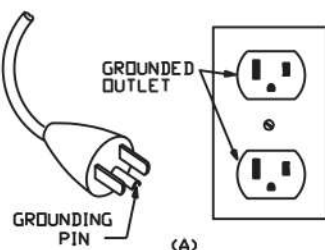


# Place massage chair

## Required space for installation

Make sure there is enough space so that the massage chair can be tilted, and the back end of the massage chair should be at least 4 inches away from the wall.

Do not expose the massage chair to direct sunlight or high-temperature environments(- such as in front of heating equipment).

For long-term use in designated locations, it is recommended to lay soft cushions. When laying the mat flat, The size should be enough to cover the area where the machine contacts the floor and the area where the feet contact the floor.

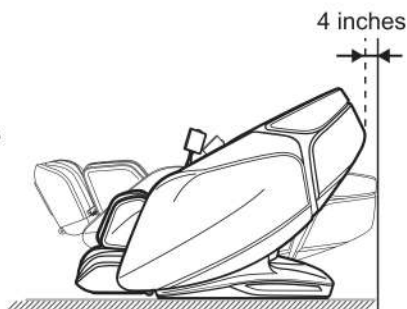


## How to lift the massage chair

Support the bottom sides of the stand, and rear side then lift and move. Since the machine is heavy, please be careful when carrying it to avoid straining your back.

( Lifting this machine must be carried by three or more persons.)

1. Please lift the massage chair to move it on fragile surfaces such as wooden floors.
2. When moving on a wooden floor, it is recommended to lift the chair to avoid damages on the floor by the casters. When lifting and moving the chair to a designated position and lowering it, Be careful to keep your hands and feet out of the way to avoid the severe injuries. Do not let go of the machine until it is completely in flat position to prevent any damages or injuries. It is recommended to place mats or other protectors on the floor.

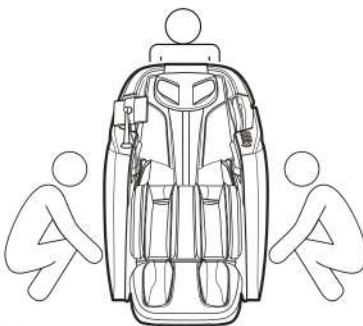



# Place massage chair

## How to move the massage chair using casters

Use the rear casters to move the massage chair. According to the method shown in the picture, tilt the chair downwards and backwards about 45° to move it.

Note: Do not press down too much to avoid product damage or injury to the carrying person by falling down the chair. (Carrying this machine using the casters must be carried by two or more persons.)




1. Before moving, you need to shut down the machine correctly, completely restore the backrest and legrest position, and then remove the power supply from the product.

2. The product must be left empty when moving. Do not allow people, pets or debris to stay on the product.

3. When using the casters to move the chair, Avoid obstacles exceeding 1inch in height or 1inch in width.

4. The casters are not designed for long-distance movement. For distances exceeding 166 feet, move the product slowly and steadily in short segments.

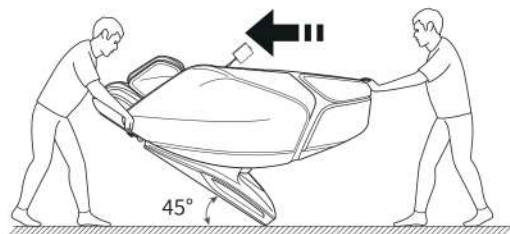


# Assembly instruction

## ■ Assembly instruction for armrest


**Step 1**

Insert the wiring harness assembly and air hose on the steel frame into the armrest plug and air hose plug, respectively, and join them securely.

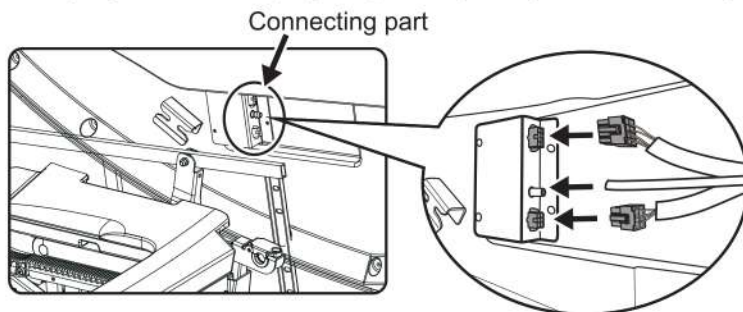

**Step 2**


Lift the front end of the armrest and tilt it, then place the rear end of the armrest with the roller into the side of the main body, and push the armrest backward and upward, and push the roller to the limit position of the slot.

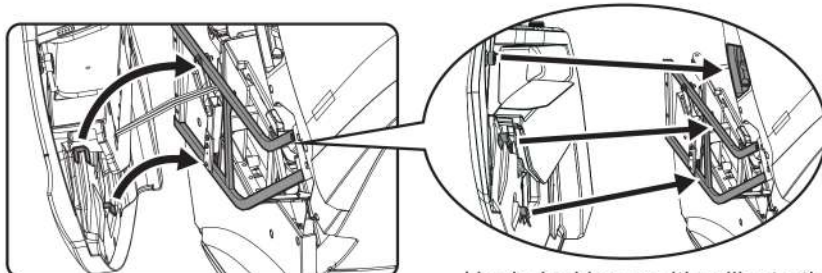

Hook docking position illustration

**Step 3**

Press the front end of the handrail down, and the hook position on the handrail is hung into the tubing of the steel frame assembly; the screw position on the front side of the handrail is aligned with the steel frame assembly to reveal that it is assembled in place; and Use 2 spacers and 2 hexagon socket head cap screws for locking.

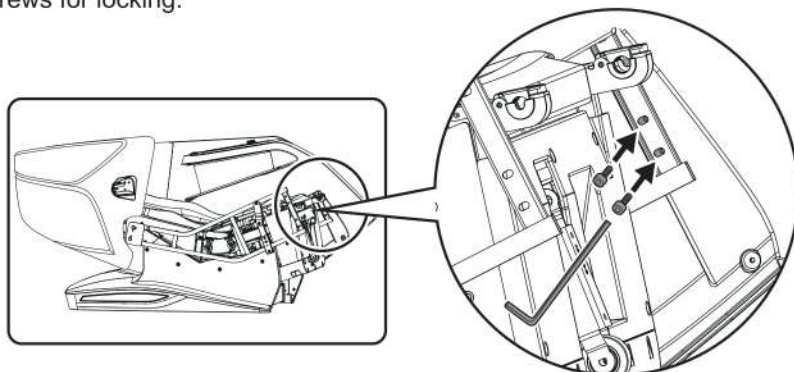


# Assembly instruction

## ■ Controller Assembly instruction

**Step 1**


Connect the cord for the control panel

\*Insert the terminal according to the groove position and secure the fitting.

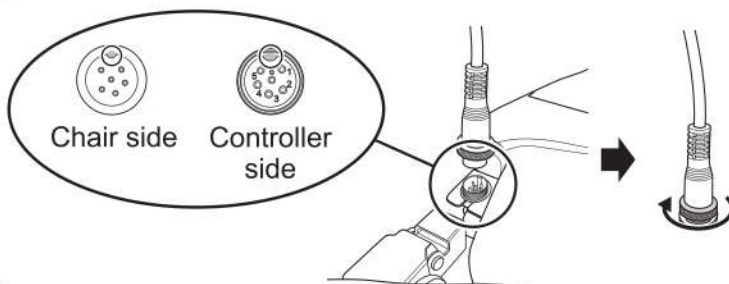

**Step 2**

Align the bracket with the front hole of the armrest (right) and fasten it with M5\*16 screws.

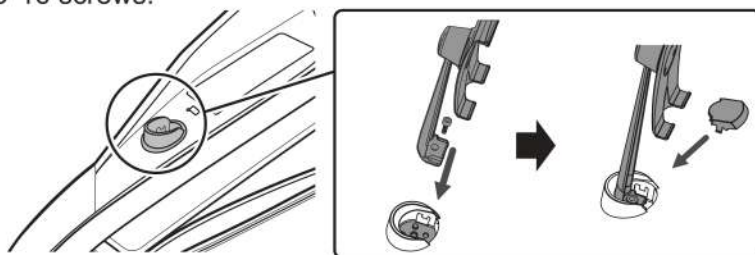

**Step 3**



After the entire bracket is installed, shake the bracket lightly to confirm whether it is firmly installed; the bracket installation is complete.



**Step 4**

Turn on the power switch and recline the chair.

(After powering on, the chair will automatically rise up.)

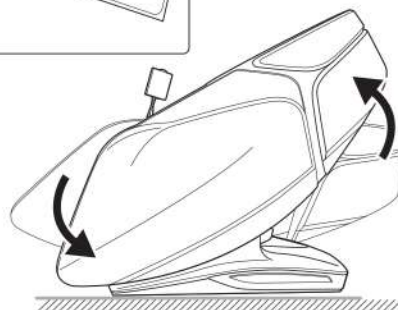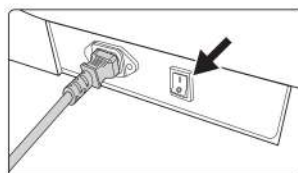


\*Align the bottom first, then fit the top.

# Assembly instruction

## ■Assembly instruction for Footrest

**Step 1**


Lift up the seat pad.

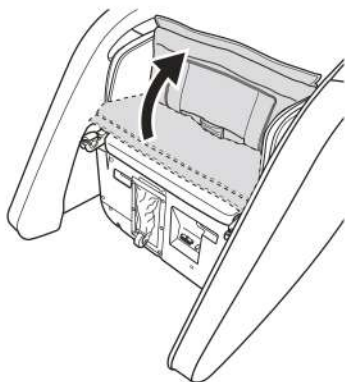

\*It will be easier to work with if you lift it up.

**Step 2**

Insert the wire and tube of the footrest into the front connector of the steel frame assembly.

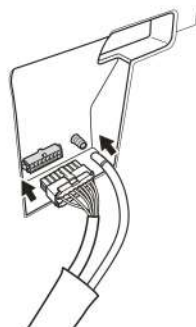


\*When connecting the connector, be careful not to hold the cord.

\*Insert firmly all the way to the base.

**Step 3**

After the wire connection is completed, open the fixing covers of the footrest on both sides of the steel frame assembly. Lift the footrest, put them into the slot, then flip the fixing cover down, fixing them with two M5\*16 screws.

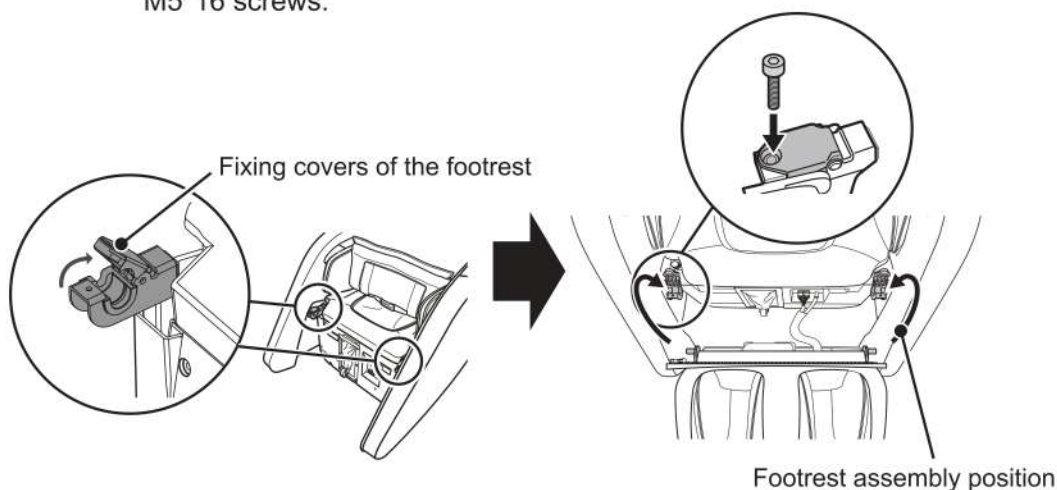




# Before use

---

## Check around

Make sure there are no people, pets, or other objects around the unit.

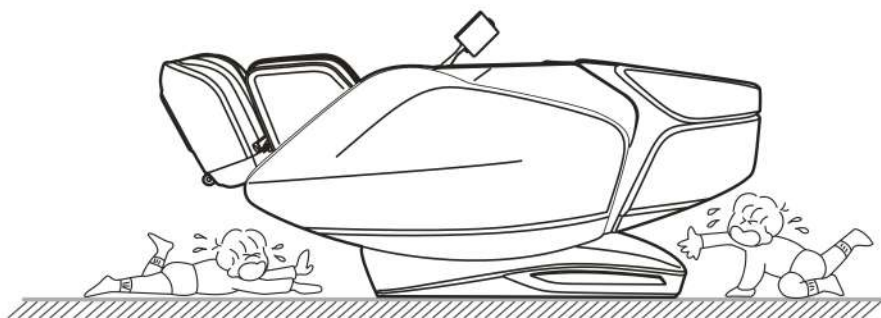

# Before use


## Anti-pinch safety: automatic anti-pinch function

### Footrest Anti-Pinch Sensor Instructions

This product has a anti-pinch function in the footrest. During massage, if the sensor detects a foreign object under the footrest, on the back of the footrest, or on the sole of the footrest, the anti-pinch function will be triggered, the massage chair will be temporarily suspended, and the controller will display a warning message. After removing the foreign object, press the "OK" button to resume the massage.



Footrest anti-pinch sensor

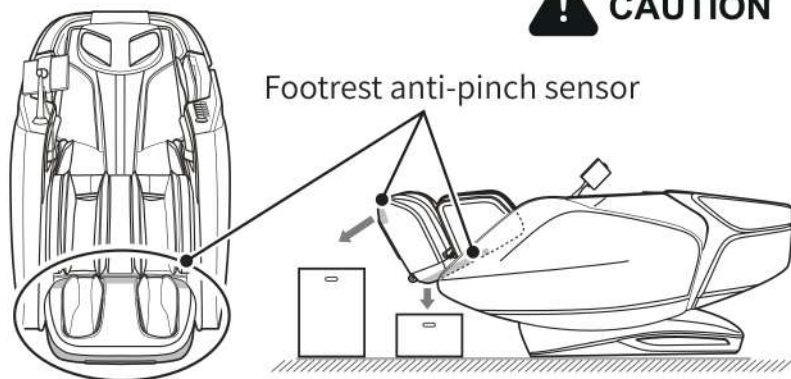


Footrest anti-pinch warning message

# Before use


## Turn on the power




**CAUTION**

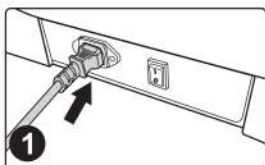

1  
Connect the power cord on the chair

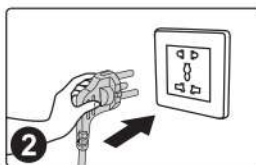

2  
Connect to power source

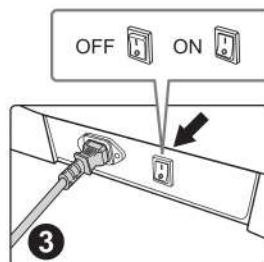

3  
Turn on the power switch ("I" position)


## **DANGER**

Please check whether the power cord and power plug are damaged before use.  
Please supply power to this product in accordance with the calibrated working power requirements of this product.  
It is strictly prohibited to use power supply other than the rated power supply of this product.  
It is strictly prohibited to connect various power conversion devices to power this product without authorization.


# Names and functions of each part

## Main unit

### Front side

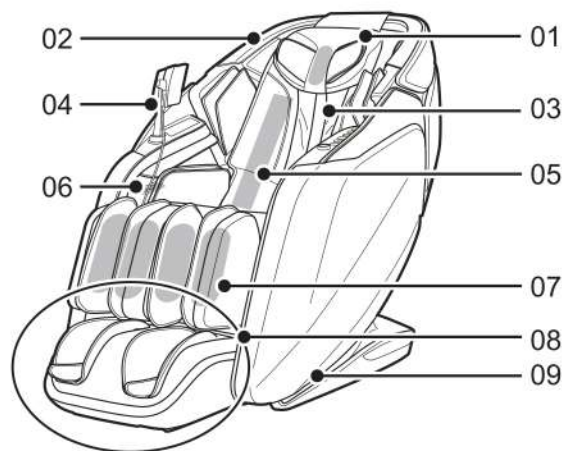

- 01. Pillow (Neck air massage / heating )
- 02. Head LED light
- 03. Back pad  
Lean back comfortably on backrest
- 04. Remote control panel  
Start massage
- 05. Back pad heater  
Built-in heater in back pad
- 06. Arm heater  
Heater built into the front of the arm section

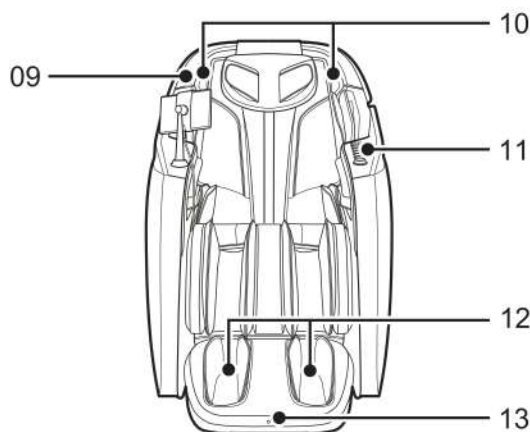

- 07. Calf heater  
Heater built into the side of the calf
- 08. Anti-pinch sensor
- 09. Ambient LED light
- 10. 3D digital speakers  
Enjoy the music with Bluetooth or built-in music
- 11. Quick Keys  
Quick access to various functions
- 12. Automatic leg length detection  
Automatically adjusts the length of the Footrest
- 13. LED light motion sensor

## Accessories



Seat cushion




Sole pad



# Names and functions of each part


## Main unit


### Back

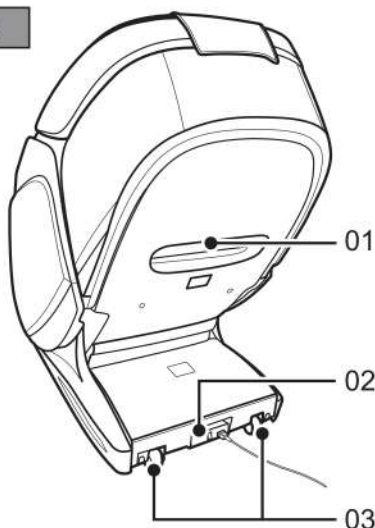

- 01.Handle  
Lifting massage chair
- 02.Power switch/power cord  
Power on/off
- 03.Carrying casters

### Massage area

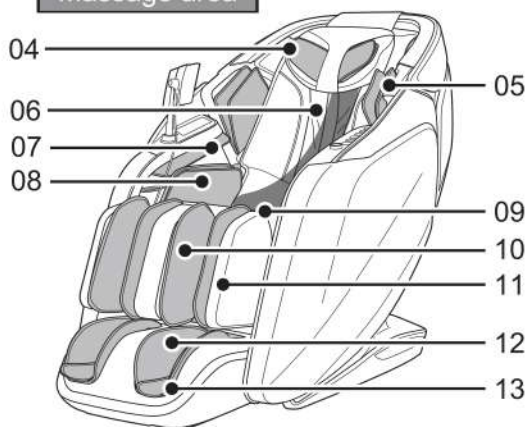

 Dual Massage Mechanism  
Operating Range

- 04.Neck  
Air massage for the neck
- 05.Shoulder  
Shoulder air massage
- 06.Back (upper massage unit)  
Massage the entire back from the neck to back.
- 07.Arms  
Air pressure massage for the arms
- 08.Seat side  
Air massage around the pelvis
- 09.Seat (lower massage unit)  
Massage the lower back and the back of the thighs.
- 10.Calf  
Air massage of the calves
- 11.Back of the calf  
Roller massage for the back of the calf
- 12.Foot  
Air massage of the foot
- 13.Foot sole  
Roller massage of the sole of the foot

# Names and functions of each part


## Remote control



01.Power button : Turns the power on and off

02.Control : Display/operation of individual items/content

## Charging ports

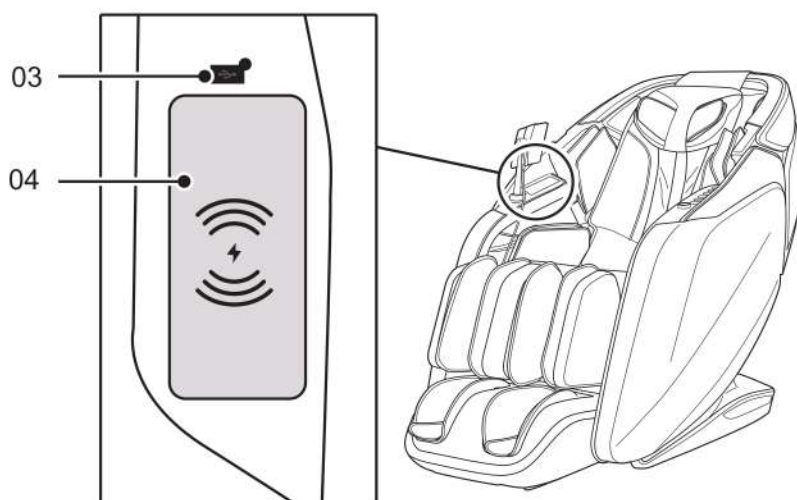


03.USB charging port

04.Wireless charger

# Names and functions of each part

## Quick Keys

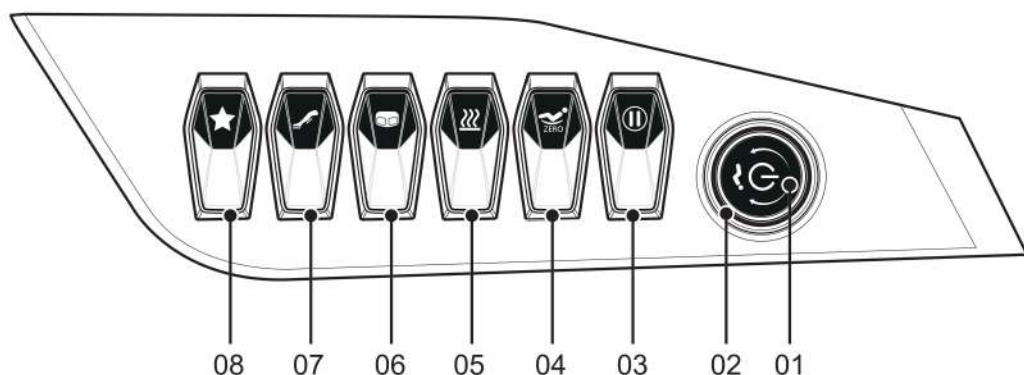

01.Power button : Turns the power on/off

02.Knob : adjusts the chair reclining angle



03.Pause : all movements pause/resume

04.Zero Gravity : Recline to the Zero Gravity position/ Upright (Restore)

05.Heater : Turns the all heater on/off

06.Neck air : Turns the neck air on/off (during massage)


07.Leg massage : turn on/off foot and calf roller massage (during massage)

08.Favorite : Select favorite auto courses

# Main menu

## ■Recommended page

○ You can quickly choose one of three recommended massage courses in your preference.

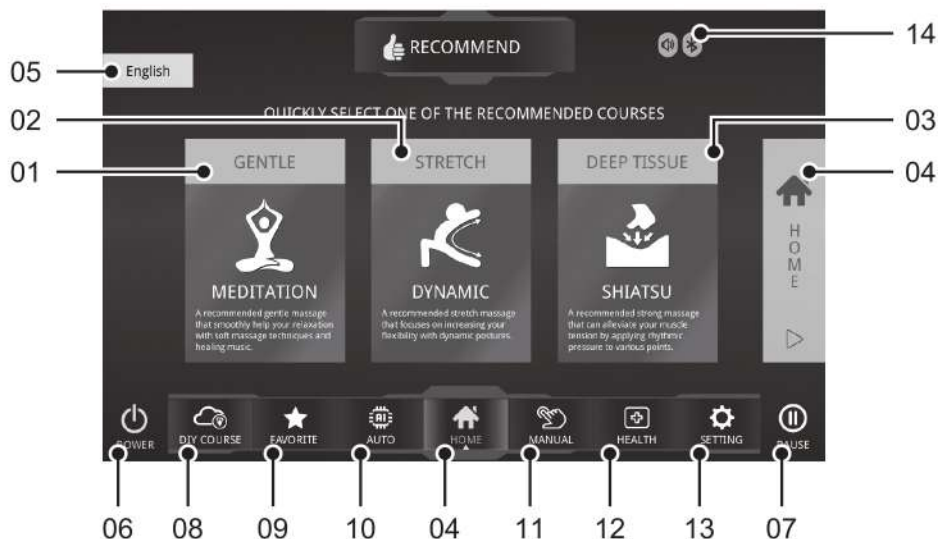

01.GENTLE : Starts the MEDITATION course.

02.STRETCH : Starts the DYNAMIC course

03.DEEP TISSUE : Starts the SHIATSU course.

04.HOME : Go to the home menu

05.Language selection bar : Selects the display language

06.POWER : Turns power on/off

07.PAUSE : Pause all operations/ resume

08.DIY COURSE : Create and run a user customized course

09.FAVORITE : Displays/selects the most frequently used courses in a ranking list

10.AUTO COURSE : Go to the automatic course selection

11.MANUAL : Go to the manual massage selection

12.HEALTH : Go to the health scan for generating a recommended massage course


13.SETTING : Go to the various settings

14.Bluetooth display : Displays the Bluetooth connection status.



# Main menu

## ■Home

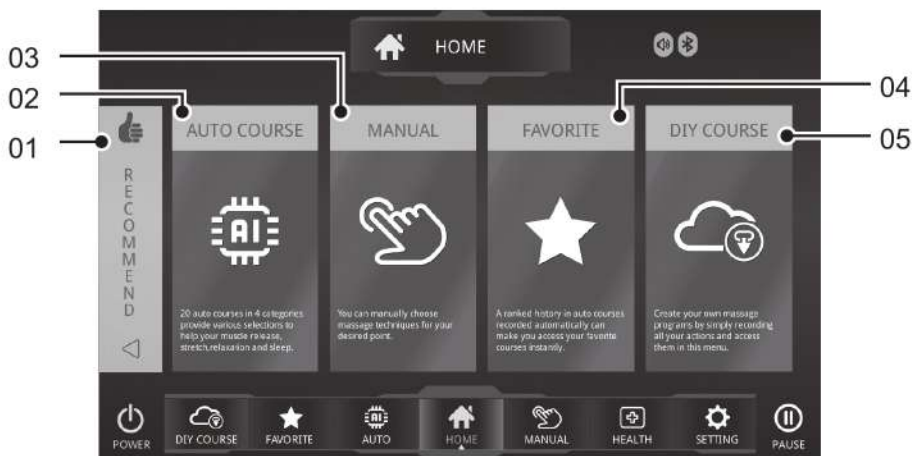

01.RECOMMEND : Go to the recommend menu

02.AUTO COURSE : Go to the automatic course selection.

03.MANUAL : Go to the manual massage selection

04.FAVORITE : Displays/selects the most frequently used courses  
in a ranking list

05.DIY COURSE : Create and run a user-customized courses

# Various settings

## ■Settings



01.Language : Display the language selection

02.Bluetooth setting : Select from ON / OFF / AUTO

03.Screen brightness adjustment : Brightness can be adjusted

04.Relaxation sound : Turn on/off, switch the background music

05.Auto Upright : Set the backrest to automatically stand up after the massage is finished.

06.LED : Turn on/off the Ambient LED light during massage.

07.LED motion sensor : Turn on/off the function of LED motion sensor.

When this function is on, the chair automatically lit up all the external LEDs for 15 seconds when user approaches front side of the chair.

08.Child lock : Set child lock

In the case of locking, all keys are disabled, and the method of unlocking is to press & hold the lock icon on the screen for about 5 seconds

## Bluetooth settings

There are three modes for Bluetooth settings.

Bluetooth OFF AUTO : Bluetooth function is off

Bluetooth ON AUTO : The chair device name can be searched by the user's device

Bluetooth ON AUTO : Chair automatically connecting to the last connected device when power on.

# How to use Auto course

## 1. Select the auto course



01.Selecting a category : Switching course categories

02.Auto course : Select an auto course

03.Course Description : Displays the description of the automatic course.

### Example of Auto course description:REJUVENATE



- Displays the detailed content of each course.

# How to use Auto course

---

## ■Auto course details

### ○REJUVENATE

SWEDISH : A full-body course that utilizes gentle, relaxing strokes and kneading techniques.

REVIVE : Provides a versatile massage experience, infusing vitality into the body through various techniques and leg stretching.

RESTORE : Relaxing with comprehensive massages that will release the lumbar pressure in the zero gravity position.

SHIATSU : Focusing on various acupressure techniques to release tension and promote circulation, including leg stretching.

ENERGIZE : Providing deep tissue massages for the back muscles, releasing tension with fast-paced techniques to boost vitality.

### ○STRETCH

THAI : Deep stretching massages inspired by traditional Thai techniques to promote flexibility in the waist and legs.

DYNAMIC : Flowing through continuous stretching for the back, legs, arms, and shoulders without prolonged holds.

STATIC : Slow, intense stretching to maintain muscle and joint relaxation for longer periods, improving overall flexibility.

DEEP : Body is fully reclined to enhance the stretching experience with 3D lumbar acupressure and traction.

RELAX : Seamlessly combines various stretching functions to provide a calm and comfortable stretching experience.

### ○FOCUS

NECK : Focusing on relieving neck fatigue.

UPPER BACK : Focusing on relieving back fatigue.

LOWER BACK : Focusing on relieving lower back fatigue.

LEGS : Focusing on relieving legs and feet.

GLUTES : Focusing on relieving glutes and hips

### ○RELAX

UNWIND : Soft touches and a variety of massage functions for comprehensive relaxation.

CALM : Soft touch techniques, relaxed stretching and massages creating a sense of comfort and calm.

DREAM : Inducing a comfortable sleep, and the gentle contraction and relaxation of soft massages with a relaxing music.

COMFORT : Offering meticulous techniques focus on comfortably calming all parts of the body in various positions.

MEDITATION : Focusing on gentle shiatsu massages in a weightless posture with calming music, creating a tranquil space for deep relaxation and focus.

# How to use Auto course

## 2. Auto detection of the back curve/shoulder position.

○ **Body scan** \* Please flip the pillow back during the body scan



Body scanning page




A message when the body scan failed

- Please ensure your back and head are firmly against the backrest while scanning.
- If the shoulder detection fails, please adjust the sitting position correctly and press "RESTART".
- If you press "SKIP", the auto detection will not be performed, and you can manually adjust the position of the shoulder.

○ **Adjust the shoulder position manually**



Shoulder position adjustment page

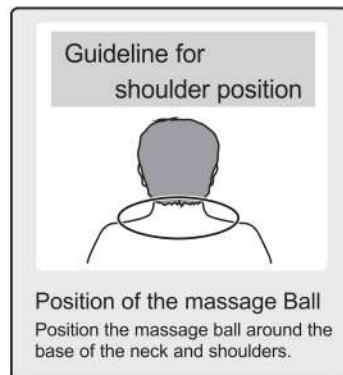


- If the shoulder position is not accurate after auto body scan, press ▼ ▲ to adjust.
- Press "CONFIRM" or wait 8 seconds without pressing any buttons to confirm the shoulder position and start the massage.



# How to use Auto course

## 3. Start the auto course

### ○Explanation of the page during auto course operation

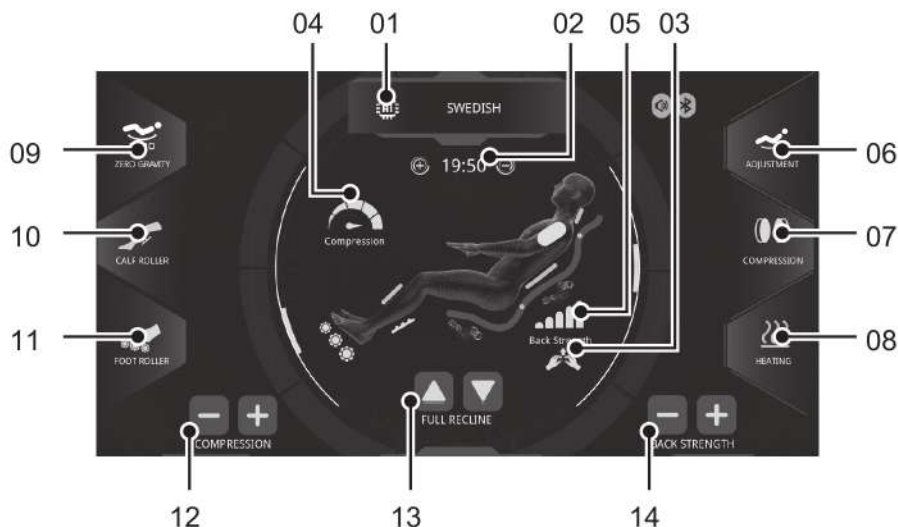


- 01.Display course name : Display the selected course
- 02.Timer : Displays the remaining massage time / Adjust the massage time  $\pm 5$  minutes (max. 30 minutes, min. 5 minutes)
- 03.Display massage technique : Display the current massage technique
- 04.Compression : Displays the current air pressure massage intensity
- 05.Back Strength : Displays the intensity of the upper massage unit
- 06.ADJUSTMENT : Adjust the angle of the backrest and calf separately
- 07.COMPRESSION (Setting) : Select the air massage regions
- 08.HEATER : Turn on/off various heating areas
- 09.ZERO GRAVITY : Enter zero gravity position/ Upright position
- 10.CALF ROLLER : Turn on/off the calf rollers
- 11.FOOT ROLLER : Turn on/off the foot rollers
- 12.COMPRESSION (Intensity) : Adjusts the intensity of all airbags
- 13.FULL RECLINE : Adjusts the overall angle of the backrest and footrest up/down.
- 14.BACK STRENGTH : Adjusts the intensity of the upper massage unit

# How to use Auto course

## ■ Various adjustment pages

### ○ Individual part adjustment

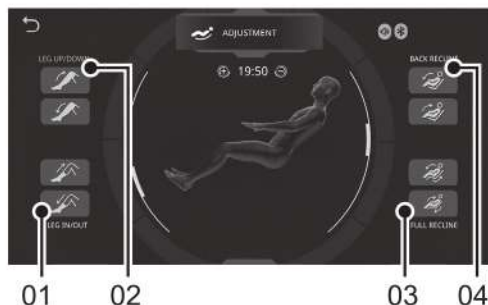

- 01.LEG IN/OUT : Adjusts the length of the leg
- 02.LEG UP/DOWN : Adjust the angle of the legs
- 03.FULL RECLINE : Adjust the entire chair angles at once
- 04.BACK RECLINE : Adjusts the backrest angle

### ○ Air massage settings page



- 05.Individual airbags : Turn on/off individual airbags
- 06.FULL BODY : Turn on/off all airbags

### ○ Heater setting page



- 07.Individual heaters : Turn on/off each heaters separately
- 08.ALL : Turn on/off all heaters

# How to use Manual course

## 1. Auto detection of the back curve/shoulder position

○ **Body scan** \* Please flip the pillow back during the body scan



Body scanning page




A message when the body scan failed

- Please ensure your back and head are firmly against the backrest while scanning.
- If the shoulder detection fails, please adjust the sitting position correctly and press "RESTART".
- If you press "SKIP", the auto detection will not be performed, and you can manually adjust the position of the shoulder.

### ○ Adjust the shoulder position manually



Shoulder position adjustment page

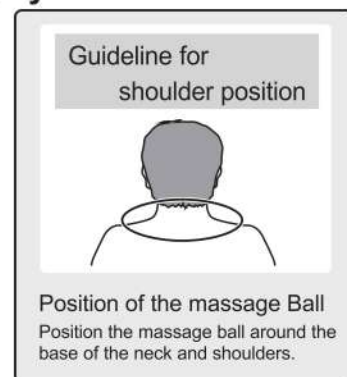

- If the shoulder position is not accurate after auto body scan, press ▼ ▲ to adjust.
- Press "CONFIRM" or wait 8 seconds without pressing any buttons to confirm the shoulder position and start the massage.

# How to use Manual course

## 2. Select your preferred message technique

### ○Select the upper message unit technique



01.Switch between upper and lower message unit

02.BACK STRENGTH : 5 levels

03.HAND SPEED : 5 levels

04.HAND WIDTH : 5 levels of adjustable massage ball width  
(Only subject to the tapping / rolling techniques)

05.HAND POSITION : selectable message range, Spot / Partial / Whole

06.Message technique selection : Stop and 19 message techniques are selectable

07.Mix : Up to 4 message techniques can be combined in the order of your choice to create the ideal message experience. Each technique lasts approximately 40 seconds before switching to the next one. You can rearrange the order of the mixed techniques to suit your preference.

### ○Select the message technique of the lower message unit



08.Back button : Go to message operation screen.

09.HAND SPEED : 5 levels

10.HAND WIDTH : 5 levels

11.HAND POSITION : Only spot is available for lower message unit

12.Message technique selection: Stop and 10 message techniques are selectable.

13.Mix: Up to 4 message techniques can be combined in the order of your choice to create the ideal message experience. Each technique lasts approximately 40 seconds before switching to the next one. You can rearrange the order of the mixed techniques to suit your preference.

※Tap again a selected technique from the message technique selection area (06/12)  
Adding the same technique into the Mix section.


※Tap again a selected technique from the selected Mix area (07/13) : Removing the selected technique.



# How to use Manual course

## 3. Start manual course

### ○Manual course operation screen

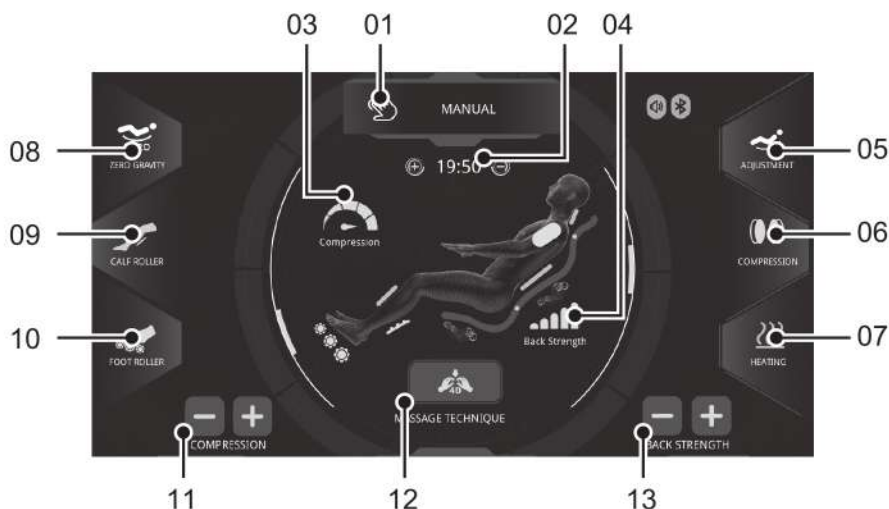

01.Display course : Display the selected course

02.Timer : Displays the remaining massage time /  $\pm 5$  minutes Adjust the massage time (Max. 30 minutes, Min. 5 minutes)

03.Compression : Shows the current air pressure intensity of the massage

04.Back strength : Displays the intensity of the upper massage unit

05.ADJUSTMENT : Adjust the angle of the backrest and calf separately

06.COMPRESSION (Setting) : Select the air massage regions

07.HEATER : Turn on/off various heating area

08.ZERO GRAVITY : Enter zero gravity position / upright position.

09.CALF ROLLER : Turn on / off calf rollers

10.FOOT ROLLER : Turn on / off foot rollers

11.COMPRESSION (Intensity) : Adjust the intensity of all airbags

12.MASSAGE TECHNIQUE : Displays the current massage technique of the upper massage unit / switch massage technique.Tap to switch massage techniques

13.BACK STRENGTH : Adjusts the intensity of the upper massage unit

# How to use Manual course

## List of massage techniques

### ●Upper massage unit

Massage techniques	Massage intensity	Massage speed	Massage width	Massage position
Stop	●	—	●	Spot
Knead Up	●	●	—	Spot / Partial / Whole
Knead Down	●	●	—	Spot / Partial / Whole
4D Knead Up	●	●	—	Spot / Partial / Whole
4D Knead Down	●	●	—	Spot / Partial / Whole
Tapping	●	●	●	Spot / Partial / Whole
4D Tapping	●	●	●	Spot / Partial / Whole
Wavelet	●	●	—	Spot / Partial / Whole
4D Wavelet	●	●	—	Spot / Partial / Whole
Rolling	●	●	●	Partial / Whole
Shiatsu	●	—	●	Spot
Stretch Shiatsu	●	—	●	Spot / Partial / Whole
Deep Shiatsu	●	—	●	Spot
Shoulder Grasp	●	●	—	Massage on shoulder position
3D Knead Up	●	●	—	Spot / Partial / Whole
3D Knead Down	●	●	—	Spot / Partial / Whole
3D Tapping	●	●	●	Spot / Partial / Whole
3D Wavelet	●	●	—	Spot / Partial / Whole
Palmar Knead Up	●	●	—	Spot / Partial / Whole
Palmar Knead Down	●	●	—	Spot / Partial / Whole

### ●Lower massage unit



Massage techniques	Massage intensity	Massage speed	Massage width	Massage position
Stop	—	—	●	Spot
Knead Up	—	●	—	
Knead Down	—	●	—	
4D Knead Up	—	●	—	
4D Knead Down	—	●	—	
Tapping	—	●	●	
4D Tapping	—	●	●	
Wavelet	—	●	—	
4D Wavelet	—	●	—	
Palmar Knead Up	—	●	—	
Palmar Knead Down	—	●	—	

# How to use Health check

## ■What is the health check?

- It detects the user's physical information and recommends an auto course that is suitable for the user's physical condition based on the scan results.

### 1.Finger scan

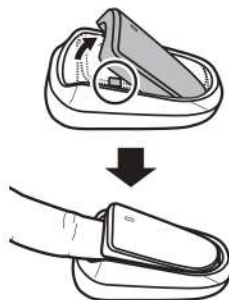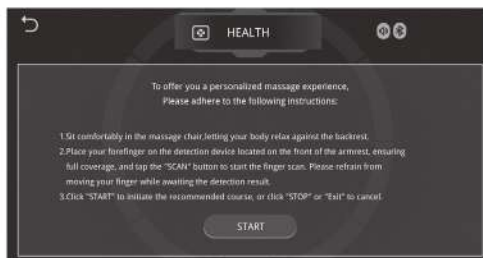

- Place your index finger of your left hand on the sensor at the front of the armrest, ensuring that it is fully covered. And tap the "SCAN" to start the finger scan. Wait for the result and then tap "START" to run the recommended course.

### 2.Please sit relaxed during the finger scan.



- Do not move your index finger during the scanning and sit relaxed in the massage chair.
- If a recommended message cannot be generated, please rescan your index finger.

### 3.After the scanning is completed, press "Start" to enter the massage course.




- Press "START" or wait for 8 seconds to start the recommended auto course.
- To cancel, press "EXIT".

# How to use Favorite

---

## ■About favorite

### ○Display the favorites page

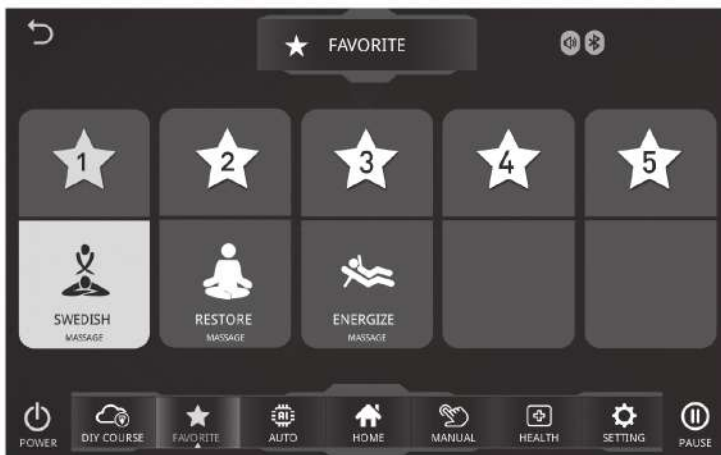

- Automatically displays a ranking of the five most frequently used auto courses.
- Select the favorite course and start the massage.



# How to use the DIY course

## ■What is the DIY course?

All massage actions and settings performed during the DIY recording can be saved for up to 4 DIY courses and loaded as the user-created massage course [ Items subject to recording ]

- Body scan information
- Time (up to 20 minutes)
- Calf/foot roller setting
- Massage movement
- Air massage setting
- Heater setting
- Recline angle


## 1. Press "RECORD"

- If a pop-up window appears indicating that there is already saved data, select "Yes" to overwrite, or "No" to cancel.



How to use the DIY course

Recording

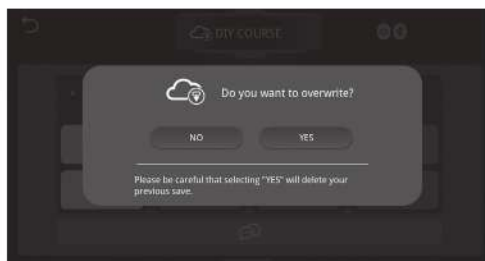


## 2. Perform a body scan

- For details on body scan, see page 29.

## 3. Select the massage action for each massage units

- After selecting, Tap the back button to enter the massage operation page.

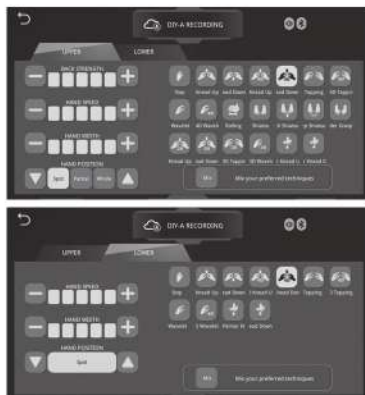

Recording status is displayed

# How to use the DIY course

## 4. Actions during Recording

- The various massage movements or settings are recorded in chronological order.
- The reclining angle is preset to the initial position. Adjust to the desired angle.
- To cancel or save during the recording, Tap "Time(● 00:00)" or other menu to see the pop-up option.
- To continue recording, press "KEEP RECORDING".
- To save the recording, press "SAVE".
- To cancel recording, press "CANCEL".



DIY recording page



Pop-up option during recording

## 5. Automatically save after recording ends



- After the recording time is over, it is automatically saved in the designated slot.
- After saving the DIY course data, the "RECORD" and "LOAD" buttons light up.

## 6. How to load the DIY course

- Tap a "LOAD" button to start the DIY course in a saved slot.
- ※DIY course only acts as recorded. No adjustments are allowed during the DIY course.




# How to use heater

## ■ Heater settings

- You can choose preferred heating positions
- When using heat without massage, the heater time can be set up maximum 30 minutes.




Heater settings page

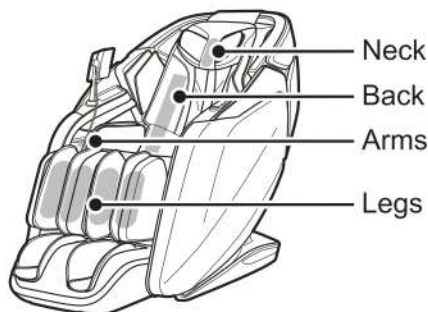


## ■ About the back/stomach heater

- The shawl has a heating function for the back / waist; when placed in front of the body, it can warm up the chest and abdomen.

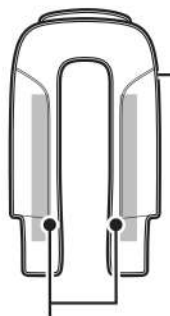

Heating area

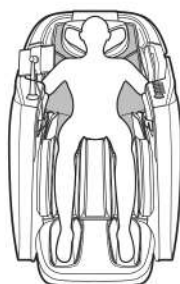

For the back



For the abdomen

## Precautions for using the heating shawl

### 1. Correct placement and use


When using the heater on the back, place it on both sides of the backrest to avoid the massage unit's path and use it after fixing its position with magnets.

### 2. Incorrect placement and use

When using the heater on the back, do not place the heater on the central massage area (middle of the backrest) or use it in a cross-over position. This could cause malfunctions or injuries.



**CAUTION**

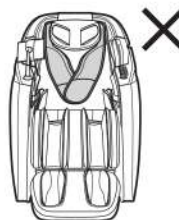

# Use of other functions

---

## ■Using the child lock

- The "Child Lock" function is designed to prevent children from operating the appliance by mistake.
- To unlock, press and hold the icon for 5 seconds.



The locked page is displayed


## ■Bluetooth connection method

1. Enter the main menu of the smart device, open "Settings," select the "Bluetooth" option, turn on "Bluetooth," and automatically "Search for new Bluetooth devices."
2. The device will search for the corresponding Bluetooth model (MR8000-XXXXXXX). Click the pairing button. If asked to pair with the device, select "Pair" to complete the pairing.
3. Open the music player of the smart device and select a song to play.


# Ending the Massage

---


1. During the massage, press the armrest quick switch key to immediately turn off all massage functions, reset the backrest mechanism, or let the massage timer reach its limit, automatically turning off all massage functions and resetting the backrest mechanism.
2. Cut off the power supply to the entire machine (refer to the illustration for cutting off the entire machine power). Close the power switch (refer to the illustration). Unplug the power plug (refer to the illustration). Unplug the product connection power cord.

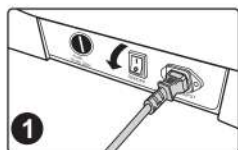

Turn off the power switch

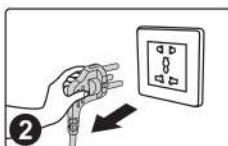

Unplug the power plug  
illustration

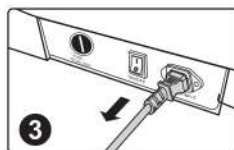

Unplug the product from  
the power cord



# Cleaning and Maintenance

---

## Clean PU leather and plastic parts

Wipe the skin with a soft dry cloth

■Do not use chemicals such as thinner, gasoline, etc. to clean the unit.

■When using commercially available leather care products (rags), please follow the instructions for use.

■If the PU leather is particularly dirty, wipe it in the following way:

① Immerse a soft cloth in water or hot water containing 3% to 5% neutral detergent, then thoroughly wring it out thoroughly.

② Use the above soft cloth to wipe the leather surface.

③ Wipe off the cleaning solution with a cloth soaked in clean water and thoroughly wrung soft cloth.

④ Wipe with a wrung soft cloth.

⑤ Let it air dry naturally.


■When it is difficult to remove stains, please immerse commercially available melamine foam in neutral detergent, and then wipe the machine with it.

■Do not use a hair dryer to dry the surface.

■As the color of the fabric will stain the surface of the PU leather, be careful when wiping the chair with denim and colored fabrics.

■Do not keep these parts in contact with plastic for a long time, as this will cause discoloration.

■PU leather may be discolored, so when using hair dye, please cover the touched part with a towel.

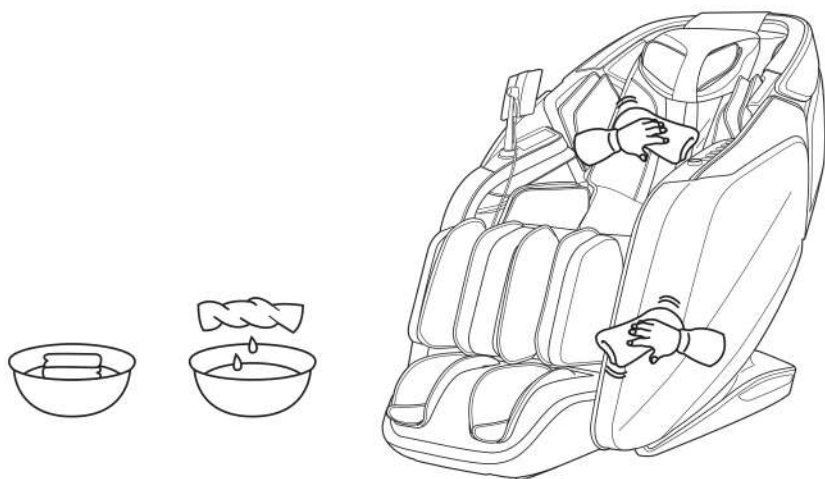

# Troubleshooting

---

Issue	When the calf mechanism or the backrest reaches a certain position, press the corresponding adjustment button and it will no longer change, and a continuous "beep, beep" sound will be emitted.
Solution	Due to product structure design and ergonomic requirements, this product has a limited protection design for the limit state of attitude adjustment. At the same time, a reminder sound will sound when the limit is reached.

Issue	The function does not work or some functions do not work after the machine is turned on.
Solution	After the machine is turned on by pressing the switch key, it is necessary to manually select an automatic massage course or other working state. If it is not operated, the machine will automatically shut down after 3 minutes. If the manual operation mode is selected, the functions that are not selected may be disabled, and the working mode needs to be manually set in the manual mode.

Issue	The machine makes a leather rubbing sound when adjusting its posture.
Solution	This product adopts high-grade anti-corrosion leather that meets environmental protection requirements. Due to the inherent characteristics of leather materials, there will be a normal slight noise when rubbing at the relative movement, which is a normal phenomenon. Note: If you hear fabric or leather tearing sound when the machine is running, please stop using it immediately and seek professional maintenance.

Issue	The massage rollers do not reach the position of the shoulders or neck.
Solution	If the head does not touch the headrest or the back does not touch the backrest, the shoulder position may be lower than the actual position during the body shape detection process. Sit in the deepest position of the chair, rest your head on the headrest, and then restart the operation from the beginning.

Issue	The machine is damaged. The power cord or power plug is abnormally heating.
Solution	To prevent accidents, please contact the authorized service center immediately.

For any uncertainties or questions regarding this product, feel free to contact the designated service personnel.

# Product Specifications

---

Product name	Massage Chair
Model name	MR8000
Power supply	AC110-120V 60Hz
Rated time	30 min
Power consumption	210W
Safety structure	Class I
Maximum user weight	300lb
Country of origin	Made in China

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment contains a certified radio transmission module:

FCC ID : 2AOC9-ZENBDM10A

ICID : 27631-ZENBDM10A

 **Bluetooth**® The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by FUJIIROYOKI is under license. Other trademarks and trade names are those of their respective owners.

**FUJIIRYōKI**

---